

83025

Generic 83025 Washing Machine Timer Replacement Part

Model: 83025 | Part Number: G83025, timerpart#5113299

1. INTRODUCTION

This document provides essential instructions for the safe and correct installation and use of the Generic 83025 Washing Machine Timer Replacement Part. This part is designed to replace the original timer in compatible washing machines. Please read this manual thoroughly before proceeding with any installation or repair work.

2. PACKAGE CONTENTS

- 1 x 83025 Washing Machine Timer Replacement Part (with 3 cables: Purple, Blue, Black)

3. COMPATIBILITY

This replacement part is compatible with washing machines requiring timer part number 83025. Before installation, it is crucial to verify that this part matches your original timer. Carefully compare the provided images and model numbers (83025, S-K25C, T timerpart#5113299) with your existing component to ensure proper fit and function. Incorrect part installation can lead to appliance malfunction or damage.

4. SAFETY PRECAUTIONS

- **Disconnect Power:** Always ensure the washing machine is unplugged from the electrical outlet before attempting any repair or installation. Failure to do so can result in electric shock or serious injury.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves and safety glasses, during installation.
- **Professional Assistance:** If you are unsure about any step of the installation process, consult a qualified appliance repair technician.
- **Handle with Care:** Electronic components can be delicate. Handle the timer carefully to avoid damage.

5. INSTALLATION INSTRUCTIONS (SETUP)

Follow these steps to replace the washing machine timer:

1. **Prepare the Appliance:** Ensure the washing machine is completely disconnected from its power source. Move the appliance to an area with adequate lighting and space for repair.
2. **Access the Timer:** Depending on your washing machine model, you may need to remove the control panel,

back panel, or other covers to access the existing timer. Refer to your washing machine's specific service manual for detailed access instructions.

3. **Disconnect Old Timer:** Carefully disconnect the electrical wires from the old timer. Note the position and color of each wire (Purple, Blue, Black) before removal. It is recommended to take a photograph for reference.
4. **Remove Old Timer:** Unscrew or unclip the old timer from its mounting bracket.
5. **Install New Timer:** Position the new 83025 timer in the same location as the old one. Secure it using the original screws or clips.
6. **Connect Wires:** Connect the three cables (Purple, Blue, Black) from the washing machine's harness to the corresponding terminals on the new timer. Ensure connections are secure and match the original configuration.



Image 1: The 83025 Washing Machine Timer showing its transparent casing, internal gears, and the three-wire connection point. The wires are purple, blue, and black, indicating their connection points.

7. **Reassemble Appliance:** Reattach any panels or covers that were removed.
8. **Test Functionality:** Plug the washing machine back into the electrical outlet. Perform a test cycle to ensure the new timer functions correctly.

6. OPERATION

The 83025 Washing Machine Timer controls the various cycles and functions of your washing machine. Once installed, its operation is integrated with the appliance's control panel. Refer to your washing machine's user manual for specific instructions on selecting wash cycles and operating the machine.

7. MAINTENANCE

This timer is a sealed unit and does not require routine maintenance. To ensure its longevity:

- Avoid exposing the washing machine to excessive moisture or extreme temperatures.
- Ensure all electrical connections remain secure.
- If the timer exhibits signs of malfunction, refer to the troubleshooting section or seek professional assistance.

8. TROUBLESHOOTING

If your washing machine is not functioning correctly after timer replacement, consider the following:

- **No Power:** Check if the washing machine is properly plugged in and if the circuit breaker has tripped.
- **Timer Not Advancing:** Ensure all wires are securely connected to the timer. Recheck the compatibility of the timer with your specific washing machine model.
- **Incorrect Cycle Operation:** Verify that the timer knob (if applicable) is correctly aligned and that the selected cycle is appropriate.
- **Loose Connections:** Re-inspect all wire connections to ensure they are tight and correctly matched (Purple to Purple, Blue to Blue, Black to Black, or as per your appliance's wiring diagram).

If issues persist, it is recommended to contact a qualified technician for diagnosis and repair.

9. SPECIFICATIONS

Part Number	G83025, timerpart#5113299
Model Number	83025
Manufacturer	Generic
Item Package Quantity	1
Cable Colors	Purple, Blue, Black

10. WARRANTY INFORMATION

No specific warranty information is provided with this product. Please refer to the retailer's return policy or contact the seller directly for details regarding warranty coverage, if any.

11. CUSTOMER SUPPORT

For technical assistance, installation queries, or troubleshooting beyond the scope of this manual, please contact the retailer or the manufacturer (Generic) through their official support channels. Always provide your product model number (83025) and part number (G83025 or timerpart#5113299) when seeking support.