

Vexilar V10Pro

Vexilar V10Pro Cordless Vacuum Cleaner User Manual

Model: V10Pro

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Vexilar V10Pro Cordless Vacuum Cleaner. Retain this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush, charging, or performing any maintenance.
- Use only Vexilar recommended attachments and replacement parts.
- Store the vacuum cleaner indoors in a cool, dry place.

2. PACKAGE CONTENTS

Verify that all components are present in your package:

- V10 Pro Main Unit
- Floor Brush
- Telescopic Extension Tube
- High-Efficiency Filter
- Battery
- Flat Nozzle

- Furniture Brush (2-in-1)
- User Manual
- Cleaning Tool
- Charger
- Wall Mount



Image: All components included in the Vexilar V10Pro package, including the main unit, various brushes, filters, and charging accessories.

3. PRODUCT OVERVIEW AND ASSEMBLY

3.1 Component Identification

Familiarize yourself with the main parts of your Vexilar V10Pro:

- **Main Unit:** Contains the motor, dustbin, and control panel.
- **Telescopic Tube:** Connects the main unit to the floor brush, adjustable for height.
- **Floor Brush:** Motorized brush head for cleaning floors and carpets. Features LED lights.
- **Battery Pack:** Removable and rechargeable lithium-ion battery.
- **Dustbin:** Transparent container for collected debris.
- **Filters:** Multi-stage filtration system including HEPA filter.
- **Accessories:** Flat nozzle, 2-in-1 furniture brush for versatile cleaning.

3.2 Assembly Steps

1. **Attach the Telescopic Tube:** Insert the telescopic tube into the main unit until it clicks securely.
2. **Connect the Floor Brush:** Attach the floor brush to the other end of the telescopic tube, ensuring it clicks into place.
3. **Install the Battery:** Slide the battery pack into the designated slot on the main unit until it locks.
4. **Charge the Battery:** Before first use, fully charge the battery. You can charge it while attached to the vacuum or separately. Connect the charger to the battery and a power outlet. The LED display will indicate charging status.



Image: The removable battery can be charged independently or while attached to the main unit.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Suction Modes

1. **Power On:** Press the power button on the main unit to start the vacuum.
2. **Select Suction Mode:** The V10Pro features multiple suction modes (e.g., ECO and Turbo). Use the mode selection button on the LED display to switch between them. ECO mode provides longer runtime for general cleaning, while Turbo mode offers maximum suction for stubborn dirt.
3. **LED Display:** The integrated LED display shows the current battery level and selected suction mode.



Image: The Vexilar V10Pro offers powerful suction up to 45,000 Pa for deep cleaning.



Image: Enjoy up to 45 minutes of continuous cleaning on a single charge, covering areas up to 120 square meters.

4.2 Using Attachments

The V10Pro comes with various attachments for different cleaning needs:

- **Floor Brush:** Ideal for both hard floors and carpets. The integrated green LED lights illuminate hidden dust and debris, ensuring thorough cleaning.
- **Flat Nozzle:** Perfect for narrow gaps, corners, and edges.
- **2-in-1 Furniture Brush:** Use the brush mode for delicate surfaces like upholstery and curtains, or slide the brush back for a wider nozzle to clean larger furniture areas.



Image: The high-precision green LED light reveals invisible dirt for superior cleaning performance.



Image: The V10Pro's versatile 6-in-1 design and multi-function accessories allow for comprehensive cleaning of various surfaces and areas.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Vexilar V10Pro.

5.1 Emptying the Dustbin

1. Ensure the vacuum is turned off.
2. Press the dustbin release button to detach it from the main unit.
3. Hold the dustbin over a trash can and press the bottom release latch to open the lid and empty the contents.
4. Close the dustbin lid and reattach it to the main unit until it clicks.

5.2 Cleaning the Filters

The V10Pro features a 5-stage cyclonic filtration system, including a HEPA filter. Clean filters regularly to maintain suction power.

1. Turn off the vacuum and remove the dustbin.
2. Twist and pull out the filter assembly from the dustbin.
3. Separate the HEPA filter and other filter components.
4. Tap off loose dirt from all filter parts. Rinse the washable filters under cold running water until the water runs clear.
Do not wash the HEPA filter unless specified in the product manual.
5. Allow all washed filter parts to air dry completely for at least 24 hours before reassembling and placing them back into the dustbin.



Image: The 5-stage cyclonic filtration system ensures 99.98% filtration efficiency, capturing particles as small as 0.1 μm .

5.3 Cleaning the Brush Roll

1. Ensure the vacuum is turned off and disconnected from the telescopic tube.
2. Locate the brush roll access latch on the bottom of the floor brush. Open it to remove the brush roll.
3. Remove any tangled hair, strings, or debris from the brush roll using the provided cleaning tool or scissors.
4. Reinsert the brush roll and secure the access latch.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power.	Dustbin is full, filters are clogged, or brush roll is obstructed.	Empty dustbin, clean filters, remove obstructions from brush roll.
Brush roll not spinning.	Obstruction in the brush roll or floor brush attachment not properly connected.	Remove any tangled debris from the brush roll. Reattach the floor brush securely.
Battery not charging.	Charger not properly connected or faulty.	Ensure charger is securely plugged into both the battery and a working power outlet. Contact customer support if issue persists.

7. SPECIFICATIONS

Feature	Detail
Brand	Vexilar
Model Name	V10pro
Special Features	Lightweight, Rechargeable, Cordless
Filter Type	HEPA Filter
Recommended Surfaces	Carpets, Hard Floors
Power Source	Battery Powered
Recommended Uses	Floors, Carpets, Car Interiors, Furniture
Color	Rosa (Rose Gold)
Noise Level	78 Decibels
Number of Speeds/Power Levels	2
Portable	Yes
Indoor/Outdoor Use	Indoor
Item Weight	2.3 Kilograms
Item Dimensions (LxWxH)	23L x 12l x 25H cm
Control Type	Manual Control
Voltage	29.6 Volts
Wattage	450 Watts
Battery Description	Lithium Ion
Battery Runtime	Up to 45 minutes

8. WARRANTY AND SUPPORT

Vexilar offers reliable customer assistance and product warranty.

- **Customer Service:** For any inquiries or assistance, please contact Vexilar customer service at service-it@vactidy.com. Support is available Monday to Friday.
- **Warranty:** The Vexilar V10Pro comes with a 24-month warranty. Please refer to your purchase documentation for specific terms and conditions.
- **Return Policy:** A 30-day money-back guarantee is offered.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question