

## Vivid Green VG001639

# Vivid Green Kitchen Machine VG001639 User Manual

Model: VG001639

## 1. INTRODUCTION

---

Welcome and thank you for choosing the Vivid Green Kitchen Machine. This appliance is designed to assist you with various culinary tasks, offering powerful performance and versatile functionality. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new kitchen machine. Please read it thoroughly before first use and keep it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

To ensure safe operation and prevent damage to the appliance or injury to yourself, please observe the following safety precautions:

- Read all instructions carefully before using the appliance.
- Do not immerse the motor unit in water or any other liquid. Clean only with a damp cloth.
- Always unplug the appliance from the power outlet before assembling, disassembling, cleaning, or when not in use.
- Keep hands, hair, clothing, as well as spatulas and other utensils, away from moving parts during operation to prevent injury.
- Supervise children closely when the appliance is in use or stored within their reach. This appliance is not intended for use by children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer support for assistance.
- Use only attachments and accessories recommended or sold by the manufacturer.

- Do not use the appliance outdoors.
- Ensure the appliance is placed on a stable, flat, and dry surface during operation.
- Never leave the appliance unattended while it is operating.
- Avoid contact with hot surfaces.

### 3. PRODUCT OVERVIEW

---

The Vivid Green Kitchen Machine VG001639 is a powerful 2000W appliance designed for various kitchen tasks such as mixing, kneading, and whipping. It features a 6.2-liter stainless steel mixing bowl and a smart display with timer functions.

#### 3.1 Main Components



*Figure 1: Vivid Green Kitchen Machine VG001639*

The main components include the motor unit, a 6.2-liter stainless steel mixing bowl, a tilt-head mechanism for easy access, a control panel with a digital display, and a speed dial. The robust construction ensures stability during operation.

#### 3.2 Included Accessories



*Figure 2: Tilt-head and Dishwasher-Safe Attachments*

Your kitchen machine comes with three essential, dishwasher-safe attachments:

- **Dough Hook:** Ideal for kneading heavy mixtures like bread dough, pizza dough, and pasta dough.
- **Flat Beater:** Suitable for medium-heavy mixtures such as cake batter, cookie dough, frostings, and mashed potatoes.
- **Whisk:** Designed for light mixtures like whipping cream, egg whites, and light batters.



Figure 3: Anti-slip Suction Cups and Splash Guard

A transparent splash guard is also included to prevent ingredients from splashing out of the bowl during operation, keeping your workspace clean.

## 4. SETUP

---

Follow these steps for the initial setup of your kitchen machine:

1. **Unpack:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
2. **Clean:** Before first use, wash the mixing bowl, splash guard, and all attachments (dough hook, flat beater, whisk) in warm soapy water, then rinse and dry thoroughly. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the motor unit on a clean, dry, stable, and level surface. Ensure there is enough space around the appliance for ventilation and operation. The machine is equipped with anti-slip silicone suction cups on its base for enhanced stability.
4. **Attach Mixing Bowl:** Place the stainless steel mixing bowl onto the base of the motor unit and turn it clockwise until it locks securely into place.
5. **Attach Accessory:** Lift the tilt-head by pushing the release lever. Select the desired attachment (dough hook, flat beater, or whisk) and insert it into the attachment shaft, turning it until it clicks into place. Lower the tilt-head until it locks.
6. **Attach Splash Guard:** If desired, place the splash guard over the mixing bowl, ensuring it fits snugly.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 General Operation

1. Ensure the appliance is correctly assembled and the tilt-head is locked down.
2. Add your ingredients to the mixing bowl.
3. Plug the power cord into a suitable electrical outlet.
4. Use the speed dial to select the desired speed. Start with a lower speed and gradually increase as needed to prevent splashing.
5. The digital display will show the current speed and function.
6. To stop the machine, turn the speed dial to the 'P' (Pulse) position and then to '0' (Off), or simply unplug the appliance.

## 5.2 Speed Settings Guide

The machine offers 6 speed settings and a pulse function for precise control:

Speed	Recommended Use	Attachment
1-2 (Low)	Kneading heavy dough (bread, pizza), mixing thick batters.	Dough Hook
3-4 (Medium)	Mixing cake batters, cookie dough, frostings, mashing potatoes.	Flat Beater
5-6 (High)	Whipping cream, egg whites, light batters, sauces.	Whisk
P (Pulse)	Short bursts of maximum power for quick mixing or incorporating ingredients.	All attachments

## 5.3 Using the Timer Function



Figure 4: Automatic Timer Function Display

The digital display includes an automatic timer function for precise control over your mixing tasks. Refer to the specific instructions in the full manual for setting and utilizing the timer and automatic programs.

## 5.4 Planetary Mixing Action

The Vivid Green Kitchen Machine utilizes a planetary mixing action, where the attachment rotates on its own axis while simultaneously orbiting around the inside of the bowl. This ensures thorough and even mixing of all ingredients, reaching all areas of the bowl.



Figure 5: Kitchen Machine in Operation with Whisk

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kitchen machine.

1. **Always unplug** the appliance before cleaning.
2. **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
3. **Mixing Bowl and Attachments:** The stainless steel mixing bowl, dough hook, flat beater, and whisk are dishwasher-safe for easy cleaning. Alternatively, they can be washed by hand in warm soapy water, then rinsed and dried thoroughly.
4. **Splash Guard:** The splash guard is also dishwasher-safe or can be hand-washed.
5. Ensure all parts are completely dry before reassembling or storing the appliance.

## 7. TROUBLESHOOTING

If you encounter any issues with your Vivid Green Kitchen Machine, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; tilt-head not locked.	Ensure power cord is securely plugged in. Test outlet with another appliance. Ensure tilt-head is fully lowered and locked.
Motor struggles or stops during operation.	Overloaded with ingredients; mixture too thick; incorrect speed setting.	Reduce the amount of ingredients. Add liquid if mixture is too thick. Use a lower speed for heavy mixtures.
Unusual noise during operation.	Attachment not properly secured; bowl not locked; foreign object in bowl.	Ensure attachment and bowl are securely locked. Unplug and check for any foreign objects.
Ingredients not mixing evenly.	Insufficient mixing time; incorrect attachment for mixture.	Increase mixing time. Ensure the correct attachment is used for the type of mixture.

If the problem persists after attempting these solutions, please contact customer support.



Figure 6: Quiet Operation of the Kitchen Machine

## 8. TECHNICAL SPECIFICATIONS

- **Model:** VG001639

- **Power:** 2000W
- **Voltage:** [Standard Voltage, e.g., 220-240V ~ 50/60Hz] (Not specified in input, placeholder)
- **Mixing Bowl Capacity:** 6.2 Liters
- **Dimensions (L x W x H):** 38.7 x 23.8 x 31.4 cm
- **Material:** Stainless Steel, Plastic
- **Number of Speeds:** 6 + Pulse Function
- **Special Features:** Automatic Timer, Planetary Mixing Action, Pulse Function, Stir Function, Turbo Feature
- **Color:** Anthracite

## 9. WARRANTY AND SUPPORT

---

Your Vivid Green Kitchen Machine is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and how to make a claim.

For technical support, spare parts, or any questions regarding your appliance, please contact Vivid Green customer service. Contact details can typically be found on our official website or on the product packaging.