

[Manuals.plus](#) /

› [Square House](#) /

› Square House Wooden Play Kitchen Set (Model 45293) Instruction Manual

Square House 45293

Square House Wooden Play Kitchen Set Instruction Manual

Model: 45293

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Age Recommendation:** This play kitchen is designed for children aged 3 years and older.
- **Adult Supervision:** Always ensure adult supervision during play, especially when using the water features.
- **Choking Hazard:** This product contains small parts (e.g., ice cubes, salt/pepper shakers) that may pose a choking hazard for children under 3 years. Keep these items out of reach of infants and toddlers.
- **Stability:** For enhanced safety, consider anchoring the play kitchen to a wall to prevent tipping, especially if children tend to climb or lean on furniture. Mounting hardware is not included.
- **Water Use:** Use only clean, fresh water in the sink. Do not use any other liquids. Empty the water reservoir after each play session to prevent mold or mildew growth.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Wooden Play Kitchen Structure
- Working Sink with Faucet
- Fridge Ice Dispenser
- Spoon and Spatula
- Cup
- Pan
- Salt and Pepper Shakers
- Two Ice Cubes
- Assembly Hardware (screws, dowels, etc.)

ASSEMBLY INSTRUCTIONS

Before You Begin

- Clear a spacious area for assembly.
- Unpack all components and lay them out. Check against the package contents list.
- You will need a Phillips head screwdriver for assembly.

Step-by-Step Assembly

Follow the detailed diagrams provided in the separate assembly guide. General steps include:

1. Attach the side panels to the base.
2. Install the back panel and internal shelves.
3. Secure the countertop and upper back panel.
4. Attach the microwave unit to the upper back panel.
5. Install the sink, ice dispenser, and oven doors. Ensure hinges are correctly aligned for smooth operation.
6. Attach the faucet, stove knobs, and accessory hooks.



Figure 1: Fully assembled Square House Wooden Play Kitchen Set.

OPERATING YOUR PLAY KITCHEN

Working Water Sink

The play kitchen features a realistic, battery-powered sink that circulates water. This provides an interactive and engaging experience for children.

1. **Install Batteries:** Locate the battery compartment (usually on the underside or back of the sink unit). Insert the required batteries (not included), ensuring correct polarity.
2. **Fill Reservoir:** Pour clean water into the sink basin. The water will collect in a hidden reservoir below.
3. **Activate Faucet:** Turn the faucet handle or press the designated button to activate the water pump. Water will flow from the faucet into the sink, creating a continuous loop.
4. **Empty After Use:** After play, turn off the faucet and empty any remaining water from the sink basin and reservoir to

prevent stagnation and maintain hygiene.

Your browser does not support the video tag.

Video: Demonstration of the battery-powered working sink feature.



Figure 2: A child actively using the functional water sink.

Ice Dispenser

The refrigerator door features an interactive ice dispenser for added realism.

1. **Load Ice Cubes:** Open the small door on the refrigerator. Place the provided ice cubes into the designated slot.
2. **Dispense Ice:** Place the included cup under the dispenser opening and press the lever. An ice cube will drop into the cup.



Figure 3: A child dispensing ice cubes from the refrigerator.

Stove Knobs and Oven

The stove features clickable knobs and an oven with an opening door and internal shelf.

- **Stove Knobs:** Turn the knobs on the stove to simulate cooking. They produce a satisfying clicking sound.
- **Oven Door:** Open the oven door to place play food inside. The oven includes a shelf for realistic play.



Figure 4: A child engaging with the stove and oven features.

Microwave

The microwave unit has an opening door and a simulated keypad.

- **Microwave Door:** The microwave door opens and closes, allowing children to place play food inside.
- **Keypad:** The printed keypad provides a realistic touch for imaginative play.



Figure 5: Close-up of the play kitchen's microwave unit.

Accessories

The play kitchen comes with several accessories to enhance the play experience.

- **Spatula and Spoon:** These wooden utensils can be hung on the provided hooks above the sink.
- **Salt and Pepper Shakers:** These shakers can be placed on the shelf and twisted for realistic sound effects.
- **Cup and Pan:** Use these for cooking and serving imaginary meals.



Figure 6: Included wooden utensils and salt/pepper shakers.

CARE AND MAINTENANCE

Proper care will ensure the longevity of your Square House Wooden Play Kitchen Set.

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners. Dry immediately.
- **Wood Care:** As this product is made of wood, avoid prolonged exposure to moisture or direct sunlight, which can cause warping or fading.
- **Water Features:** Regularly clean the sink basin and ensure the water reservoir is emptied and dried after each use to prevent mildew.
- **Storage:** Store the play kitchen in a dry, temperate environment when not in use.

TROUBLESHOOTING

Sink Not Pumping Water

- **Check Batteries:** Ensure fresh batteries are correctly installed in the sink's pump compartment.
- **Water Level:** Verify that there is sufficient water in the sink basin for the pump to draw from.
- **Clear Obstructions:** Check if the pump intake or faucet nozzle is blocked by debris.
- **Connections:** Ensure all internal connections for the pump are secure.

Doors Not Closing Properly

- **Hinge Alignment:** Inspect the hinges on the doors (oven, refrigerator, microwave) to ensure they are properly aligned and securely fastened.
- **Obstructions:** Check for any foreign objects or debris preventing the door from closing fully.
- **Assembly Check:** Re-verify that the corresponding panels were assembled correctly according to the instruction manual.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Square House
Model Number	45293
ASIN	B0G1688V4M
GTIN/UPC	611419452931
Dimensions (D x W x H)	11.25" x 23.5" x 33.6" (28.58 cm x 59.69 cm x 85.34 cm)
Item Weight	23 Pounds (10.43 kg)
Material Type	Wood
Color	Light Wood, Neutral Tones
Age Range	36 to 72 Months (3 to 6 years)
Included Components	Cup, Fridge Ice Dispenser, Pan, Spoon and Spatula, Working Sink

WARRANTY INFORMATION

Square House products are manufactured with high-quality materials and craftsmanship. This product is covered by a limited manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims. Specific warranty terms and duration may vary. For detailed warranty information, please refer to the product packaging or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your Square House Wooden Play Kitchen Set, please do not hesitate to contact our customer support team. Our representatives are available to help you.

Contact information can typically be found on the product packaging or on the official Square House website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0G1688V4M>

More documents and user manuals: <https://manuals.plus/>