

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Braun](#) /
- › [Braun 31S Series Shaver Foil and Cutter Replacement Instructions](#)

Braun 31S, 5000 Series, 6000 Series

Braun 31S Series Shaver Foil and Cutter Replacement Instructions

Guide to identifying your Braun shaver type number for correct replacement part selection.

INTRODUCTION

This instruction manual provides essential information for identifying the specific type number of your Braun electric shaver. Correct identification is crucial to ensure you select the appropriate Braun 31S Series replacement foil and cutter, maintaining optimal shaving performance and product longevity. Many Braun shaver parts appear similar, but compatibility is determined by the precise type number.

IDENTIFYING YOUR SHAVER TYPE NUMBER (SETUP FOR REPLACEMENT)

The type number is a four-digit code, typically starting with '5', that uniquely identifies your Braun shaver model. This number is more reliable for part compatibility than the series number (e.g., Series 9, Series 7) which can encompass multiple variations.

Method 1: Locating the Type Number on the Back of the Shaver (Under Trimmer)

For many Braun shaver models, the type number is located on the back of the shaver handle, often concealed beneath a retractable trimmer. To reveal this number:

1. Locate the pop-up trimmer on the back of your shaver.
2. Slide the trimmer upwards to extend it.
3. Look into the track or recess that becomes visible. The type number will be printed in small text within this area.



Figure 1: Example of a Braun shaver with the trimmer slid up, revealing the type number (e.g., Type 5793) in the exposed track.

Note: The text may be small and lightly imprinted. Good lighting and magnification may be necessary to read it clearly.

Method 2: Locating the Type Number Under the Shaving Head

On some newer Braun models, the type number is found by removing the shaving head. This area may accumulate shaving debris, so cleaning might be required for visibility.

1. Carefully remove the shaving head from the shaver body.
2. Inspect the area where the shaving head connects to the shaver. The type number will be printed there.

Note: Ensure the shaver is turned off before removing the shaving head. Clean any debris to clearly see the imprinted numbers.

Method 3: Locating the Type Number on the Bottom of the Shaver

For certain older Braun models, the type number is located on the very bottom of the shaver handle.

1. Turn the shaver upside down.
2. Look for small, imprinted text on the base of the shaver. This will include the type number.

Note: As with other locations, the text can be very small. Use adequate lighting and magnification if needed.

Video Guide: How to Identify Your Shaver Type Number

Your browser does not support the video tag.

Video 1: A visual guide demonstrating how to locate the type number on various Braun shaver models, including those with rear trimmers, front trimmers, and under the shaving head. This helps ensure you order the correct replacement parts.

SPECIFICATIONS

Item	Detail
Product Type	Replacement Foil and Cutter
Brand	Braun
Compatibility	Braun Contour, Flex Integral, Flex Integral System, Flex XP, and Flex Integral Ultra Speed Shavers. Fits Models: 360, 370, 380, 390, 390CC, 5000, 5005, 5010, 5015, 5311, 5312, 5313, 5314, 5315, 5316, 5317, 5410, 5414, 5415, 5416, 5417, 5427, 5441, 5442, 5443, 5444, 5446, 5466, 5478, 5503, 5504, 5505, 5510, 5515, 5520, 5525, 5550, 5600, 5610, 5611, 5612, 5613, 5614, 5625, 5720, 5721, 5722, 5723, 5724, 5735, 5736, 5737, 5738, 5770, 5774, 5775, 5776, 5790, 5873, 5874, 5875, 5876, 5877, 5878, 5884, 5885, 5886, 5887, 5888, 5895, 5897, 6012, 6015, 6312, 6510, 6512, 6515, 6518, 6520, 6521, 6522, 6525, 6550. Fits Types: 5465, 5466, 5467, 5468, 5476, 5477, 5478, 5485, 5503, 5504, 5505, 5506, 5507, 5703, 5704, 5705, 5706, 5719, 5720, 5721, 5722, 5723, 5724, 5735, 5737, 5738, 5739, 5761 Contour. Does NOT fit Freeglider models: 6690, 6680, 6610 or Series 3 types 5772, 5774, 5775.
Item Weight	4 ounces
Manufacturer	Braun

MAINTENANCE

Regular cleaning of your shaver, especially the area where the type number is located, can help maintain readability and ensure proper function. Refer to your shaver's specific user manual for detailed cleaning instructions.

TROUBLESHOOTING

This manual focuses on identifying your shaver's type number for part compatibility. For operational issues or specific shaver troubleshooting, please refer to the original user manual provided with your Braun shaver or visit the official Braun support website.

WARRANTY AND SUPPORT

Information regarding product warranty and customer support for Braun shavers and replacement parts can typically be found in the packaging of your original shaver or on the official Braun website. Please retain your proof of purchase for warranty claims.

