

[Manuals.plus](#) /

› [Winsing](#) /

› Winsing 10-inch Android 15 Tablet User Manual

Winsing Android Tablet 10 inch

Winsing 10-inch Android 15 Tablet User Manual

Model: Android Tablet 10 inch

INTRODUCTION

Thank you for choosing the Winsing 10-inch Android 15 Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly to ensure optimal performance and longevity of your tablet.

WHAT'S INCLUDED

Upon unboxing your Winsing Android Tablet, please verify that all items listed below are present:

- Winsing 10-inch Android Tablet
- USB Charging Cable
- Power Adapter
- User Manual (this document)

Your browser does not support the video tag.

Video: An unboxing and initial setup guide for the Winsing Android Tablet, demonstrating the included items and how to power on the device.

SETUP GUIDE

1. Initial Charge

Before first use, fully charge your Winsing Tablet. Connect the USB charging cable to the tablet's USB-C port and the power adapter, then plug the adapter into a wall outlet. The charging indicator will show progress.



Image: Wising Tablet connected to its charger, illustrating the charging process.

2. Powering On/Off

To power on, press and hold the Power ON/OFF button located on the side of the tablet until the screen lights up. To power off, press and hold the Power ON/OFF button, then select "Power off" from the options.

3. Initial Configuration

Follow the on-screen prompts to complete the initial setup. This includes selecting your language, connecting to a Wi-Fi network, and signing in with your Google account. A Google account is required to download apps from the Google Play Store.

4. Inserting a TF Card (Optional)

The tablet supports expandable storage up to 2TB via a TF card (not included). Locate the TF card slot on the side of the tablet and carefully insert the card until it clicks into place. Ensure the tablet is powered off before inserting or removing the TF card.

Navigation

- **Touch Gestures:** Use taps, swipes, and pinches to interact with the screen.
- **Home Screen:** Access your installed applications and widgets.
- **Notifications:** Swipe down from the top of the screen to view notifications and quick settings.

Volume Control

Use the Volume+ and Volume- buttons on the side of the tablet to adjust audio levels for media, calls, and notifications.

Connecting to Wi-Fi and Bluetooth

Navigate to **Settings > Network & internet** to manage Wi-Fi connections. For Bluetooth devices, go to **Settings > Connected devices > Bluetooth**.

Using the Camera

Open the Camera app to take photos and videos. The tablet features a 5MP front camera and a 13MP rear camera.

One Tablet for the Whole Family



Image: The Winsing Tablet displaying its camera interface, highlighting the front camera functionality.

Split Screen Functionality

The Android 15 operating system supports split-screen mode, allowing you to run two applications simultaneously. This is useful for multitasking, such as taking notes while watching a lecture or browsing the web while chatting.



Double Your Efficiency

Split screen allow students to take notes while attending classes on Zoom; Workers read documents while replying to emails; Leisure users respond to messages while browsing TikTok; Shoppers compare the prices of products on different shopping websites


Dual Screen

Image: Winsing Tablet demonstrating split-screen functionality, showing two applications running side-by-side.

MAINTENANCE

Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, as these can damage the device. For stubborn smudges, slightly dampen the cloth with water.

Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. Fully charge the device periodically if it will not be used for an extended period. The 6000mAh battery provides up to 12 hours of mixed use.

Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features and security enhancements. Go to **Settings > System > System update**

TROUBLESHOOTING

Problem	Solution
Tablet does not power on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, press the Reset button (if available, refer to device diagram).
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect.
Applications are slow or freezing.	Close unused applications. Clear app caches (Settings > Apps > [App Name] > Storage & cache). Restart the tablet.
Screen is unresponsive.	Perform a force restart by holding the power button for approximately 10-15 seconds.

SPECIFICATIONS

Feature	Detail
Brand	Winsing
Model Name	Android Tablet 10 inch
Item Model Number	9836b755-9f76-450b-9a3f-dc342de78015
Operating System	Android 15
Screen Size	10 Inches
Screen Resolution	1280 x 800 pixels (HD IPS)
Processor	Quad-Core, 2 GHz ARM
RAM	12GB (4GB physical + 8GB virtual)
Internal Storage	128 GB
Expandable Storage	Up to 2TB via TF Card (not included)
Battery Capacity	6000mAh
Average Battery Life	Up to 9-12 Hours (mixed use)
Wireless Connectivity	802.11a/b/g/n/ac Wi-Fi, Bluetooth
Cameras	5MP Front, 13MP Rear
Dimensions (LxWxH)	9.5 x 6.3 x 0.31 inches
Item Weight	1.85 pounds
Color	Gray Blue

WARRANTY AND SUPPORT

Winsing offers a 2-year protection plan for this tablet. For any product-related inquiries, technical assistance, or warranty claims, please contact Winsing customer support.

Contacting Support

You can typically reach customer support by:

- Visiting the official Winsing website for contact information.
- Referring to the contact details provided in your purchase documentation.
- For Amazon purchases, you can contact the seller directly through your order page.

Emotional Bond



Image: Illustration depicting customer support, symbolizing available assistance for product inquiries.

© 2026 Winsing. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question