

Tefal TT720AE0

Tefal Collection TT720AE0 2-Slice Toaster Instruction Manual

Model: TT720AE0

1. INTRODUCTION

Thank you for choosing the Tefal Collection TT720AE0 2-slice toaster. This appliance is designed for ease of use and durability, offering a retro stainless steel design with practical features for your daily toasting needs. Please read this instruction manual carefully before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not leave appliance unattended when in use.

3. PRODUCT OVERVIEW

The Tefal Collection TT720AE0 toaster features a retro stainless steel design with intuitive controls for easy operation.



Figure 1: Front view of the Tefal Collection TT720AE0 2-slice toaster.

Components:

1. **Toasting Slots:** Two wide slots designed to accommodate various bread thicknesses.
2. **High-Lift Lever:** Allows for easy removal of smaller toast pieces without burning fingers.
3. **Browning Control Dial:** Adjustable from 1 (lightest) to 8 (darkest) for desired toast shade.
4. **Stop Button:** Immediately cancels the toasting cycle.
5. **Defrost Button:** For toasting frozen bread.
6. **Reheat Button:** For warming up already toasted bread.
7. **Bagel Button:** Toasts the cut side of bagels while gently warming the other side.
8. **Removable Crumb Tray:** For easy cleaning of crumbs.

DOIGTS PROTÉGÉS

LEVIER DE SURÉLÉVATION



Figure 2: Detailed view of the control panel with browning dial and function buttons.

4. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the appliance.
3. **First Use (Burn-off):** Before toasting food for the first time, operate the toaster without bread for a few cycles at the highest browning setting (8). This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

Follow these steps for general toasting and specific functions:

1. **Insert Bread:** Place slices of bread into the toasting slots. The wide slots accommodate various bread types and thicknesses.
2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 8 (darkest).
3. **Start Toasting:** Press the high-lift lever down until it locks into place. The toaster will begin toasting.

4. **Cancel Toasting:** To stop toasting at any time, press the **Stop** button.
5. **Retrieve Toast:** Once the toasting cycle is complete, the toast will automatically pop up. Use the high-lift lever to raise the toast further for easy and safe retrieval, especially for smaller items.



Figure 3: Using the high-lift lever for safe toast retrieval.

Special Functions:

- **Defrost Function:** Insert frozen bread, press the lever down, then press the **Defrost** button. The indicator light will illuminate. This function automatically adjusts the toasting time for frozen items.
- **Reheat Function:** Insert already toasted bread, press the lever down, then press the **Reheat** button. The indicator light will illuminate. This function warms the toast without further browning.
- **Bagel Function:** Insert a sliced bagel with the cut side facing inwards, press the lever down, then press the **Bagel** button. The indicator light will illuminate. This function toasts the cut side and warms the outer side.

ARRÊT, DÉCONGÉLATION, RÉCHAUFFAGE, BAGEL



4 FONCTIONS AVEC DES VOYANTS LUMINEUX

Figure 4: Adjusting the browning level for desired toast shade.

Video Demonstration:

The following video demonstrates features of a Tefal toaster, including the high-lift lever and easy toast retrieval. While it may feature a slightly different model (Tefal Includeo), the functionality shown is applicable to the Tefal Collection TT720AE0.

Your browser does not support the video tag.

Video 1: Demonstration of Tefal toaster features, including high-lift lever.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Clean Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
4. **Do Not Immerse:** Never immerse the toaster in water or any other liquid.



Figure 5: Removing the crumb tray for easy cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure toaster is securely plugged in. Check power supply. Try a different outlet.
Bread is not toasting evenly.	Uneven bread thickness; heating elements may be dirty.	Ensure bread slices are of uniform thickness. Clean the toaster as per maintenance instructions.
Smoke coming from toaster.	Crumbs accumulated; food stuck in slots; first use burn-off.	Unplug immediately. Remove crumb tray and clean. If food is stuck, carefully remove it once cooled. Initial smoke on first use is normal.

Problem	Possible Cause	Solution
Toast is too light/dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher (darker) or lower (lighter) setting.

8. SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	TT720AE0
Power	850 Watts
Number of Slices	2
Browning Levels	8
Dimensions (D x W x H)	29.3P x 17.8l x 19.3H centimeters
Weight	1.55 Kilograms
Special Functions	Stop, Defrost, Reheat, Bagel
Material	Stainless Steel

9. WARRANTY AND SUPPORT

This Tefal Collection TT720AE0 toaster comes with a **2-year manufacturer's warranty**. For warranty claims, technical support, or spare parts, please contact your local Tefal customer service or refer to the official Tefal website. Spare parts are available in the EU for 15 years.