

[Manuals.plus](#) /

› [SINCEBORN](#) /

› SINCEBORN ER-X3+ Memory Foam 4-in-1 Electric Rollator Instruction Manual

SINCEBORN ER-X3

SINCEBORN ER-X3+ Memory Foam 4-in-1 Electric Rollator Instruction Manual

Model: ER-X3

Brand: SINCEBORN

PRODUCT OVERVIEW

This manual provides essential information for the safe and effective use of your SINCEBORN ER-X3+ Memory Foam 4-in-1 Electric Rollator. This versatile mobility aid functions as a foldable walker, transport wheelchair, electric wheelchair, and offers adaptive recovery training support.



ER-X3+B

With an additional battery. Double the battery life. No longer worry about range.



ER-X3+MF

For ultimate comfort, an extra thick memory foam backrest cushion and a thick memory foam seat cushion are included.

The SINCEBORN ER-X3+ Memory Foam 4-in-1 Electric Rollator offers versatile mobility solutions, transforming between a transport wheelchair, electric wheelchair, rollator walker, and adaptive recovery training device.

Key Features

- Versatile 4-in-1 functionality: foldable walker, transport wheelchair, electric wheelchair, and rollator.
- Lightweight and durable aluminum alloy frame.
- Foldable design for compact storage and travel.
- Padded seat and ergonomic handles for comfort.
- Power assist function for walking and pushing.
- Joystick controller with 5 adjustable speed levels and sensitivity settings.

- Anti-tip assist wheels for enhanced safety.
- Memory foam pad for comfort.
- Removable and washable armrest pads.
- 600W Magnesium Alloy rear wheel brushless motor.
- Up to 15.6 miles range on a single charge.
- Smart assist (C1-C3) for responsive assistance.
- Instant hill-conquering power button.
- 3-level adjustable push resistance for rehabilitation.

Your browser does not support the video tag.

This video showcases the various modes and features of the SINCEBORN ER-X3+ Memory Foam 4-in-1 Electric Rollator, demonstrating its versatility for driving, walking, and recovery.

SETUP AND UNFOLDING

Unfolding the Rollator

To unfold your rollator from its compact state, follow these steps:

1. Crouch down to access the folding mechanism.
2. Locate the small lever, typically maroon or ruby red, near the base of the seat.
3. Push down on this lever to release the lock.
4. Gently widen the frame of the rollator.
5. Once the frame is partially open, push down firmly on the seat until it locks into place.

Folding the Rollator for Storage

To fold the rollator for storage or transport:

1. If the padding is installed, lift the seat padding to reveal the pull tab underneath.
2. Pull up on the tab to release the seat mechanism.
3. Begin pulling the sides of the rollator inwards to collapse the frame.
4. Continue pushing the frame together until it is fully folded and locks into its compact position.

Quick-Folding Design



One-step folding



This image illustrates the quick-folding design of the rollator, showing a one-step folding process from an open to a compact state.



Resistance-01-03

Your Personal Physical Therapist on Wheels

Build strength safely with adjustable push resistance - perfect for post-surgery recovery!
Muscle-Building Magic: Turn Daily Walks into Rehab Sessions.



C1-C3 Smart Assist

Your Personal Tailwind on Demand

More Power Button: Instant Hill-Conquering Superpower.
Auto-Pace Technology: The system anticipates your needs before you feel the strain.

The image demonstrates the rollator's 'Adventure-Ready Mobility' with its one-second fold, fitting easily into a car trunk.

OPERATING INSTRUCTIONS

Joystick Controller

The joystick controller provides precise control over the electric wheelchair function.

Take Command & Precision Control



- 1 Power on/off
- 2 Speed adjustment
"+" Button: Speed up
"-" Button: Slow up
- 3 Horn
- 4 Joystick
- 5 Battery level
- 6 Speed level

Speed	+	5	4	3	2	1	-
		3.7	3.1	2.5	1.9	1.2	Miles/h

5 Adjustable Speed Levels

Joystick Controller Seed Sensitivity Settings

User setting mode:

Press "Gear+" and "Power" at the same time.

Displaying "U" means User,

indicating that it is currently in user setting mode.

- 1-1 Low Speed Sensitivity
- 1-2 Middle Speed Sensitivity
- 1-3 High Speed Sensitivity



This image displays the joystick controller with labels for its various functions, including power on/off, speed adjustment, horn, battery level, and speed level.

- **Power On/Off:** Press button (1) to power the unit on or off.
- **Speed Adjustment:** Use buttons (2) "+" to increase speed and "-" to decrease speed.
- **Horn:** Press button (3) for the horn.
- **Joystick:** Use the joystick (4) for directional control.
- **Battery Level:** Indicator (5) shows current battery charge.

- **Speed Level:** Indicator (6) displays the current speed setting.

Adjustable Speed Levels

The rollator features 5 adjustable speed levels, ranging from 1.2 to 3.7 miles per hour.

Take Command & Precision Control



- 1 Power on/off
- 2 Speed adjustment
"+" Button: Speed up
"-" Button: Slow up
- 3 Horn
- 4 Joystick
- 5 Battery level
- 6 Speed level

Speed	+	5	4	3	2	1	-
		3.7	3.1	2.5	1.9	1.2	Miles/h

5 Adjustable Speed Levels

Joystick Controller Seed Sensitivity Settings

User setting mode:

Press "Gear+" and "Power" at the same time.

Displaying "U" means User,

indicating that it is currently in user setting mode.

- 1-1 Low Speed Sensitivity
- 1-2 Middle Speed Sensitivity
- 1-3 High Speed Sensitivity



This image shows the digital display indicating the 5 adjustable speed levels of the rollator, from 1.2 mph to 3.7 mph.

Joystick Controller Sensitivity Settings

To adjust joystick sensitivity:

1. Enter user setting mode by pressing "Gear+" and "Power" simultaneously.
2. The display will show "U", indicating user mode.
3. Select sensitivity:
 - 1-1: Low Speed Sensitivity
 - 1-2: Middle Speed Sensitivity
 - 1-3: High Speed Sensitivity

Take Command & Precision Control



- 1 Power on/off
- 2 Speed adjustment
"+" Button: Speed up
"- " Button: Slow up
- 3 Horn
- 4 Joystick
- 5 Battery level
- 6 Speed level



5 Adjustable Speed Levels

Joystick Controller Seed Sensitivity Settings

User setting mode:

Press "Gear+" and "Power" at the same time.

Displaying "U" means User,

indicating that it is currently in user setting mode.

- 1-1 Low Speed Sensitivity
- 1-2 Middle Speed Sensitivity
- 1-3 High Speed Sensitivity



This image illustrates the process for adjusting the joystick controller's sensitivity settings, including entering user mode and selecting between low, middle, and high sensitivity options.

Power Assist for Walking


The power assist function helps with walking, reducing the effort required to push the rollator.



New Sensing Assist Power

No Need To Press Button

This image shows a man walking with the rollator, demonstrating the "New Sensing Assist Power" feature which provides assistance without needing to press a button.

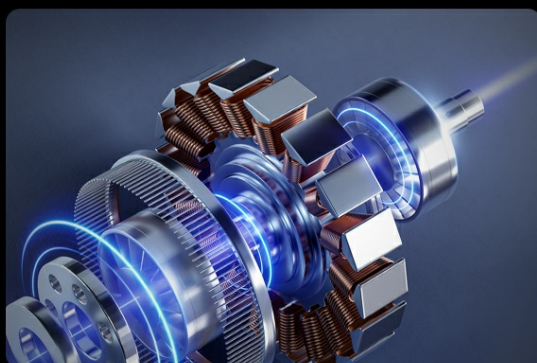

Magnesium Alloy Rear Wheel Brushless Motor

600W Silent Power: Hills Become Flat,
Distance Disappears.
Professional-grade motor
handles any terrain with confidence

This image explains the C1-C3 Smart Assist feature, which offers responsive assistance from a gentle nudge to turbo thrust, adapting to walking speed.

Hill-Climbing Assistance

For inclines, use the "More Power Button" to provide additional thrust.

More Power Button



*Make slopes flat
6°~8° Gradeability*



Across threshold



Give you stronger power

This image shows a finger pressing the "More Power Button" on the rollator's handle, indicating its use for overcoming inclines and thresholds.

Adventure-Ready Mobility

One-Second Fold, fits car trunks.



This image demonstrates the "More Power Button" in action, showing a man easily pushing a woman in the rollator up a ramp, highlighting its instant hill-conquering superpower.

Electric Wheelchair Mode

When seated, the joystick provides precision control for electric wheelchair operation.

Power Assist Breakthrough

C1-C3 Smart Assist:
From Gentle Nudge to Turbo Thrust.
Auto-Sensing Intelligence:
The Faster You Walk, The More Help You Get.
No buttons, no settings -
just natural, responsive assistance.



This image shows a man comfortably seated in the rollator, operating it as an electric wheelchair with the joystick, emphasizing smooth and responsive driving.

Resistance Mode for Rehabilitation

The rollator offers adjustable push resistance for physical therapy and muscle building.

More Power Button

Instant Hill-Conquering Superpower.
One touch transforms impossible
slopes into gentle inclines.



This image illustrates the Resistance Mode Excellence feature, showing a digital display and a man walking with the rollator, indicating its use for building strength with adjustable push resistance.

- Provides 30% body weight support during rehab walks.
- Prevents slips during post-op steps (5-15 lbs support).

Your browser does not support the video tag.

This video provides a detailed overview of the ER-X3 Hertz Silver Edition, showcasing its design and various operational features.

MAINTENANCE

Cleaning

The removable armrest pads are washable. For other surfaces, wipe with a damp cloth and mild detergent. Avoid abrasive cleaners.



Anti-tip Assist Wheels
For Safety Design

Memory Foam Pad
For Comfort



Removable armrest pads
For Washable

This image shows a close-up of the rollator's armrest pads, which are removable and washable for easy cleaning.

Battery Care

Ensure the battery is charged regularly. Refer to the charging instructions for optimal battery life.

General Inspection

Periodically check all bolts, screws, and moving parts to ensure they are secure and functioning correctly. Inspect wheels for wear and tear.

TROUBLESHOOTING

Power Issues

- **Rollator not turning on:** Check battery level and ensure it is properly connected and charged.
- **Loss of power during use:** The battery may be low. Recharge the battery.

Movement Issues

- **Difficulty steering:** Ensure the joystick is clean and free of obstructions. Adjust joystick sensitivity if needed.
- **Uneven movement:** Check for debris in the wheels or uneven tire pressure (if applicable).

Folding/Unfolding Issues

- **Difficulty folding/unfolding:** Ensure the release levers and tabs are fully engaged/disengaged. Do not force the mechanism.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	41 x 25.6 x 30.3 inches
Item Weight	38.8 Pounds (17.6 Kilograms)
Brand Name	SINCEBORN
Model Name	ER-X3
Age Range Description	40-60 years
Item Dimensions D x W x H	41"D x 25.6"W x 30.3"H
Maximum Height	36.5 Inches
Color	Hertz Silver
Is Foldable	Yes
Walker Type	Rollator Walker
Material Type	Aluminum
Range	15.6 miles
Motor	600W Magnesium Alloy

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact SINCEBORN customer service.

For further assistance or technical support, please visit the [SINCEBORN Store on Amazon](#) or contact their support team directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G1BKGBCY>

More documents and user manuals: **<https://manuals.plus/>**