

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Tamagotchi](#) /

› Tamagotchi Nano x Sanrio - My Melody Instruction Manual

## Tamagotchi 91001

# Tamagotchi Nano x Sanrio - My Melody Instruction Manual

Model: 91001

## INTRODUCTION

---

The Tamagotchi Nano x Sanrio - My Melody is a compact virtual pet device that allows you to care for a digital character with the assistance of My Melody and Kuromi. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure a fulfilling virtual pet experience.

## SETUP

---

### 1. Battery Installation

Your Tamagotchi Nano comes with two LR44 batteries pre-installed. A plastic tab may be present to prevent battery drain during shipping. To activate the device:

1. Locate the battery compartment on the back of the device.
2. If a plastic tab is present, gently pull it out to activate the batteries.
3. If batteries need replacement, use a small screwdriver to open the compartment. Insert two new LR44 batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment.

### 2. Initial Device Activation

After battery activation, your Tamagotchi Nano will power on. You will be prompted to set the time and date. Use the control buttons to navigate and confirm your selections.



**Image:** Front view of the Tamagotchi Nano x Sanrio - My Melody device. This image shows the device's screen, control buttons, and the attached chain.

## OPERATING INSTRUCTIONS

---

Caring for your Tamagotchi character involves daily interactions and monitoring its needs. The way you care for your character will influence its growth and evolution.

### 1. Basic Care

- **Feeding:** Your Tamagotchi character will indicate when it is hungry. My Melody and Kuromi may assist by bringing almond pound cake or pickled onions. Select the appropriate food item to satisfy its hunger.
- **Cleaning:** If the character's room becomes dirty, an icon will appear. Select the cleaning option to tidy up its environment.
- **Attention:** Respond promptly to your character's calls for attention to ensure its happiness and healthy development.

### 2. Mini-Games

Engage your Tamagotchi character with three interactive mini-games:

- **Piano Lesson:** Play musical notes.
- **Shooting Star:** Aim and shoot at falling stars.
- **Balloon Making:** Inflate balloons.

Achieving a perfect score in these games may unlock a special performance. Regular play contributes to your character's well-being.

### 3. My Melody and Kuromi Interactions

My Melody and Kuromi will appear to assist you in caring for your Tamagotchi character. If you provide excellent care, they may reward you with a special gift.



**Image:** Angled view of the Tamagotchi Nano x Sanrio - My Melody device. This image highlights the device's screen and the three control buttons used for interaction.

## MAINTENANCE

---

### 1. Cleaning

To clean your Tamagotchi Nano, gently wipe the device with a soft, dry cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the device or screen.

## 2. Battery Replacement

When the display becomes dim or the device behaves erratically, it may be time to replace the batteries. Refer to the "Battery Installation" section under Setup for instructions. Always use new LR44 batteries and dispose of old batteries responsibly according to local regulations.

## 3. Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the device. Store the Tamagotchi Nano in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your Tamagotchi Nano, try the following steps:

- **Device Not Turning On:** Ensure batteries are correctly installed and not depleted. Replace with new LR44 batteries if necessary.
- **Unresponsive Buttons:** Check for any debris obstructing the buttons. If the issue persists, try resetting the device by removing and reinserting the batteries. Note that resetting may erase progress.
- **Screen Issues (Dim/Blank):** This often indicates low battery power. Replace the batteries.
- **Character Not Evolving:** Character evolution is dependent on the care provided. Ensure you are consistently feeding, cleaning, and playing with your character. Refer to the operating instructions for proper care.
- **Sound Not Working:** Check if the sound is muted. Some Tamagotchi models have a mute function. If not, try replacing batteries.

If problems persist after attempting these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand Name	Tamagotchi
Model Name	Tamagotchi Nano x Sanrio - My Melody Electronic Pet
Model Number	91001
Color	My Melody (Pink)
Item Dimensions (L x W x H)	1.5" x 1.1" x 1.75" (3.81 cm x 2.79 cm x 4.45 cm)
Item Weight	0.05 Kilograms
Material Type	Acrylonitrile Butadiene Styrene, Metal, Polycarbonate, Silicone
Power Source	Battery
Supported Battery Types	2x LR44 (included)
Manufacturer Minimum Age	8+ Years

Included Components	Tamagotchi Nano x Sanrio - My Melody device, 2 x LR44 batteries
---------------------	---

## WARRANTY INFORMATION

---

Specific warranty details for the Tamagotchi Nano x Sanrio - My Melody are typically provided with the product packaging or on the manufacturer's official website. Please retain your proof of purchase for any warranty claims. For detailed information, refer to the warranty card included in the product box or visit the Bandai Namco Toys & Collectibles America website.

## SUPPORT

---

For further assistance, technical support, or inquiries regarding your Tamagotchi Nano x Sanrio - My Melody device, please contact the manufacturer:

- **Manufacturer:** Bandai Namco Toys & Collectibles America
- **Website:** [www.bandai.com](http://www.bandai.com) (Please check the official website for specific support contact information or FAQs.)

When contacting support, please have your product model number (91001) and proof of purchase readily available.