

[Manuals.plus](#) /

› [Tastyle](#) /

› Tastyle Single Serve Coffee Maker K320IC Instruction Manual

Tastyle K320IC

Tastyle Single Serve Coffee Maker K320IC Instruction Manual

Model: K320IC

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation and maintenance of your Tastyle Single Serve Coffee Maker. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use only cold water in the water reservoir.
- Do not open the brewer handle during the brewing process.
- Do not fill water past the maximum fill line indicated on the water tank. Overfilling can lead to water spillage from the back of the unit.

PRODUCT OVERVIEW

The Tastyle Single Serve Coffee Maker K3201C is designed for convenience and versatility, allowing you to brew hot or iced coffee using K-Cups or ground coffee. It features multiple cup sizes and a bold brew option.



Figure 1: Tastyle Single Serve Coffee Maker K3201C, Elegant Black.

Included Components:

- Single Serve Coffee Maker
- Tall Drip Tray
- Short Drip Tray
- Reusable Ground Filter
- K-Pod Holder

USER-FRIENDLY DESIGN



Descaling Reminder

When the descaling indicator glows red, it's time to descale your coffee maker.



Self Cleaning

Step 1: Add 16 oz of descaling solution
Step 2: Press & hold "OVER ICE" for 3s to start
Step 3: "OVER ICE" and "BOLD" lights will flash during descaling.



Figure 2: Components included with your Tastyle K320IC Coffee Maker.

SETUP

1. Unboxing and Initial Cleaning:

1. Carefully remove all packaging materials and stickers from the coffee maker.
2. Wash the removable drip trays, reusable ground filter, and K-pod holder in warm, soapy water. Rinse thoroughly and dry. These accessories are also dishwasher-safe.
3. Wipe the exterior of the coffee maker with a damp cloth.

2. Placement:

Place the coffee maker on a clean, dry, and level surface. Ensure there is adequate clearance above the unit to open the lid for water filling. If placing under a low-hanging cabinet, you may need to pull the unit forward to access the water reservoir.

3. Water Tank:

The water tank is non-removable. Lift the lid on top of the unit to access the water reservoir. Fill the reservoir with fresh, cold water. Do not exceed the "MAX" fill line (16 oz) indicated on the side of the water tank to prevent overflow.

Figure 3: Water reservoir with MAX fill line and control panel.

OPERATING INSTRUCTIONS

1. Brewing Hot Coffee (K-Cup or Ground Coffee):

1. Ensure the water reservoir is filled with fresh, cold water up to your desired brew size, not exceeding the MAX line.
2. **For K-Cups:** Open the brewer handle, insert a K-Cup into the K-Pod holder, and close the handle securely.
3. **For Ground Coffee:** Open the brewer handle, place the reusable ground filter into the K-Pod holder, and add your desired amount of ground coffee (up to 1.1 oz). Close the handle securely.
4. Place your mug on the drip tray. Use the appropriate drip tray (tall or short) or remove both to accommodate travel mugs up to 7.3 inches tall.
5. Select your desired cup size (6, 8, 10, 12, or 16 oz) using the "OZ" button.
6. Choose your brew strength:

- Press "HOT BREW" for a classic hot coffee.
 - Press "BOLD" for a richer, more intense flavor. This extends the brew time for deeper extraction.
- The coffee maker will begin brewing. Brewing typically takes 2-4 minutes.
 - Once brewing is complete, the machine will automatically shut off after 10 minutes of inactivity for safety and energy efficiency.

BREW IT YOUR WAY

Works with K-Cups, ground coffee and loose-leaf tea.

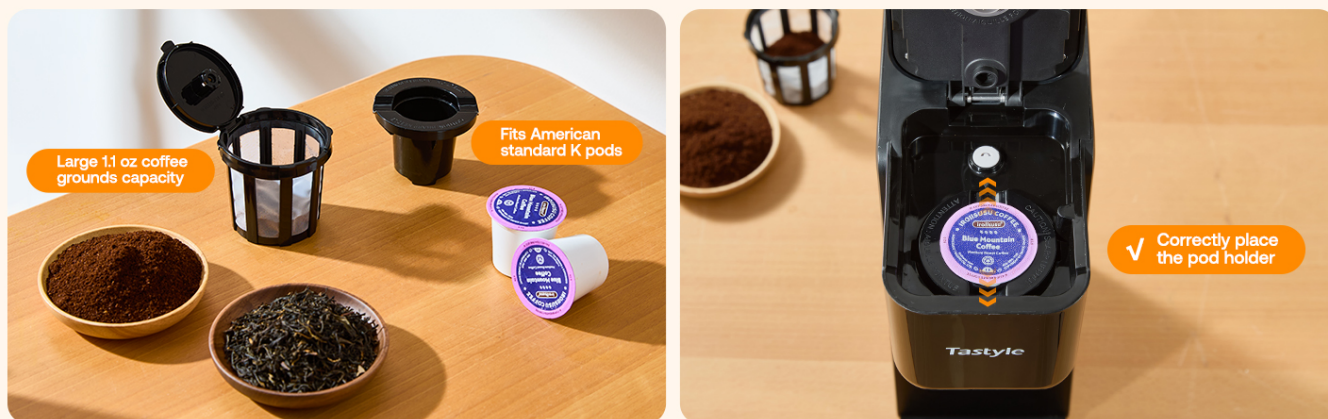


Figure 4: Compatible with K-Pods and Ground Coffee.



Figure 5: Compact design fits 7.3" travel mugs with drip tray removed.

2. Brewing Iced Coffee:

1. Fill your cup with ice before brewing.
2. Ensure the water reservoir is filled with fresh, cold water up to your desired brew size, not exceeding the MAX line.
3. Insert a K-Cup or reusable ground filter with coffee into the brewer.
4. Place your ice-filled mug on the drip tray.
5. Select your desired cup size (6, 8, 10, 12, or 16 oz) using the "OZ" button.
6. Press the "OVER ICE" button. The coffee maker will brew hotter to extract full flavor, then cool down to reduce ice melt, delivering a balanced iced coffee.

BREW OVER ICE

Automatically adjusts brew temperature — starting hotter to help extract full flavor, then cooling down for less ice melt.

Warm Tips:

1. The coffee comes out hot instead of cold when "OVER ICE" button is pressed.
2. Start by adding ice to your cup—about the same amount as the water you'll brew with.



Figure 6: Brew Over Ice function.

Your browser does not support the video tag.

Video 1: Official demonstration of brewing hot and iced coffee with the Tastyle Single Serve Coffee Maker, highlighting the 16 oz brew size and travel cup compatibility.

MAINTENANCE

1. Daily Cleaning:

- After each use, remove and empty the K-Pod holder or reusable ground filter. Rinse under running water.
- Empty and rinse the drip tray.
- Wipe down the exterior of the machine with a damp cloth.
- All removable accessories are dishwasher-safe for easy cleaning.



Figure 7: Reusable ground filter and K-Pod holder for versatile brewing.

2. Descaling:

Over time, mineral deposits can build up in your coffee maker, affecting performance and taste. The machine features a descaling reminder.

- **Descaling Reminder:** When the descaling indicator light glows red, it is time to descale your coffee maker. This typically occurs after approximately 200 cups of coffee.
- **Self-Cleaning Function:**
 - a. Add 16 oz of descaling solution (e.g., white vinegar or a commercial descaling agent) to the water reservoir.
 - b. Press and hold the "OVER ICE" and "BOLD" buttons simultaneously for 3 seconds to start the self-cleaning cycle.
 - c. The "OVER ICE" and "BOLD" lights will flash during descaling.
 - d. Once the cycle is complete, rinse the reservoir and run two cycles with fresh water to flush out any remaining solution.

MINIMIZE SPLATTER

● Elevated drip tray reduces coffee splashing.

● Adjust the drip tray: use one, stack two, or remove it—based on your cup height.

7.3"

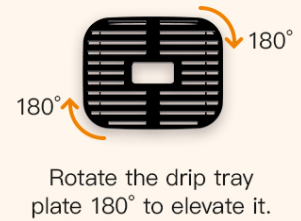


Figure 8: Descaling reminder and self-cleaning instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water overflowing from the back of the unit.	Water reservoir overfilled.	Ensure water is filled only up to the "MAX" line (16 oz). Do not exceed this limit.
Coffee splashing during brewing.	Mug is too far from the dispenser.	Use the appropriate drip tray (tall or short) to elevate your mug closer to the dispenser and minimize splashing. Two elevated drip trays are included for different cup heights.
Brewer lid pops open during brewing.	Lid not securely closed or pressure buildup.	Ensure the lid is firmly closed and latched before starting the brew cycle. If the issue persists, ensure the K-Cup or reusable filter is correctly seated.
Coffee tastes weak.	Insufficient coffee grounds or incorrect brew setting.	Use the "BOLD" brew setting for a stronger cup. Ensure you are using enough ground coffee if using the reusable filter.
Coffee not brewing or partial brew.	Insufficient water in reservoir or K-Cup/filter not properly punctured.	Check water level. Ensure K-Cup is properly seated and punctured, or that the reusable filter is correctly placed. Perform a descaling cycle if the machine hasn't been descaled recently.



Figure 9: Using elevated drip trays to minimize coffee splatter.

SPECIFICATIONS

- **Brand:** Tastyle
- **Model Name:** K320IC
- **Color:** Elegant Black
- **Product Dimensions:** 9.3"D x 4.6"W x 12"H
- **Item Weight:** 2.8 Pounds
- **Capacity:** 16 ounces (Max water reservoir capacity)
- **Wattage:** 1000 watts
- **Voltage:** 120 Volts
- **Coffee Input Type:** Ground, K Pod
- **Filter Type:** Reusable
- **Special Features:** Descaling Reminder, Self Cleaning, Auto Shut Off
- **Dishwasher Safe:** Yes (for accessories)

WARRANTY AND SUPPORT

Your Tastyle Single Serve Coffee Maker K320IC comes with an 18 Months Warranty. For warranty claims, technical support, or any inquiries, please contact the manufacturer directly.

You can also visit the [Tastyle Store](#) for more information and product registration to potentially extend your warranty.

© 2026 Tastyle. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G1C5K8H2>

More documents and user manuals: <https://manuals.plus/>