

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Waleaf](#) /

› [Waleaf 70" Fluted Fireplace TV Stand with 23" Electric Fireplace Instruction Manual](#)

### Waleaf XD-60/70TVS-23PC

# Waleaf 70" Fluted Fireplace TV Stand with 23" Electric Fireplace

Model: XD-60/70TVS-23PC

## INTRODUCTION

This instruction manual provides essential information for the safe and efficient assembly, operation, and maintenance of your Waleaf 70" Fluted Fireplace TV Stand with 23" Electric Fireplace. Please read all instructions carefully before beginning assembly or operation. Retain this manual for future reference.

## IMPORTANT SAFETY INFORMATION

Observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Ensure the product is placed on a stable, level surface.
- Do not overload the TV stand. The maximum weight capacity for the top surface is 300 lbs.
- Keep flammable materials at least 3 feet (0.9 meters) away from the front of the electric fireplace and away from the sides and rear.
- Do not operate the fireplace with a damaged cord or plug, or if the heater malfunctions.
- Always unplug the electric fireplace before cleaning or maintenance.
- This product is for indoor use only.

## SETUP AND ASSEMBLY

Your Waleaf TV Stand and Electric Fireplace are shipped in two separate packages. These packages may arrive at different times. Please ensure you have both packages before beginning assembly.

## NOTICE

Comes with TWO PACKAGES with TWO PACKINGS, may NOT be delivered at the same time, please be patient!



Figure 1: Product delivered in two packages.

Assembly is designed to be straightforward with labeled parts, clear instructions, and pre-drilled holes. It is recommended to have at least two people for assembly.

### Assembly Steps:

- 1. Unpack Components:** Carefully remove all parts from both boxes. Verify all components are present against the included parts list.
- 2. Assemble TV Stand Frame:** Follow the step-by-step diagrams in the provided assembly guide to construct the main frame of the TV stand.
- 3. Install Adjustable Shelves:** Position the 5-level adjustable shelves within the cabinet sections as desired. Ensure they are securely seated.



### 5 ADJUSTABLE SHELF

Accommodates items of various sizes tall or short.

- 4. Insert Electric Fireplace:** Carefully slide the 23-inch electric fireplace unit into the designated central opening of the TV stand. Ensure it fits snugly and is properly aligned.
- 5. Attach Sliding Doors:** Install the sliding side doors according to the instructions. These doors provide access to the storage compartments.
- 6. Cable Management:** Utilize any pre-drilled cable management holes to organize wires from your TV and media devices.

For detailed visual instructions, refer to the assembly guide included in your packaging.

## OPERATING THE ELECTRIC FIREPLACE

The electric fireplace can be operated using the control panel on the unit or the included remote control. Ensure the fireplace is plugged into a standard 120V AC outlet.



Figure 3: Fireplace control panel and remote control functions.

## Remote Control Functions:

- **Power Button:** Turns the fireplace ON or OFF.
- **Heater Button:** Activates the heating function. Toggle between 750W and 1500W heat settings. The heater can be used independently of the flame effect.
- **Dimmer Button:** Adjusts the brightness of the flame effect.
- **Flame Speed Button:** Changes the speed of the flame animation.
- **Timer Button:** Sets an automatic shutdown timer for the fireplace (e.g., 1-8 hours).
- **Child Lock Button:** Activates or deactivates the child lock feature, preventing accidental operation.
- **Color Button:** Cycles through 7 changeable flame color options.

The fireplace features realistic log effects and adjustable flame colors to enhance ambiance. The heating function provides supplemental warmth for your room.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your TV stand and electric fireplace.

### General Care:

- **Cleaning the Stand:** Wipe the wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Cleaning the Fireplace:** Ensure the electric fireplace is unplugged and cool before cleaning. Use a soft, dry cloth to wipe the exterior. Do not spray liquids directly onto the unit.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Inspecting Cords:** Periodically check the power cord for any signs of damage. If damaged, discontinue use and contact customer support.

## TROUBLESHOOTING

If you encounter issues with your Waleaf Fireplace TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	Not plugged in; power switch off; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check the main power switch on the fireplace. Reset the circuit breaker if necessary.
No heat output.	Heater function not activated; thermostat setting too low.	Press the Heater button on the remote or control panel. Adjust the thermostat to a higher setting.
Remote control not working.	Dead batteries; obstruction between remote and fireplace sensor.	Replace batteries in the remote control. Ensure there is a clear line of sight between the remote and the fireplace sensor.
TV stand appears unstable.	Uneven floor; loose assembly hardware.	Ensure the stand is on a level surface. Re-tighten all assembly hardware.

If the problem persists after attempting these solutions, please contact Waleaf customer support.

## PRODUCT SPECIFICATIONS

<b>Brand</b>	Waleaf
<b>Model Name</b>	XD-60/70TVS-23PC
<b>Product Dimensions</b>	15.75"D x 70"W x 23.4"H
<b>Material</b>	Wood (Stand), Metal (Fireplace Unit)
<b>Color</b>	Natural Wood
<b>Item Weight</b>	61.3 Pounds
<b>Power Source</b>	Corded Electric
<b>Heat Output</b>	750W / 1500W
<b>TV Size Compatibility</b>	Up to 80 inches
<b>Top Surface Weight Capacity</b>	300 lbs
<b>Installation Type</b>	Freestanding

Ventilation Type

Vent Free



Figure 4: Product dimensions and TV compatibility.

## WARRANTY INFORMATION

This Waleaf product comes with a limited warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or contact Waleaf customer support.

## CUSTOMER SUPPORT

For any questions, assistance with assembly, troubleshooting, or warranty inquiries, please contact Waleaf customer service. Our dedicated support team aims to provide a solution within 24 hours.

Please have your model number (XD-60/70TVS-23PC) and purchase information ready when contacting support.

*Contact information (e.g., email, phone, website) is typically provided on the product packaging or a separate support document.*

