

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Monster](#) /

› [Monster Open Ear AC339 Earbuds User Manual](#)

Monster AC339

Monster Open Ear AC339 Earbuds User Manual

Model: AC339 (E98WH)

INTRODUCTION

Thank you for choosing the Monster Open Ear AC339 Earbuds. These earbuds are designed to provide a comfortable listening experience with an open-ear design, allowing you to stay aware of your surroundings while enjoying high-quality audio. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

- Monster Open Ear AC339 Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

The Monster Open Ear AC339 earbuds feature a lightweight, open-ear clip design for comfort and situational awareness. The charging case includes a digital display for battery status.



Image: Monster Open Ear AC339 Earbuds and Charging Case. The image displays the beige earbuds and their matching charging case, highlighting the compact design.

Open Clip Ear Design

Soft Support

Touch Control

Bluetooth 6.0

12mm Unit Driver

8H Single Charge
32H With Charging Case

Image: Diagram illustrating key features of the Monster Open Ear AC339 Earbuds, including the open clip ear design, soft support, touch control area, Bluetooth 6.0, 12mm unit driver, and battery life indicators for single charge (8H) and with charging case (32H).

Earbud Components

- **Open Clip Ear Design:** Ensures a secure and comfortable fit without entering the ear canal.
- **Touch Control Area:** Located on the outer surface of each earbud for managing playback, calls, and voice assistant.
- **Microphone:** For calls and voice commands.
- **Charging Contacts:** For charging within the case.

Charging Case Components

- **Earbud Charging Slots:** Securely holds and charges the earbuds.
- **Digital Battery Display:** Shows the remaining battery percentage of the charging case.
- **USB-C Charging Port:** For charging the case.

SETUP

1. Charging the Earbuds and Case


1. Place the earbuds into the charging case, ensuring they are properly seated. The earbuds will begin charging automatically.
2. Connect the charging case to a power source using the provided USB charging cable.
3. The digital display on the charging case will show the current battery level. A full charge provides up to 40 hours of total playback time with the case.
4. Allow approximately 2 hours for a full charge of the case and earbuds.



Image: The Monster Open Ear AC339 charging case open, showing the earbuds inside and the digital battery display indicating charge level. This illustrates the extended battery life feature.

2. Bluetooth Pairing

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "Monster Open Ear AC339" in the list of available Bluetooth devices.
4. Select "Monster Open Ear AC339" to connect. Once connected, you will hear an audible confirmation.
5. The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

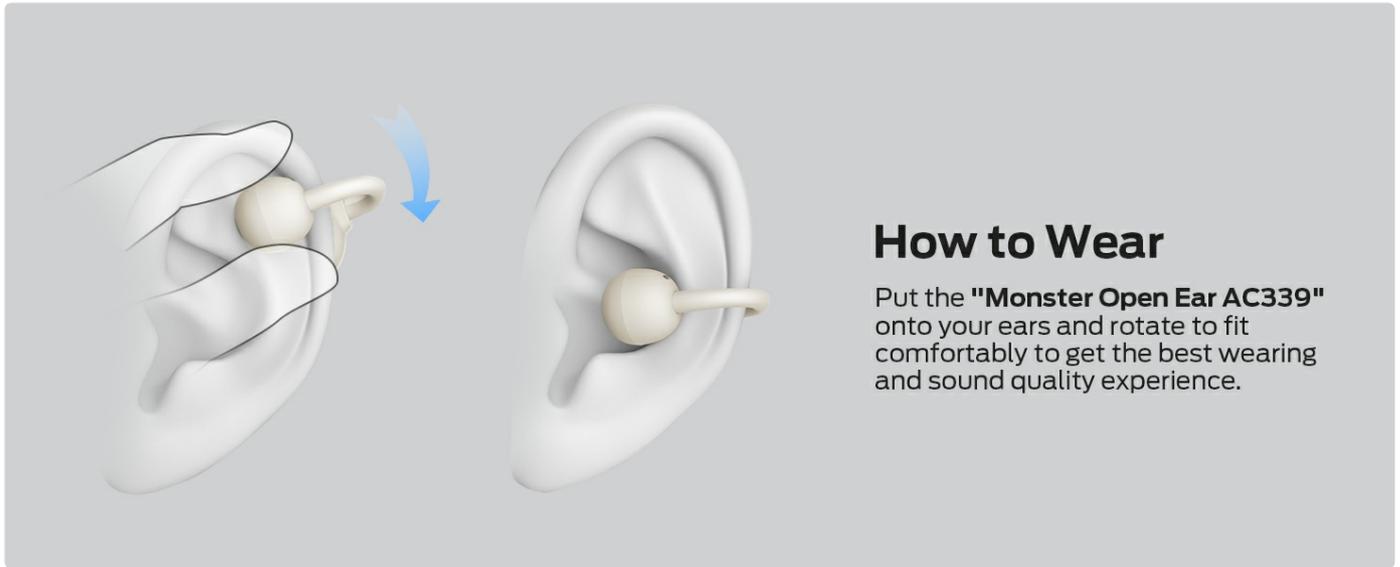

How to Wear


Put the "**Monster Open Ear AC339**" onto your ears and rotate to fit comfortably to get the best wearing and sound quality experience.

Image: A smartphone screen showing the Bluetooth settings with "Monster Open Ear AC339" listed as a connected device, alongside the earbuds and charging case.

OPERATING INSTRUCTIONS

1. How to Wear

Gently place the earbuds onto your ears, rotating them slightly to ensure the open-ear clip sits comfortably and securely around your earlobe. Adjust for the best fit and sound experience.

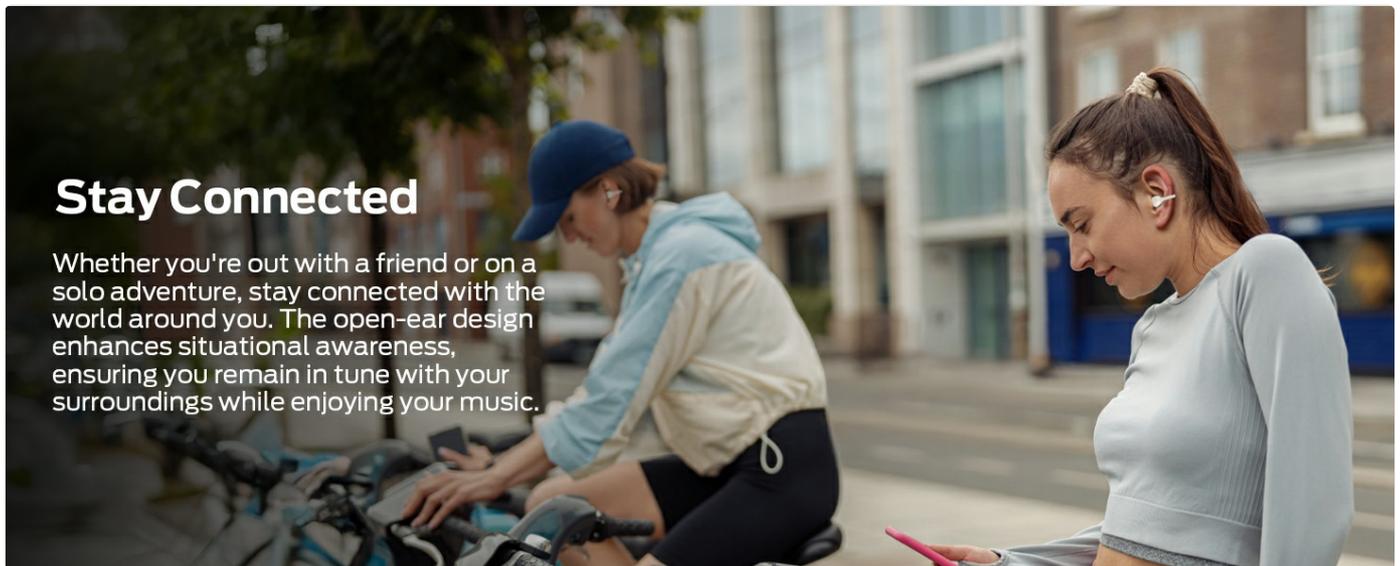

Stay Connected

Whether you're out with a friend or on a solo adventure, stay connected with the world around you. The open-ear design enhances situational awareness, ensuring you remain in tune with your surroundings while enjoying your music.

Image: A diagram illustrating the correct method to wear the Monster Open Ear AC339 earbuds, showing how to position the clip around the ear for a secure and comfortable fit.

2. Touch Controls

The AC339 earbuds feature multi-function touch controls on both earbuds. Refer to the diagram below for specific functions:



Image: A visual guide detailing the touch control functions for the Monster Open Ear AC339 earbuds. It shows controls for answering/rejecting calls, play/pause, voice assistant, previous song, next song, volume up, and volume down.

Touch Control Functions

Action	Function (Left/Right Earbud)
Click x 2	Answer Call / Play/Pause Music
Hold x 2s	Reject Call / Activate Voice Assistant
Click x 3 (Left)	Previous Song
Click x 3 (Right)	Next Song
Click x 1 (Left)	Volume Down
Click x 1 (Right)	Volume Up

MAINTENANCE

Cleaning

- Wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Ensure charging contacts are clean and dry for proper charging.

Water Resistance (IPX6)

The AC339 earbuds are IPX6 water-resistant, meaning they can withstand strong jets of water from any direction. This makes them suitable for workouts and light rain. However, they are not designed for submersion in water. Do not swim or shower with the earbuds.

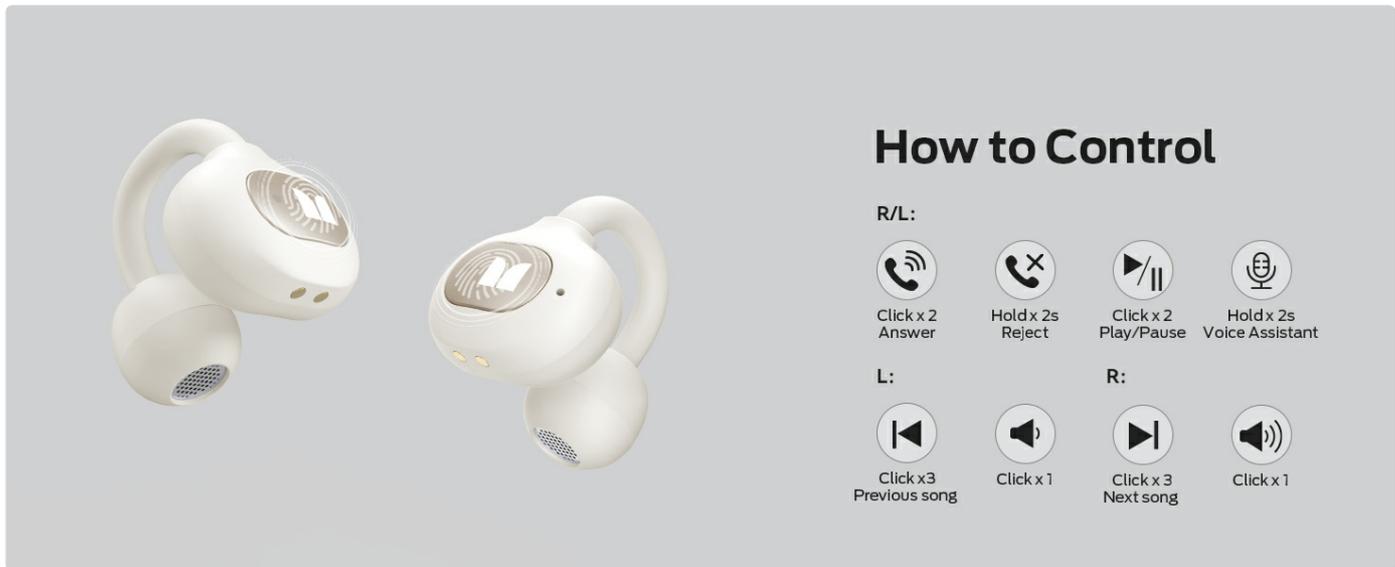


Image: The Monster Open Ear AC339 earbuds shown with water droplets, illustrating their IPX6 water resistance. This highlights their suitability for exercise and outdoor use in light rain.

Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid extreme temperatures and direct sunlight.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Solution
Earbuds not pairing	<ul style="list-style-type: none"> ◦ Ensure earbuds are charged. ◦ Turn off Bluetooth on other nearby devices. ◦ Forget "Monster Open Ear AC339" from your device's Bluetooth list and try pairing again. ◦ Place earbuds back in the case, close, then reopen to reset pairing mode.
Only one earbud working	<ul style="list-style-type: none"> ◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the charging case, close the lid for 5 seconds, then open again. ◦ Try resetting the earbuds (refer to manufacturer's specific reset instructions if available, otherwise, re-pair).
No sound or low volume	<ul style="list-style-type: none"> ◦ Increase volume on both your device and the earbuds. ◦ Ensure earbuds are properly connected to your device. ◦ Check if the audio is playing from another connected device.
Charging case not charging	<ul style="list-style-type: none"> ◦ Ensure the USB cable is securely connected to both the case and the power source. ◦ Try a different USB cable or power adapter.

SPECIFICATIONS

Monster Open Ear AC339 Earbuds Key Specifications

Feature	Detail
Model Name	AC339 (E98WH)
Connectivity	Bluetooth 6.0
Ear Placement	Open Ear
Control Method	Touch
Water Resistance	IPX6
Battery Life (Total with Case)	Up to 40 Hours
Earbud Weight	5.2g (each)
Audio Driver Type	Dynamic Driver
Material	Silicone
Compatible Devices	Smartphones, Laptops, Tablets, Smart Speakers, Car Audio Systems

WARRANTY AND SUPPORT

Monster products are designed for reliability and performance. For any inquiries, technical support, or warranty claims, please contact Monster customer service. Refer to your purchase documentation or the official Monster website for specific warranty terms and contact information.

Dedicated After-Sales Support: Our professional customer service team is available to assist with any questions or feedback regarding your product. We are committed to ensuring a seamless experience and finding solutions that meet your needs.