

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Midea](#) /

› [Midea MDF24P1BWW Dishwasher User Manual](#)

## Midea MDF24P1BWW

# Midea MDF24P1BWW Dishwasher User Manual

Model: MDF24P1BWW

## IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the dishwasher to reduce the risk of fire, electric shock, or injury to persons.

- This appliance must be grounded. Connect only to a properly grounded outlet.
- Do not operate a dishwasher with damaged power cord or plug.
- Do not allow children to play in or on the dishwasher.
- Use only detergents and rinse agents recommended for dishwashers.
- Keep children away from detergent and rinse aid.
- Do not wash plastic items unless marked "dishwasher safe" or equivalent.
- Load sharp items so they are not likely to damage the door seal or tub.
- Do not touch the heating element during or immediately after use.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.

## PRODUCT OVERVIEW

The Midea MDF24P1BWW is a 52 dBA front control dishwasher designed for efficient and quiet operation. It features a hybrid stainless steel and plastic tub, a 4-level wash system, and a Smart Auto Cycle for optimized cleaning.

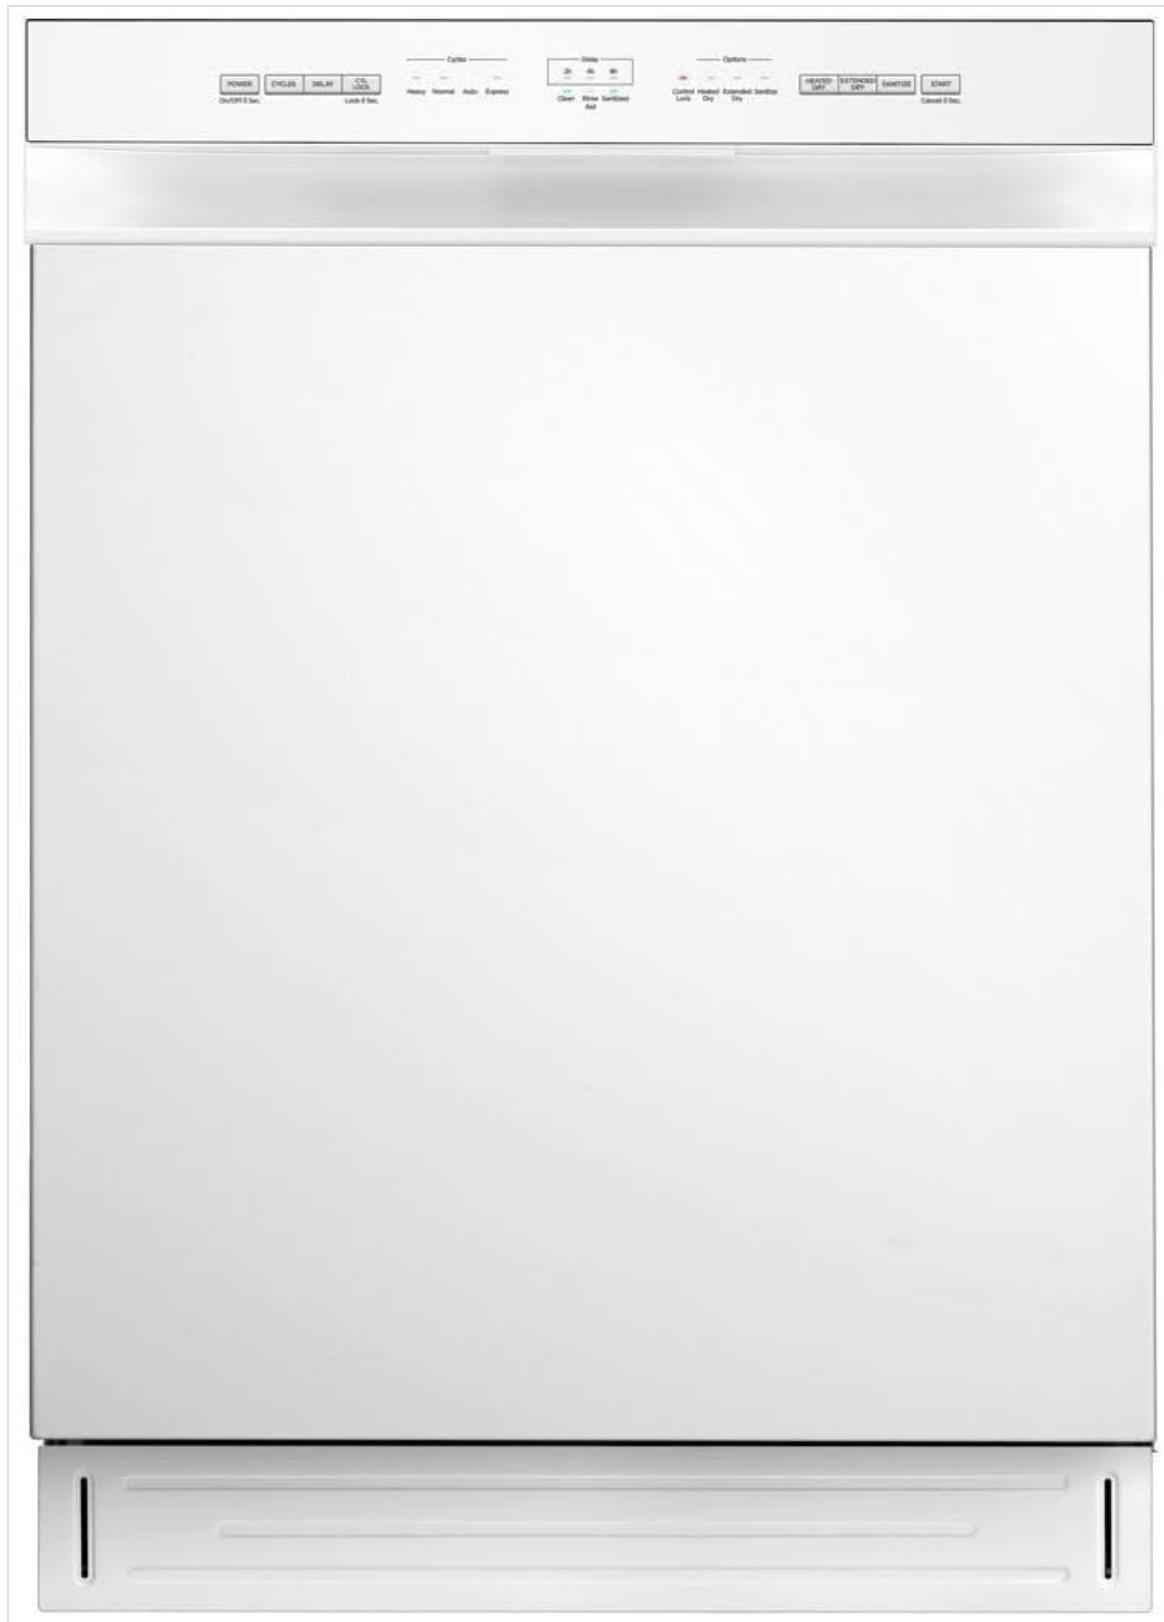


Figure 1: Front view of the Midea MDF24P1BWW dishwasher.

## SETUP AND INSTALLATION

### 1. Unpacking

- Carefully remove all packaging materials, including any internal packing.
- Inspect the dishwasher for any shipping damage. If damaged, contact your retailer.

### 2. Location Requirements

- Install the dishwasher on a level, stable floor.
- Ensure adequate space for door opening and closing.
- Locate near water supply, drain, and electrical outlet.

### 3. Connecting Water, Drain, and Electrical

Refer to the detailed installation guide provided with your appliance for specific plumbing and electrical connections. All connections must comply with local codes and ordinances.

### 4. Leveling the Dishwasher

- Adjust the leveling legs at the bottom of the dishwasher to ensure the unit is stable and level.
- A level dishwasher prevents rattling and ensures proper door closure.



Figure 2: Interior bottom of the dishwasher tub, showing the filter assembly and detergent dispenser.

# OPERATING INSTRUCTIONS

## 1. Control Panel Overview

The front control panel allows selection of wash cycles and options.



Figure 3: Dishwasher control panel with cycle and option buttons.

## 2. Loading the Dishwasher

Proper loading ensures optimal cleaning performance.

- Scrape off large food particles.
- Place larger items in the lower rack and smaller, delicate items in the upper rack.
- Ensure items do not block the spray arms.
- Load silverware with handles down in the basket, except for knives and other sharp items which should be handles up.



Figure 4: Dishwasher interior with empty racks.

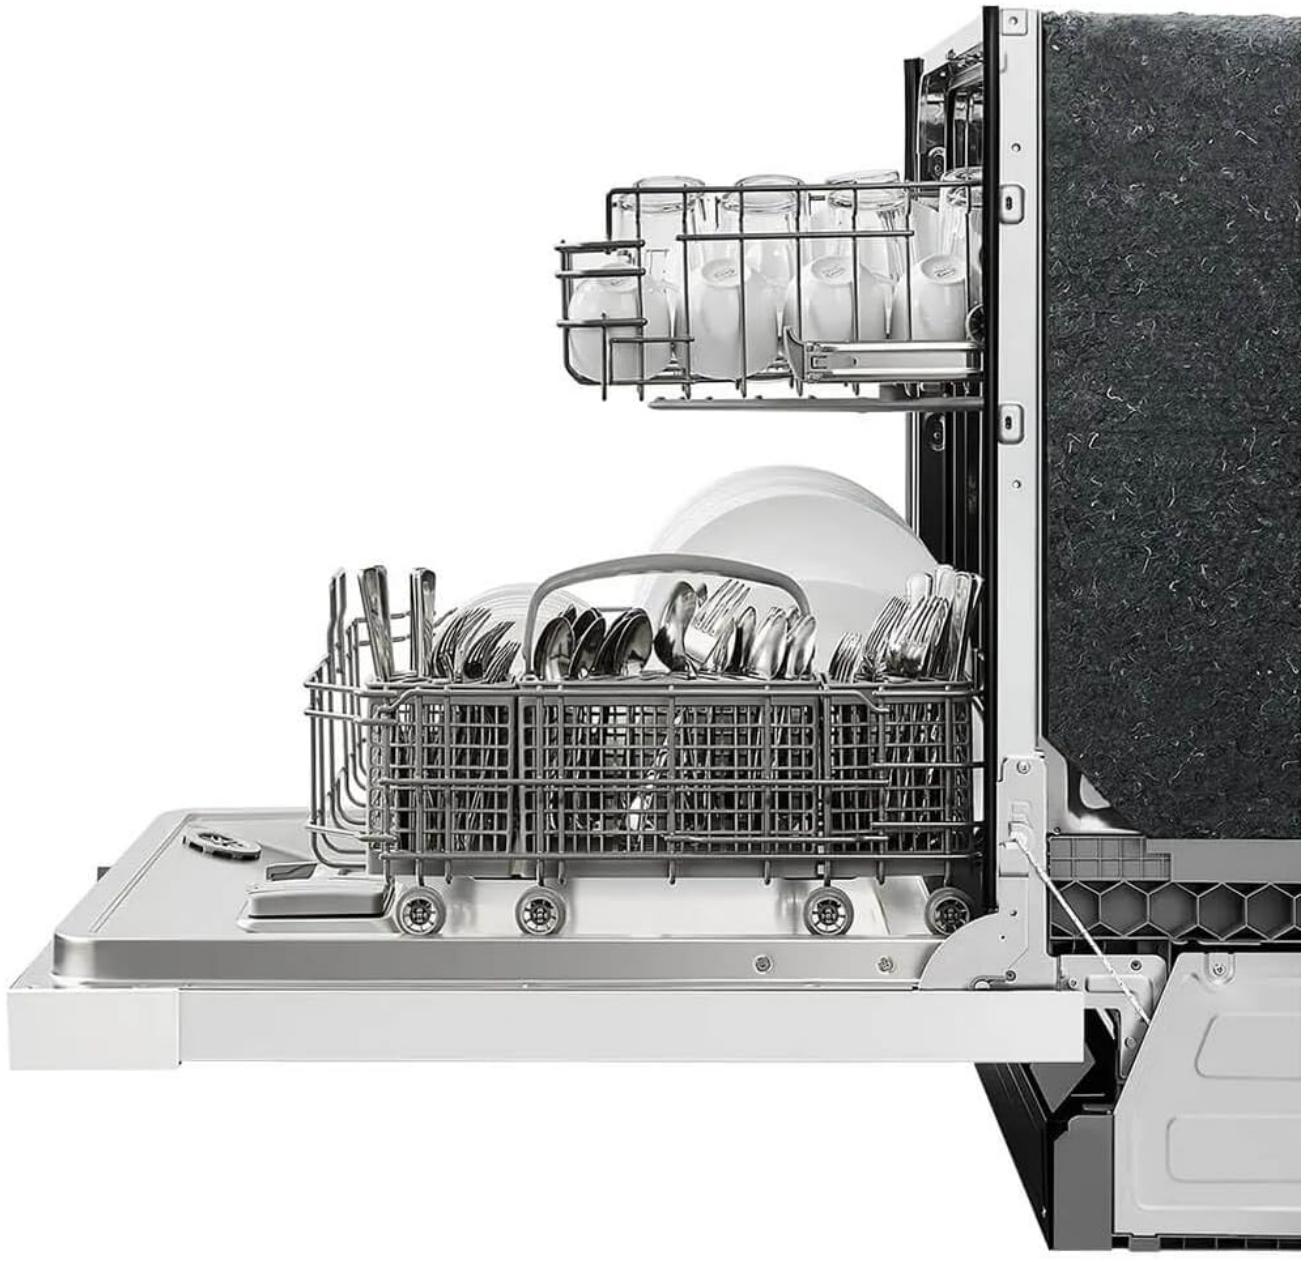


Figure 5: Side view of loaded dishwasher racks.



Figure 6: Dishwasher interior with dishes loaded.

### 3. Adding Detergent and Rinse Aid

- Fill the main detergent dispenser with the recommended amount of dishwasher detergent.
- Fill the rinse aid dispenser until the indicator shows full. Rinse aid helps with drying and prevents spots.

### 4. Selecting a Wash Cycle

Press the 'Cycles' button to select from available wash cycles such as Heavy, Normal, Auto, Express, or Rinse. The Smart Auto Cycle automatically adjusts wash time and temperature based on soil level.

### 5. Selecting Cycle Options

Enhance your wash cycle with options like Heated Dry, Extended Dry, or Sanitize. Press the corresponding button to activate.

### 6. Starting a Cycle

Close the dishwasher door firmly. Press the 'Start' button to begin the selected wash cycle.

## MAINTENANCE AND CARE

### 1. Cleaning the Filters

Regularly clean the filter assembly located at the bottom of the dishwasher tub to ensure optimal performance and prevent odors.

- Twist and remove the coarse filter and fine filter.
- Rinse under running water to remove food particles.
- Reassemble and replace the filters securely.

### 2. Cleaning the Interior and Exterior

- Wipe the exterior with a soft, damp cloth.
- Clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda to remove mineral buildup and odors.

### 3. Long-Term Storage

If the dishwasher will not be used for an extended period, disconnect power, turn off the water supply, and drain any remaining water from the unit.

## TROUBLESHOOTING GUIDE

Before calling for service, review the following common issues and solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power not connected; Door not closed properly; Cycle not selected.	Check power cord; Ensure door is latched; Select a wash cycle and press Start.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Use correct amount of detergent; Clean filters.
Water not draining	Clogged drain hose; Clogged filter; Air gap issue.	Check and clear drain hose; Clean filters; Check air gap for blockages.
Excessive noise	Dishware rattling; Foreign object in pump; Dishwasher not level.	Rearrange dishes; Inspect pump area; Level the dishwasher.
Spots or film on dishes	No rinse aid; Hard water; Too much detergent.	Refill rinse aid dispenser; Consider a water softener; Reduce detergent amount.

## SPECIFICATIONS

Feature	Detail
Model Number	MDF24P1BWW

Feature	Detail
Brand	Midea
Color	White
Sound Level	52 dBA
Product Dimensions (D x W x H)	26 x 24 x 34 inches (approximate)
Item Weight	70 pounds
Tub Material	Hybrid Stainless Steel and Plastic
Wash System	4-Level Wash System
Control Type	Front Control
UPC	840296506820

## WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Midea website. For technical assistance or customer support, please contact Midea customer service directly.

Keep your proof of purchase for warranty claims.