

[Manuals.plus](#) /

› [SakerPlus](#) /

› SakerPlus Electric Lint Remover CP23560 User Manual

SakerPlus CP23560

SakerPlus Electric Lint Remover Model CP23560 User Manual

1. INTRODUCTION

Thank you for choosing the SakerPlus Electric Lint Remover. This device is designed to efficiently remove lint, fuzz, and pills from various fabrics, helping to restore the appearance of your clothing and textiles. Please read this manual carefully before use to ensure proper operation and maintenance.

2. SAFETY INSTRUCTIONS

- Always ensure the device is turned off before cleaning or emptying the lint compartment.
- Do not use the device on wet fabrics or near water.
- Keep the device out of reach of children.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- The bionic honeycomb mesh is designed to protect fabric. Do not press excessively hard on delicate materials.
- The safety switch will deactivate the device if the grid becomes loose, protecting your hands from the blades.
- The device features charging security and will automatically cease charging upon reaching full capacity.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your SakerPlus Electric Lint Remover.



Figure 1: The SakerPlus Electric Lint Remover, showing its ergonomic design and power button.

4. SETUP

4.1 Initial Charging

1. Before first use, fully charge the lint remover.
2. Connect the USB charging cable to the device and a compatible USB power source (e.g., computer, wall adapter).
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, indicating the charging process is complete.



Figure 2: The lint remover being charged via a USB connection.

5. OPERATING INSTRUCTIONS

5.1 Preparing the Fabric

- Lay the garment or fabric flat on a hard, smooth surface.
- Ensure the fabric is dry and free from any loose threads that could get caught.

5.2 Removing Lint and Fuzz

1. Press the power button to turn on the device. The internal rotating blade will begin to spin.
2. Gently glide the shaver head over the affected area of the fabric. Apply light, even pressure.
3. Move the device in small, circular motions or straight strokes, ensuring the bionic honeycomb mesh makes contact with the fabric.
4. Observe the lint and fuzz being collected in the transparent storage compartment.
5. Continue until the desired smoothness is achieved.
6. Press the power button again to turn off the device when finished.



Figure 3: Using the lint remover on a sweater to remove pills and fuzz.



Figure 4: Detailed view of the lint remover in action on a fabric surface.



Figure 5: The lint remover effectively removing fuzz from a blanket.

6. MAINTENANCE AND CLEANING

6.1 Emptying the Lint Compartment

1. Ensure the device is turned off.
2. Gently twist or slide off the transparent lint storage compartment from the main body of the device.
3. Empty the collected lint and fuzz into a waste bin.
4. Reattach the lint compartment securely until it clicks into place.

6.2 Cleaning the Blades and Mesh

- With the lint compartment removed, you may gently brush away any remaining lint or debris from the blades and the inner side of the mesh cover using a small brush (not included).
- Do not use water or liquid cleaners on the blades or electrical components.
- Ensure all parts are dry before reassembling and storing the device.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect it to a power source and allow it to charge for at least 2 hours.

- **Lint not being removed effectively:** Check if the lint compartment is full and needs emptying. Ensure the blades are clean and free from tangled fibers.
- **Device stops unexpectedly:** The safety switch may have been activated if the mesh cover is loose. Reattach the cover securely. If the issue persists, the battery may be low.

8. SPECIFICATIONS

Brand	SakerPlus
Model Number	CP23560
Material	Plastic
Color	White
Operation Mode	Automatic
Power Source	Rechargeable (USB)
UPC	735366967789

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the SakerPlus customer service directly. Contact details can typically be found on the product packaging or the official SakerPlus website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G24YFFKP>

More documents and user manuals: <https://manuals.plus/>