

Oprisen Power Recliner Chair 815

Oprisen Power Recliner Chair with Heat and Massage User Manual

Model: Power Recliner Chair 815

1. INTRODUCTION

Thank you for choosing the Oprisen Power Recliner Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: Oprisen Power Recliner Chair Set (Brown)

The Oprisen Power Recliner Chair is designed to offer comfort and convenience with features such as power reclining, heat and massage functions, LED lighting, USB charging ports, cup holders, and side pockets.

2. SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Keep children and pets away from the chair during assembly and operation.
- Ensure all connections, especially electrical ones, are securely fastened before plugging in and using the chair.

- Do not stand on the chair or use it as a step stool.
- Avoid placing liquids directly on the chair's surface to prevent electrical hazards or material damage.
- Unplug the chair from the power outlet before cleaning, maintenance, or if it will be unused for an extended period.
- The maximum weight capacity for this chair is **149.69 kg (330 lbs)**. Do not exceed this limit.
- Do not attempt to disassemble or repair the electrical components yourself. Contact qualified service personnel.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. The chair is typically delivered in two boxes.



Image 3.1: Product Dimensions and Delivery Packaging

- Recliner Chair Base (1)
- Recliner Chair Backrest (1)
- Lumbar Pillow (1)
- Power Adapter (1)

- Remote Control for Massage and Heat (1)
- Assembly Instructions (Detailed instructions are included in the box)

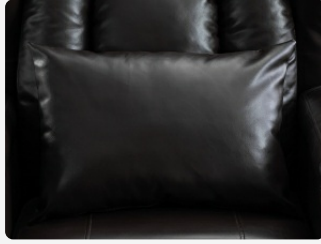 


Image 3.2: Supportive Lumbar Pillow

4. SETUP AND ASSEMBLY

Assembly is straightforward and typically takes about 10 minutes. Refer to the detailed assembly instructions provided in your product packaging for specific steps and diagrams.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Slide the backrest onto the base until it clicks securely into place. Ensure a firm connection.
3. **Connect Power Cables:** Locate the power cables extending from the chair base and backrest. Connect them firmly.
4. **Connect Power Adapter:** Plug the power adapter into the chair's power input.
5. **Position Chair:** Place the recliner in your desired location, ensuring it is near a power outlet and has sufficient space to recline fully.
6. **Plug In:** Plug the power adapter into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

Your Oprisen Power Recliner Chair offers various functions for enhanced comfort.

5.1 Power Recline Function

The chair features a smooth power reclining mechanism. Use the control panel located on the side of the chair to adjust your position.

- Press the **recline button** (often an arrow pointing outwards) to extend the footrest and recline the backrest.
- Press the **upright button** (often an arrow pointing inwards) to return the chair to its upright position.
- You can stop the reclining motion at any desired angle between 90 and 150 degrees.

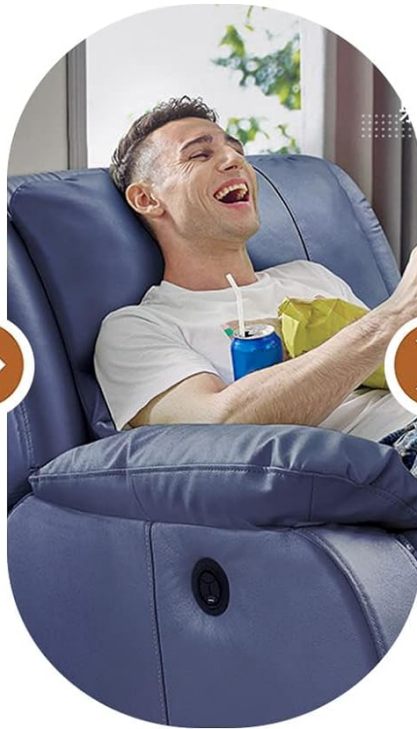 


Image 5.1: Reclining Angles and Control Panel Detail

 
Reclining at Any Position You Need



NAPPING



WATCHING TV

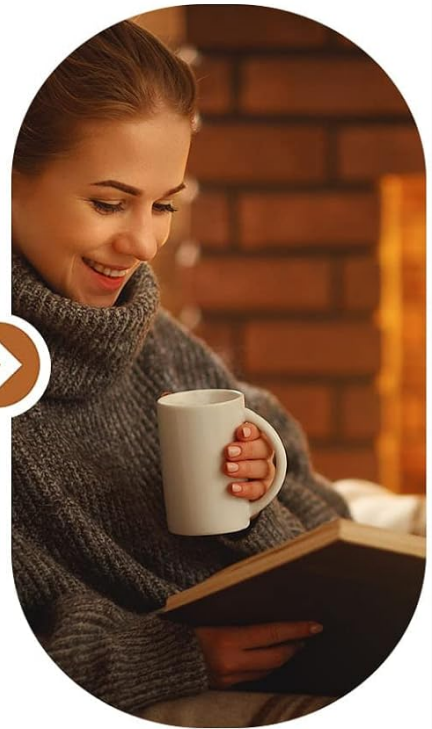

READING BOOK



Image 5.2: Reclining for Napping, Watching TV, and Reading

5.2 Massage and Heating Functions

Control the massage and heating features using the dedicated remote control.

Massage & Heating

Easy control with remote



Image 5.3: Massage and Heating Remote Control

- **Massage:** The chair offers 8-point vibration massage (back, thighs, waist, legs). Use the remote to select from 5 massage modes, 2 intensity levels (High/Low), and 3 time modes.
- **Heating:** Activate the soothing waist heating function via the remote control.

5.3 LED Lights

The chair features 4 modes of LED lights located at the base.

- **Turn On/Off:** Long press the LED control button on the side panel to switch the lights on or off.
- **Change Color:** While the lights are on, short press the LED control button to cycle through the different color modes.



Image 5.4: Recline, USB, and LED Control Panel

5.4 USB Charging Port

A USB port is integrated into the control panel for convenient charging of your electronic devices.

- Simply connect your device's USB charging cable to the port.
- Ensure the chair is plugged into a power outlet for the USB port to function.



Image 5.5: Easy-to-use Control Panel with USB Port

5.5 Cup Holders and Side Pockets

For added convenience, the chair includes built-in cup holders and side storage pockets.

- Use the **cup holders** to securely place your beverages.
- The **side pockets** are ideal for storing remote controls, books, or other small items.



Image 5.6: Dual Cup Holders



Image 5.7: Side Pockets

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your recliner chair.

- **Cleaning Faux Leather:** For general cleaning, wipe the faux leather surface with a soft, damp cloth. For stubborn stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Electrical Components:** Ensure all electrical cords and connections are free from damage. Do not expose electrical parts to moisture.
- **Moving the Chair:** When moving the chair, lift it rather than dragging it to prevent damage to the legs or frame.
- **Regular Checks:** Periodically check all bolts and screws to ensure they are tight.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not recline or power functions are unresponsive.	Not plugged in; loose power connection; power outage.	Ensure the power cord is securely plugged into a working outlet. Check all internal power connections. Verify the outlet has power.
Massage or heating functions are not working.	Remote control battery low/dead; loose connection to massage/heat unit.	Check or replace batteries in the remote control. Ensure the chair is powered on and all connections are secure.
LED lights are not turning on or changing color.	Loose connection to LED strip; control button malfunction.	Ensure the chair is powered on. Check the LED strip connection. Try long pressing the button to turn on, then short pressing to change color.

Problem	Possible Cause	Solution
Unusual noises during reclining.	Loose hardware; obstruction in mechanism.	Inspect for any loose bolts or screws and tighten them. Check for any objects obstructing the reclining mechanism.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Oprisen
Model Number	Power Recliner Chair 815
Colour	Brown
Material	Faux Leather (Upholstery), Cotton, Foam (Fill)
Product Dimensions (D x W x H)	101D x 84W x 112H centimetres
Item Weight	47.63 kg
Maximum Weight Recommendation	149.69 kg
Back Style	Wing Back
Special Features	Big and Tall, Cup Holders, Reclining, Side Pocket, Heat, Massage, LED Lights, USB Port
Room Type	Bedroom, Game Recreation Room, Home Theater, Living Room
Included Components	1 x lumbar pillow, 1 x power recliner chair

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the retailer. If you have any questions, require technical assistance, or need to report a problem, please contact Oprisen customer support through your purchase platform or the manufacturer's official channels.
Please have your model number (Power Recliner Chair 815) and purchase details ready when contacting support.

© 2023 Oprisen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question