

[Manuals.plus](#) /

› [SNOW DEER](#) /

› SNOW DEER SD66E Heated Mittens User Manual

SNOW DEER SD66E

SNOW DEER SD66E Heated Mittens User Manual

INTRODUCTION

Thank you for choosing SNOW DEER Heated Mittens. These mittens are designed to provide warmth and comfort in cold weather conditions, featuring 7.4V 2200mAh rechargeable lithium batteries for up to 6 hours of continuous warmth. With three adjustable heat settings and touchscreen compatibility, they are suitable for various outdoor activities. Please read this manual thoroughly before use to ensure proper operation and maintenance.

WHAT'S IN THE BOX

Upon opening your SNOW DEER Heated Mittens package, you should find the following items:

- 1 Pair of SNOW DEER Heated Mittens
- 2 Rechargeable 7.4V 2200mAh Lithium Polymer Batteries
- 1 Dual Charger (US Standard)
- 1 Storage Bag
- 1 User Manual
- 1 Gift Box (packaging)

Gift box



Bag



2pes 2200MAH L-ion batteries



1 pair gloves



User Manual

US Standard Dual Charger

Image: All components included in the SNOW DEER Heated Mittens package.

SETUP INSTRUCTIONS

1. Charging the Batteries

Before first use, fully charge both 7.4V 2200mAh lithium polymer batteries. Connect the batteries to the provided dual charger and plug the charger into a standard US power outlet. The charging time is approximately 3-4 hours. The indicator lights on the charger will change to indicate a full charge.

2. Installing the Batteries

Locate the battery pocket inside the cuff of each mitten. Insert one fully charged battery into each pocket and securely connect the battery cable from the mitten to the battery. Close the pocket to ensure the battery is held firmly in place.



Touch Screen



Adjustable
Wrist Buckle



Battery Pocket



Comfortable Polyester



Windproof



Image: Detailed view of the mitten, highlighting the battery pocket, adjustable wrist buckle, and touchscreen area.

3. Adjusting Fit

The mittens feature an adjustable wrist buckle and a drawstring at the cuff to ensure a snug and comfortable fit. Adjust these to prevent cold air from entering and to keep warmth inside.

OPERATING INSTRUCTIONS

1. Powering On and Adjusting Heat Settings

To power on the mittens, press and hold the 'ON/OFF' button located on the back of the mitten for approximately 3 seconds. The mittens will typically start on the highest heat setting (indicated by three red LED lights).


- **High Heat (Red):** Press and hold the button for 3 seconds to turn on. Provides 140°-150°F for 2-2.5 hours.
- **Medium Heat (Orange):** Press the button once to switch from High to Medium. Provides 122°-131°F for 3-4 hours.
- **Low Heat (Green):** Press the button once to switch from Medium to Low. Provides 100°-113°F for 5-6 hours.

To turn off the mittens, press and hold the 'ON/OFF' button for approximately 3 seconds until the lights turn off.

Heating Elements Covers Back of Hands&Fingers till Finger Tips



7.4V 2200MAH Rechargeable
Li-ion Battery

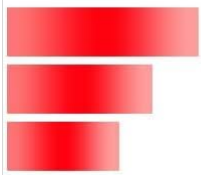


HIGH

2-2.5 Hours
140°-150°F



MEDIUM

3-4 Hours
122°-131°F

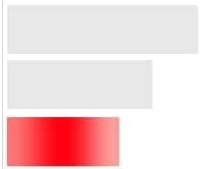

LOW

5-6 Hours
100°-113°F

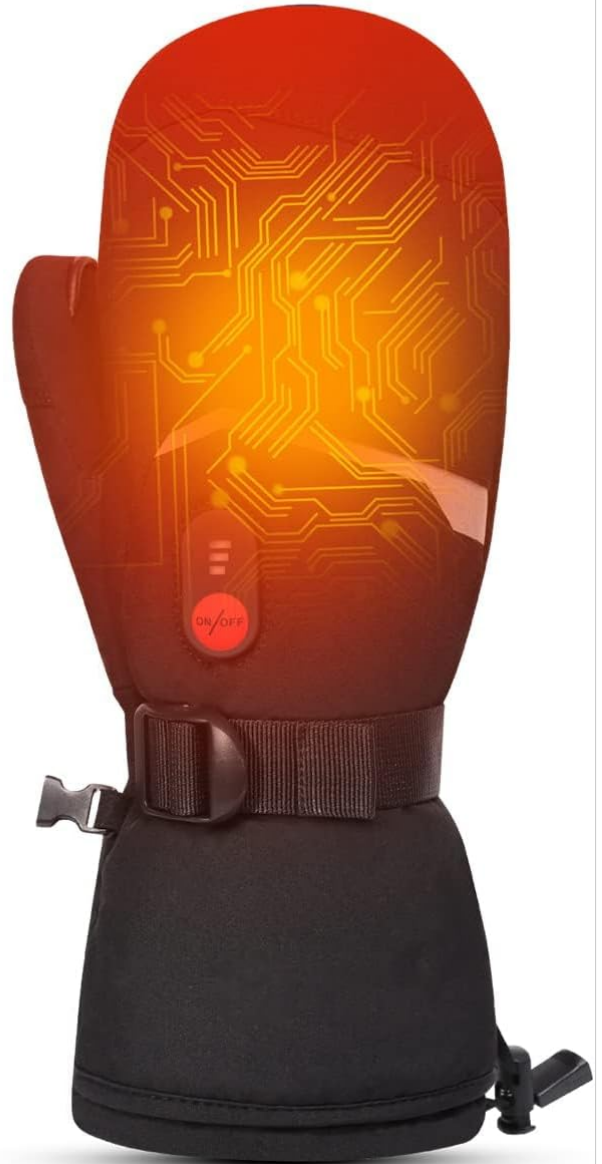


Image: Heating elements and heat level indicators with corresponding temperatures and durations.

2. Touchscreen Functionality

The thumb of each mitten is equipped with a sensitive touchscreen material, allowing you to operate smartphones, tablets, and other touchscreen devices without removing your mittens. This feature ensures you stay warm and connected.

Touch Screen for Any Smart Device



Image: User interacting with a smartphone while wearing the SNOW DEER Heated Mittens, showcasing the touchscreen feature.

MAINTENANCE

Cleaning Instructions

To maintain the longevity and performance of your heated mittens:

- Always remove batteries before cleaning.
- Hand wash the mittens gently with mild detergent in cold water. Do not machine wash, tumble dry, or bleach.
- Do not wring the mittens. Hang them to air dry completely before reinserting batteries or storing.
- Avoid dry cleaning or ironing.

Battery Care and Storage

Proper battery care is crucial for optimal performance and lifespan:

- Charge batteries fully every 3-6 months, even when not in use, to prevent deep discharge.
- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not expose batteries to water or fire.

TROUBLESHOOTING

If you encounter issues with your SNOW DEER Heated Mittens, please refer to the following common solutions:

- **Mittens not heating:** Ensure batteries are fully charged and correctly inserted into the pockets. Verify that the battery cables are securely connected to the mittens.
- **Short battery life:** Battery life varies with heat setting. High heat consumes power faster. Ensure batteries are fully charged before each use. Cold temperatures can also reduce battery efficiency.
- **Uneven heating:** Check that the heating elements are not creased or damaged. Ensure batteries are providing consistent power.
- **Touchscreen not responding:** Ensure the touchscreen area on the thumb is clean and dry. Make sure your finger makes full contact with the touchscreen material.

If problems persist after attempting these solutions, please contact SNOW DEER customer support.

SPECIFICATIONS

Model Name	SD66E
Brand	SNOW DEER
Color	Black
Material	Polyester
Battery Type	7.4V 2200mAh Lithium Polymer
Charging Time	3-4 Hours
Heat Settings	High (140°-150°F), Medium (122°-131°F), Low (100°-113°F)
Max Heat Duration	Up to 6 hours (on Low setting)
Recommended Uses	Camping, Hiking, Skiing, Snowboarding
Item Package Dimensions	14.7 x 5.3 x 3.7 inches
Package Weight	1.8 Pounds

WARRANTY AND SUPPORT

Warranty Information

SNOW DEER Heated Mittens come with a 1-Year Warranty from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

Customer Support

For any questions, concerns, or warranty claims, please contact SNOW DEER customer support through the retailer where the product was purchased or visit the official SNOW DEER website for contact information. Please have your purchase receipt and product model number (SD66E) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question