

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LTC](#) /

> [LTC MC741 Gaming Mini PC Instruction Manual](#)

LTC LTC MC741

LTC MC741 Gaming Mini PC Instruction Manual

Model: LTC MC741 | Brand: LTC

1. SAFETY INFORMATION

Please read all instructions carefully before using the LTC MC741 Mini PC. Keep this manual for future reference. Observe all warnings and instructions marked on the product.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight.
- Ensure proper ventilation to prevent overheating. Do not block ventilation openings.
- Use only the power adapter provided with the device.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- LTC MC741 Mini PC
- Power Adapter
- Quick Installation Guide

3. PRODUCT OVERVIEW

The LTC MC741 is a compact and powerful mini PC designed for various computing tasks, from gaming to productivity. It features a robust AMD Ryzen 7 8845HS processor and Radeon 780M graphics.

3.1 Front and Rear Panel Connections

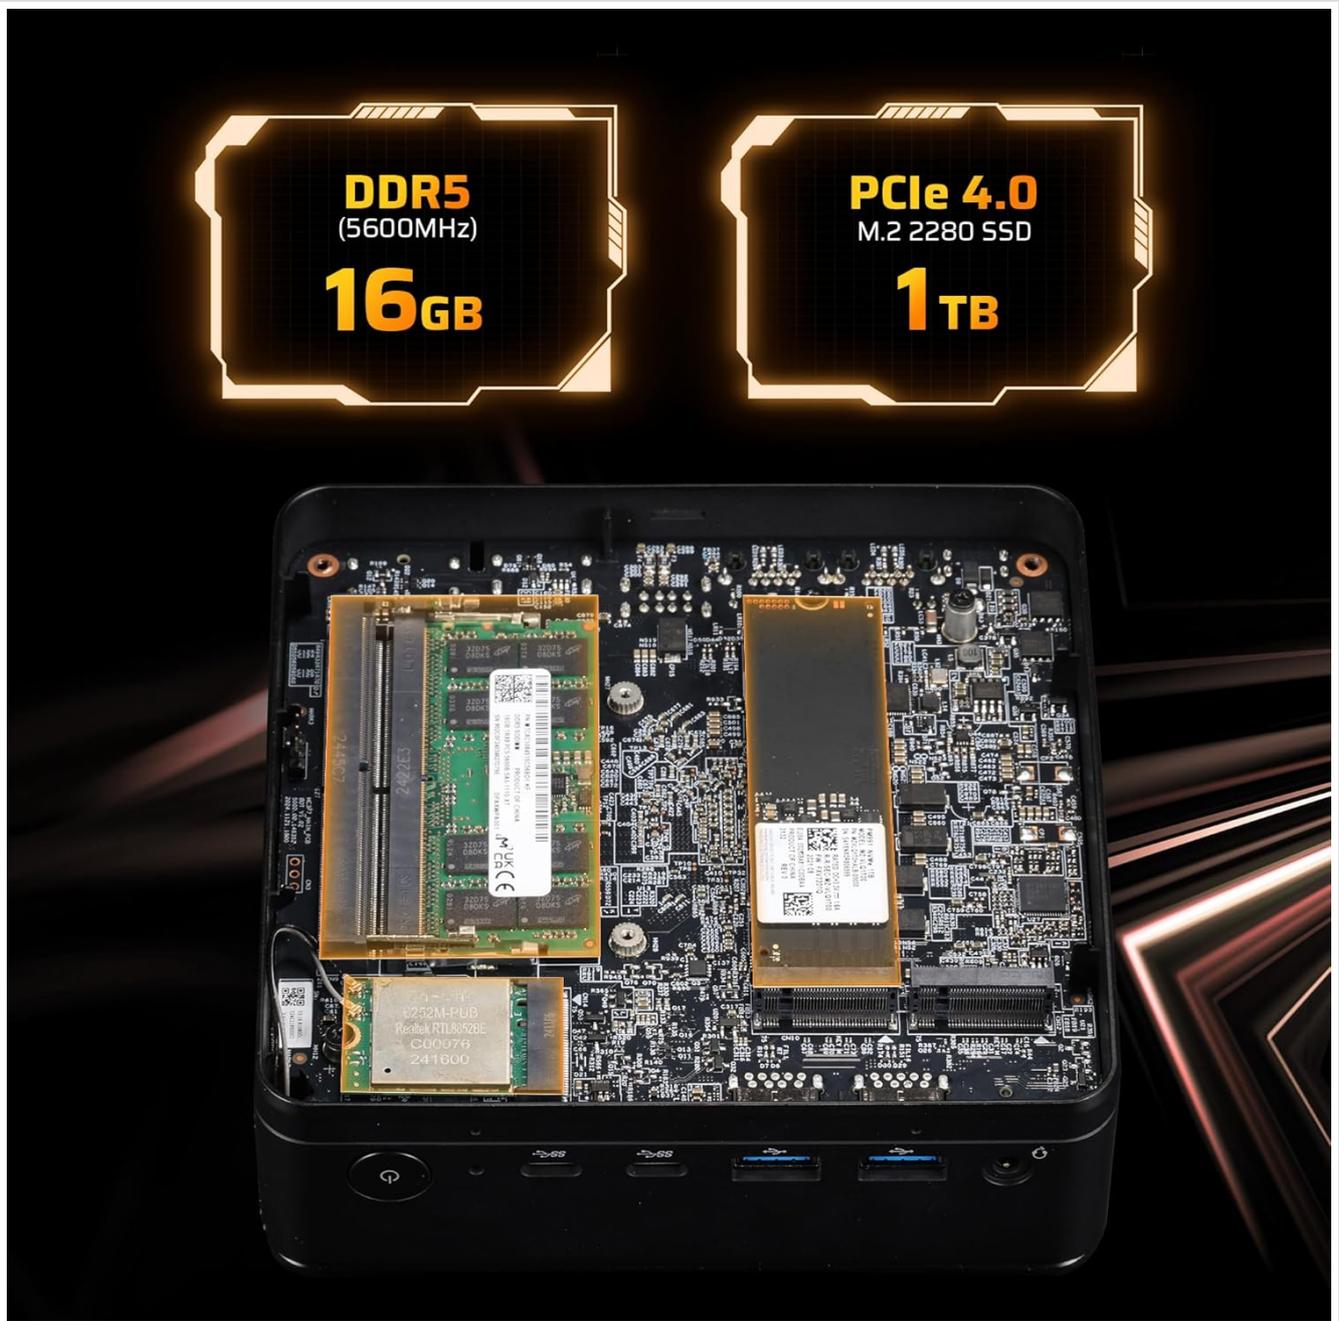


Image: Front and rear view of the LTC MC741 Mini PC, highlighting all available ports and connections.

- **Front Panel:** 3.5mm Audio Jack, 2x USB 3.2 Gen2 Type-A ports, 1x USB 3.2 Gen2 Type-C port, 1x USB4 Type-C port, Power Button, Power Indicator.
- **Rear Panel:** 2x USB 2.0 Type-A ports, HDMI 2.1 port, DisplayPort 1.4, 2.5Gbps RJ45 LAN port, DC Power Input.

3.2 Compact Design

WIFI 6 SUPPORTS MORE AND FASTER TERMINALS

Bluetooth 5.2 for greater stability and efficiency



Image: The compact dimensions of the LTC MC741 Mini PC, shown next to a coffee cup to illustrate its small footprint. The mini PC measures approximately 130 x 130 x 42 mm and weighs around 300g, making it highly portable and space-efficient.

3.3 Efficient Cooling System

MULTIPLE USB PORT



Image: An internal diagram illustrating the advanced thermal system with dual heat pipes and intelligent fan control.

Despite its small size, the MC741 incorporates an advanced thermal system with dual heat pipes and intelligent fan control to maintain optimal performance under heavy workloads while keeping noise levels low.

4. SETUP GUIDE

4.1 Initial Connection

1. Connect the power adapter to the DC input port on the rear panel of the Mini PC and then to a power outlet.
2. Connect your monitor(s) to the HDMI 2.1, DisplayPort 1.4, or USB4 Type-C ports on the rear panel.
3. Connect your keyboard and mouse to the available USB ports.
4. Press the Power Button on the front panel to turn on the Mini PC.

4.2 Operating System

The LTC MC741 Mini PC typically comes with a Linux operating system pre-installed. If you wish to install Windows or another operating system, please refer to the detailed instructions in the included Quick Installation Guide or the manufacturer's support website for guidance on creating bootable media and installing the OS.

5. OPERATING INSTRUCTIONS

5.1 Processor and Graphics



Image: Close-up of the AMD Ryzen 7 8845HS processor, highlighting its 8 cores, 16 threads, 5.1 GHz boost clock, and 45W TDP. The Mini PC is powered by an AMD Ryzen 7 8845HS processor (8 cores/16 threads, max boost 5.1GHz) with integrated Radeon 780M graphics. This configuration supports smooth multitasking, creative workloads, and 1080P gaming.

5.2 Triple Display Support

**LIGHTER THAN YOUR COFFEE CUP,
SMALLER THAN YOUR PLATE**

43mm



130mm

130mm

Weight: 425g

Image: The LTC MC741 Mini PC connected to three high-resolution monitors, demonstrating its triple display capabilities. Connect up to three high-resolution monitors simultaneously using the USB4.0 (4K@60Hz), HDMI 2.1 (8K@60Hz), and DisplayPort 1.4 (4K@120/240Hz) outputs. This is ideal for enhanced productivity or immersive entertainment setups.

5.3 Network and Wireless Connectivity



Image: Visual representation of the Mini PC's dual-band Wi-Fi 6 and Bluetooth 5.2 capabilities, illustrating seamless wireless connections.

The Mini PC supports 2.5Gbps Ethernet for stable wired connections, Wi-Fi 6 for low-latency wireless networking, and Bluetooth 5.2 for connecting peripherals and devices.

6. UPGRADING COMPONENTS

The LTC MC741 Mini PC offers upgradeability for its memory and storage components.

6.1 RAM and SSD Upgrade



Image: Internal view of the LTC MC741 Mini PC, highlighting the slots for upgradable DDR5 RAM and the PCIe 4.0 M.2 2280 SSD.

- The device comes with 16GB DDR5 RAM (5600MHz, dual-channel) and is expandable up to 32GB.
- It is equipped with a 1TB PCIe 4.0 NVMe SSD and is expandable up to 4TB.
- To access the internal components for upgrade, carefully remove the bottom cover by unscrewing the four screws. Exercise caution to avoid damaging any internal cables or components.

7. SPECIFICATIONS

| Feature | Specification |
|-----------|--|
| Processor | AMD Ryzen 7 8845HS (8 Cores, 16 Threads, Max Boost 5.1GHz) |
| Graphics | AMD Radeon 780M |

| | |
|------------------|---|
| RAM | 16GB DDR5 (5600MHz, Dual-Channel, Upgradable to 32GB) |
| Storage | 1TB PCIe 4.0 NVMe SSD (Upgradable to 4TB) |
| Operating System | Linux (User-installable Windows 11) |
| Video Output | 1x HDMI 2.1 (8K@60Hz), 1x DisplayPort 1.4 (4K@120/240Hz), 1x USB4 (4K@60Hz) |
| USB Ports | 2x USB 3.2 Gen2 Type-A, 1x USB 3.2 Gen2 Type-C, 1x USB4 Type-C, 2x USB 2.0 Type-A |
| Network | 2.5Gbps Ethernet, Wi-Fi 6, Bluetooth 5.2 |
| Audio | 3.5mm Audio Jack |
| Dimensions | 130 x 130 x 42 mm |
| Weight | Approx. 300g |

8. TROUBLESHOOTING

If you encounter issues with your LTC MC741 Mini PC, refer to the following common troubleshooting steps:

- **No Power:** Ensure the power adapter is securely connected to both the Mini PC and a working power outlet. Try a different outlet if necessary.
- **No Display:** Check all display cable connections (HDMI, DisplayPort, USB4) to your monitor(s). Ensure the monitor is set to the correct input source. Try a different cable or monitor if possible.
- **No Internet Connection:** For wired connections, ensure the Ethernet cable is securely plugged into both the Mini PC and your router/modem. For Wi-Fi, check if Wi-Fi is enabled in the operating system settings and ensure you are connected to the correct network with the right password.
- **Peripheral Not Detected:** Ensure USB devices are properly connected. Try a different USB port. For Bluetooth devices, ensure Bluetooth is enabled and the device is in pairing mode.
- **Overheating:** Ensure the Mini PC's ventilation openings are not blocked. Operate the device in a well-ventilated area.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or visit the official LTC website. Keep your purchase receipt as proof of purchase for warranty claims.