

Manuals.plus /

› Dpofirs /

› Dpofirs 64GB MP3 Player User Manual

Dpofirs Dpofirsy401ca8urb

Dpofirs 64GB MP3 Player User Manual

Model: Dpofirsy401ca8urb

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Dpofirs 64GB MP3 Player. This device combines a portable music player with advanced features, including a 4.99-inch HD touchscreen, Wi-Fi connectivity, Bluetooth 5.0, a 16MP camera, FM radio, e-book reader, and voice recorder. It operates on for 12 system, offering a versatile multimedia experience.

The Dpofirs MP3 Player is designed for music enthusiasts and users seeking a feature-rich portable device. It comes pre-installed with popular applications and supports various audio and video formats, making it suitable for entertainment, learning, and communication.

PACKAGE CONTENTS

Please check the package carefully to ensure all items are present:

- 1 x Dpofirs 64GB MP3 Player
- 1 x USB Power Cable (Type-C)
- 1 x User Manual

PRODUCT OVERVIEW

Familiarize yourself with the key components of your Dpofirs MP3 Player.





Figure 1: Front View. This image shows the front of the Dpofirs MP3 Player, highlighting its 4.99-inch HD touchscreen with various application icons visible, including Clock, Gallery, Calculator, Settings, Music, Calendar, Sound Recorder, Camera, Files, Chrome, Gmail,

and FM radio. The device has a sleek black finish.



Figure 2: Charging Port. A close-up view of the bottom edge of the MP3 player, showing the USB Type-C charging port. This port is used for charging the device and for data transfer.





Figure 3: Back View. The rear side of the MP3 player, featuring the 16MP camera lens prominently at the top center. A 'RESET' button and microphone are also visible, along with regulatory markings.

SETUP

1. **Charging the Device:** Before first use, fully charge the MP3 player using the provided USB Type-C cable and a compatible USB power adapter (not included). Connect the Type-C end to the player's charging port (Figure 2) and the USB-A end to the power adapter. The charging indicator will show the charging status.
2. **Powering On/Off:** Press and hold the Power button (usually on the side) for a few seconds to turn the device on or

off. A short press will turn the screen on/off.

3. **Initial Setup:** Upon first power-on, follow the on-screen prompts to select your preferred language, connect to a Wi-Fi network, and set up basic device preferences.
4. **Inserting a Micro Storage Card (Optional):** If you wish to expand storage beyond the built-in 64GB, insert a Micro Storage Card (up to 128GB, not included) into the designated slot. Ensure the card is inserted correctly to avoid damage.

OPERATING INSTRUCTIONS

Navigation

The Dpofirs MP3 Player features a responsive 4.99-inch HD touchscreen. Swipe left/right to navigate between home screens, tap icons to open applications, and use standard touch gestures (pinch-to-zoom, long-press) for various functions.

Wi-Fi Connectivity

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list and enter the password if prompted.
4. Once connected, you can access online services like streaming music (e.g., Spotify) or browsing the internet.

Bluetooth 5.0 Transmission

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth headphones, speaker, or other device is in pairing mode.
4. Select the device from the list to pair. Bluetooth 5.0 supports two-way file transfer with compatible devices.

Using the Camera

The device is equipped with a 16MP rear camera (Figure 3). Tap the **Camera** icon on the home screen to open the camera application. You can take high-definition photos and videos. Use the on-screen controls to switch between photo/video modes, adjust settings, and capture media.

Multimedia Playback

- **Music:** Open the **Music** app to browse and play audio files stored on the device or streaming services.
- **Video:** The device supports 1080P HD video playback and is compatible with formats such as AVI, MKV, RMVB, and MP4. Use the pre-installed video player or download a preferred one.

Additional Features

- **FM Radio:** Access the **FM Radio** app to listen to local radio stations.
- **E-Book Reader:** Use the e-book reader application to view compatible e-book files.
- **Recorder:** The built-in microphone allows for voice recording via the **Sound Recorder** app.
- **Parental Control:** The device includes parental control features to manage usage and content access. Refer to the device's settings for configuration options.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and body of the device. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid exposing the device to extreme temperatures. Charge the device regularly and avoid completely draining the battery frequently.
- **Software Updates:** Periodically check for system updates in **Settings** to ensure optimal performance and access to the latest features and security patches.
- **Storage Management:** Regularly manage your files and applications to prevent storage from becoming full. Transfer large files to a computer or external storage, or utilize the Micro Storage Card slot.

TROUBLESHOOTING

Problem	Solution
Device does not turn on.	Ensure the battery is charged. Connect the device to a power source and try again. If unresponsive, press and hold the Power button for 10-15 seconds to force a restart.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in Settings. Ensure the Wi-Fi password is correct. Restart your Wi-Fi router and the MP3 player. Try connecting to a different Wi-Fi network if available.
Bluetooth device not pairing.	Ensure Bluetooth is enabled on both devices and they are in pairing mode. Keep devices within close range. Try restarting both devices.
Applications are slow or crashing.	Close unused applications. Clear app cache in Settings > Apps. Restart the device. Ensure sufficient free storage space.
Insufficient storage space.	Delete unnecessary files or applications. Transfer media to a computer. Insert a Micro Storage Card for additional space.

SPECIFICATIONS

Feature	Detail
Model Number	Dpofirsy401ca8urb
Material	Zinc Alloy
Dimensions	Approx. 132x67.5x12mm / 5.20x2.66x0.47in
Color	Black
Battery	Built-in 2500mAh Lithium Battery
Operating System	for 12
Display Screen	4.99 Inch Full Color Touchscreen, 1080P HD, 120Hz Refresh Rate
Bluetooth	BT5.0
WiFi	2.4GHz / 5GHz Dual Band
RAM	4GB
Internal Storage (ROM)	64GB
Memory Expansion	Up to 128GB Micro Storage Card (Card Not Included)
Camera	16MP Rear Camera
Charging Port	TYPE C USB2.0
Headphone Jack	TYPE C
Speaker	1W 8ohm (Built-in)
Microphone	Built-in Microphone
Software Language	Simplified Chinese, English, and Other Multi-Country Languages

WARRANTY INFORMATION

The Dpofirs 64GB MP3 Player comes with a manufacturer's warranty for 90 days from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Dpofirs customer service. You can also visit the official Dpofirs store on Amazon for more product information and support resources.

Visit the Dpofirs Store on Amazon