



Manuals.plus /

› OSTBA /

› OSTBA 2-Slice Sandwich Maker ABS07-T User Manual

OSTBA ABS07-T

OSTBA 2-Slice Sandwich Maker ABS07-T User Manual

Model: ABS07-T

1. INTRODUCTION

Thank you for purchasing the OSTBA 2-Slice Sandwich Maker. This appliance is designed for quick and easy preparation of toasted sandwiches with its non-stick triangle plates. Please read this manual thoroughly before use to ensure safe and efficient operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

The OSTBA ABS07-T Sandwich Maker is designed for convenience and efficiency. Below are its key components and features:



Figure 1: OSTBA 2-Slice Sandwich Maker (Closed View)

This image shows the compact, closed design of the sandwich maker, ready for storage or use.

NON-STICK PLATES

Create tasty snacks on an easy-to-clean surface.



Figure 2: Non-stick Triangle Plates

The appliance features innovative non-stick triangle plates that divide sandwiches into sealed sections, preventing spillage and ensuring easy cleanup.

750W QUICK HEATING

Fast & steady heating for perfectly toasted sandwiches in minutes.



Figure 3: 750W Quick Heating

Equipped with a 750W heating element, the sandwich maker heats up rapidly for efficient cooking.



Figure 4: Indicator Lights, Cool Touch Handle, and Locking Latch

Indicator lights signal power and readiness. The cool-touch handle ensures safe operation, and the locking latch secures the plates during cooking and storage.

SLEEK & COMPACT



Figure 5: Sleek & Compact Design

The compact design (8.86"D x 3.35"W x 8.58"H) allows for easy storage and minimal counter space usage.

WIRE WRAP STORAGE

Power cord storage and vertical placement can save space.



Figure 6: Wire Wrap Storage

The integrated cord wrap storage design helps keep your kitchen tidy.

4. SETUP

Before first use, please follow these steps:

1. **Unpack:** Carefully remove the sandwich maker and all packaging materials.
2. **Clean Plates:** Wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly.
3. **Exterior Cleaning:** Wipe the exterior of the appliance with a soft, damp cloth.
4. **First Heat Cycle:** Plug the appliance into a standard 120V electrical outlet. The red indicator light will illuminate, indicating the unit is heating. Allow the unit to heat for approximately 3-5 minutes until the green indicator light illuminates, signaling it has reached the optimal cooking temperature. This initial heating may produce a slight odor or smoke, which is normal and will dissipate.
5. **Cool Down:** Unplug the appliance and allow it to cool completely.
6. **Final Wipe:** Once cool, wipe the plates again with a damp cloth. The appliance is now ready for use.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare your perfect toasted sandwiches:

1. **Preheat:** Close the sandwich maker and plug it into a 120V electrical outlet. The red indicator light will turn

on. Wait for the green indicator light to illuminate, indicating the appliance has reached the correct cooking temperature.

2. **Prepare Ingredients:** While the unit preheats, prepare your sandwich ingredients. For best results, use standard-sized bread slices. You may butter the outer sides of the bread for extra crispiness.
3. **Place Sandwich:** Once the green light is on, carefully open the sandwich maker using the cool-touch handle. Place one slice of bread on each bottom plate, add your desired fillings, and then top with the remaining bread slices.
4. **Close and Lock:** Gently close the lid. The locking latch can be used to secure the lid, especially if your sandwich is thick. Do not force the lid closed.
5. **Cook:** Allow the sandwich to cook for approximately 2-5 minutes, or until the bread is golden brown and the fillings are heated through. Cooking time may vary based on ingredients and desired crispiness. The green indicator light may cycle on and off during cooking to maintain temperature.
6. **Remove Sandwich:** Once cooked, open the lid and carefully remove the sandwich using a heat-resistant plastic or wooden utensil. *Do not use metal utensils as they can damage the non-stick coating.*
7. **Repeat:** If making more sandwiches, close the lid and wait for the green indicator light to illuminate again before placing the next sandwich.
8. **Unplug:** When finished, unplug the appliance from the outlet and allow it to cool completely before cleaning.

Demonstration Video

Your browser does not support the video tag.

This video demonstrates the use of the OSTBA Sandwich Maker with non-stick triangle plates, showing how to prepare a sandwich and the resulting toasted product.

6. MAINTENANCE AND CLEANING

Proper care ensures the longevity of your sandwich maker:

1. **Always Unplug:** Ensure the appliance is unplugged and completely cool before cleaning.
2. **Clean Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn residue, dampen a cloth with a small amount of cooking oil and gently rub the area, then wipe clean with a damp cloth. Do not use abrasive cleaners or scouring pads, as they can damage the non-stick surface.
3. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Storage:** Once clean and dry, the sandwich maker can be stored vertically to save space, utilizing its cord wrap feature.

7. TROUBLESHOOTING

If you encounter any issues with your sandwich maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the appliance is securely plugged into a working 120V outlet. Check the circuit breaker. If the issue persists, contact customer support.
Sandwiches are not cooking evenly.	Insufficient preheating; uneven distribution of ingredients; too much filling.	Ensure the green indicator light is on before placing sandwiches. Distribute fillings evenly. Avoid overfilling the plates.
Lid does not close properly.	Too much filling; food obstruction.	Reduce the amount of filling. Ensure no food is obstructing the hinge or plates. Do not force the lid closed.
Smoke or odor during initial use.	Manufacturing residues burning off.	This is normal for first use and will dissipate. Ensure adequate ventilation.

8. SPECIFICATIONS

- **Model:** ABS07-T
- **Brand:** OSTBA
- **Wattage:** 750 watts
- **Voltage:** 120 Volts
- **Material:** Aluminum (plates)
- **Product Dimensions:** 8.86"D x 3.35"W x 8.58"H
- **Item Weight:** 2.5 Pounds
- **Special Features:** Cool Touch Handle, Lightweight, Non-stick Coating

9. WARRANTY INFORMATION

This OSTBA Sandwich Maker comes with a **Limited Warranty**. For specific terms, conditions, and duration of the warranty, please refer to the warranty card included with your product packaging or contact OSTBA customer support. Keep your purchase receipt as proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

For any questions, assistance, or troubleshooting not covered in this manual, please contact OSTBA customer support. You can typically find contact information on the product packaging, the official OSTBA website, or by visiting the OSTBA Store on Amazon.