

[Manuals.plus](#) /

› [Robo Alive](#) /

› Robo Alive Horror Running Hand by ZURU Instruction Manual

Robo Alive 71166

Robo Alive Horror Running Hand by ZURU Instruction Manual

INTRODUCTION

The Robo Alive Horror Running Hand by ZURU (Model 71166) is a robotic crawling toy designed to move autonomously. This manual provides essential information for its safe setup, operation, and maintenance, ensuring you can enjoy the product as intended.



Image: The Robo Alive Horror Running Hand, a realistic robotic hand designed for crawling action.

SAFETY INFORMATION

WARNING: CHOKING HAZARD -- Small parts. Not for children under 3 years.

WHAT'S IN THE BOX

Upon opening the package, you should find the following components:

- 1 electronic hand



Image: Front view of the product packaging, showing the Robo Alive Horror Running Hand.



Image: Back view of the product packaging, detailing features and other available products.

SETUP

Battery Installation

The Robo Alive Horror Running Hand requires 3 AAA batteries (not included) for operation. A small Phillips head screwdriver is needed for installation.

1. Locate the battery compartment. This is typically found on the underside of the hand.
2. Using a small Phillips head screwdriver, carefully unscrew the battery compartment cover. The screw may be small and discreetly placed.
3. Insert 3 AAA batteries, ensuring correct polarity (+ and - symbols) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw. Do not overtighten.



Image: A detailed view of the Robo Alive Horror Running Hand, showing its realistic design. The battery compartment is located on the underside.

OPERATING INSTRUCTIONS

Basic Operation

Once batteries are installed, the Robo Alive Horror Running Hand is ready for use.

1. Locate the ON/OFF switch, usually found near the battery compartment on the underside of the hand.
2. Flip the switch to the "ON" position.
3. Place the Robo Alive Horror Running Hand on a flat, smooth surface.
4. The hand will begin to move automatically, running, creeping, and crawling across the floor. It operates at one speed and in one general direction, often moving in a wide arc. The movement mimics a spider, with each finger

moving in a forward motion.

5. Note that the toy produces a mechanical sound during operation.
6. The hand may tip over if it encounters obstacles like rug edges or doorways.
7. To stop operation, flip the switch to the "OFF" position.



Image: The Robo Alive Horror Running Hand in motion, crawling across a wooden floor.

Your browser does not support the video tag.

Video: Official product overview demonstrating the Robo Alive Running Hand's movement.

MAINTENANCE

- **Cleaning:** Clean the toy with a dry, soft cloth. Do not use water or cleaning solutions, and do not immerse the toy in water.
- **Battery Care:** If the toy will not be used for an extended period, remove the batteries to prevent potential leakage and damage to the product.

TROUBLESHOOTING

Issue	Solution
Hand does not move or moves slowly.	Check battery installation and replace with fresh AAA batteries if needed. Ensure the ON/OFF switch is in the "ON" position.
Hand frequently tips over.	Operate the hand on smooth, flat surfaces. Avoid rugs, carpets, or uneven terrain, as these can cause instability.
Hand is noisy during operation.	The mechanical sound is a normal characteristic of the product's operation due to its internal motor and crawling mechanism. This is not a defect.

SPECIFICATIONS

Feature	Detail
Brand Name	Robo Alive
Model Name	Running Hand
Model Number	71166
UPC	193052088987
Item Dimensions (L x W x H)	6.3"L x 6.3"W x 6.1"H
Material Type	Plastic
Operation Mode	Automatic
Recommended Age	3 years and up
Included Components	1 electronic hand

WARRANTY AND SUPPORT

Warranty: No specific warranty information is provided with this product. Please retain your proof of purchase for any potential claims.

Support: For further assistance or inquiries regarding the Robo Alive Horror Running Hand, please contact ZURU customer service. Refer to the product packaging or the official ZURU website for current contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question