

[Manuals.plus](#) /

› [Costzon](#) /

› Costzon 61-Key Electric Digital Piano Keyboard: Instruction Manual

Costzon MU10138

Costzon 61-Key Electric Digital Piano Keyboard: Instruction Manual

Brand: Costzon | Model: MU10138

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Costzon 61-Key Electric Digital Piano Keyboard. Designed for beginners and advanced players alike, this versatile instrument offers a wide range of musical functions to enhance your learning and playing experience.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Electronic Keyboard
- 1 x Keyboard Stand
- 1 x Stool
- 1 x Music Stand
- 1 x Power Adaptor
- 1 x Headphone
- 1 x Microphone
- 1 x Note Sticker
- 1 x User Manual



Image: The complete Costzon 61-Key Electric Digital Piano Keyboard set, including the keyboard, adjustable stand, padded stool, music stand, headphones, microphone, power adapter, and note stickers.

SETUP INSTRUCTIONS

1. **Assemble the Keyboard Stand:** Follow the instructions in the user manual to assemble the adjustable keyboard stand. Ensure all screws are securely fastened.
2. **Assemble the Stool:** Assemble the padded stool according to the provided instructions.
3. **Attach the Keyboard:** Place the electronic keyboard securely onto the assembled stand.
4. **Connect Power:** Connect the power adapter to the keyboard's power socket and plug it into a standard electrical outlet. Alternatively, insert 4 x AA batteries (not included) into the battery compartment for portable use.
5. **Attach Music Stand:** Insert the music stand into the designated slot on the keyboard.
6. **Connect Accessories:**
 - Plug the microphone into the microphone socket.
 - Plug the headphones into the audio output socket for private practice.
7. **Apply Note Stickers (Optional):** For beginners, carefully apply the provided note stickers to the keys as guided by the sticker sheet.

Dual Keyboard Function

Press “SPLIT” button, the keyboard is divided into two parts(left and right) for separate playing.



Image: Illustration of the keyboard stand assembly and keyboard placement, highlighting the ease of setup.

Adjustable Stand & Stool



Image: The keyboard can be powered via the included power adapter or by inserting 4 AA batteries (not included) for portable use.

2 Power Supply Methods



Power Adapter

OR



4 AA Batteries
(Not Included)

Image: Detailed view of the keyboard's control panel, showing buttons for various functions and external sockets for power, audio output, audio input, and microphone.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the **POWER** button to turn the keyboard on or off. The LED display will illuminate.
2. **Adjust Volume:** Use the **VOLUME +/-** buttons to adjust the master volume.
3. **Select Tones/Rhythms:** Use the number pad or **TONE/RHYTHM** buttons to select from 200 tones and 200 rhythms. Refer to the included manual for a complete list.
4. **Teaching Mode & Light-up Keys:** Activate the teaching mode and utilize the light-up keys for guided learning. The keys will illuminate to indicate which notes to play.
5. **Dual Keyboard Function:** Press the **SPLIT** button to divide the keyboard into two parts for duet playing or separate voices.
6. **Demo Songs:** Press **DEMO ONE** or **DEMO ALL** to play pre-loaded demonstration songs. There are 70 demos available.
7. **Recording and Playback:** Use the **RECORD** button to record your performance and **PLAY** to listen back.

8. **Metronome:** Activate the metronome function to assist with timing and rhythm practice.



Teaching Mode & Light-up Keys

Press the OKON key to enable the strumming teaching function

Image: Hands playing the keyboard, illustrating the lighted keys feature which guides beginners by illuminating the notes to be played.

Convenient to Control & Connect



- | | | | |
|---------------|---------------|------------|---------------|
| 1. Keyboard | 8. Vibrato | 15. Volume | 22. Drum |
| 2. Power | 9. Percussion | 16. Tempo | 23. OKON |
| 3. Start/Stop | 10. Demo One | 17. Trans | 24. Split |
| 4. Sync | 11. Demo All | 18. Prog | 25. Metronome |
| 5. Fill-in | 12. Number | 19. Record | 26. Rhythm |
| 6. ON/OFF | 13. Single | 20. Play | |
| 7. Sustain | 14. Finger | 21. Tone | |

Image: Two individuals playing the keyboard together, showcasing the dual keyboard function where the keyboard is split into two parts for separate playing.

Your browser does not support the video tag.

Video: A demonstration of the 61-key keyboard piano's various functions and features, including different tones, rhythms, and the digital display. This video is provided by the seller.

Your browser does not support the video tag.


Video: A short preview demonstrating the sound of the lighted keys piano keyboard. This video is provided by the seller.

KEY FEATURES

- **Musical Functions:** Features 200 rhythms, 200 tones, and 70 demos, along with sustain, vibrato, record, and metronome functions.
- **Teaching Mode & Light-up Keys:** Innovative light-up keys and teaching mode guide beginners step-by-step, complemented by note stickers for easier learning.
- **Dual Keyboard Function:** Allows the keyboard to be split into two parts for duet playing or separate voice assignments.
- **Power Supply Options:** Can be powered by a power adapter or 4 AA batteries (not included). Includes multiple sockets for headphones, microphones, and other devices.

- **Adjustable Stand & Stool:** Comes with a height-adjustable stand and stool to accommodate users of various ages for optimal posture and comfort.
- **Faux Wood Grain Keys:** Designed for comfortable touch and natural texture.

Different Musical Functions

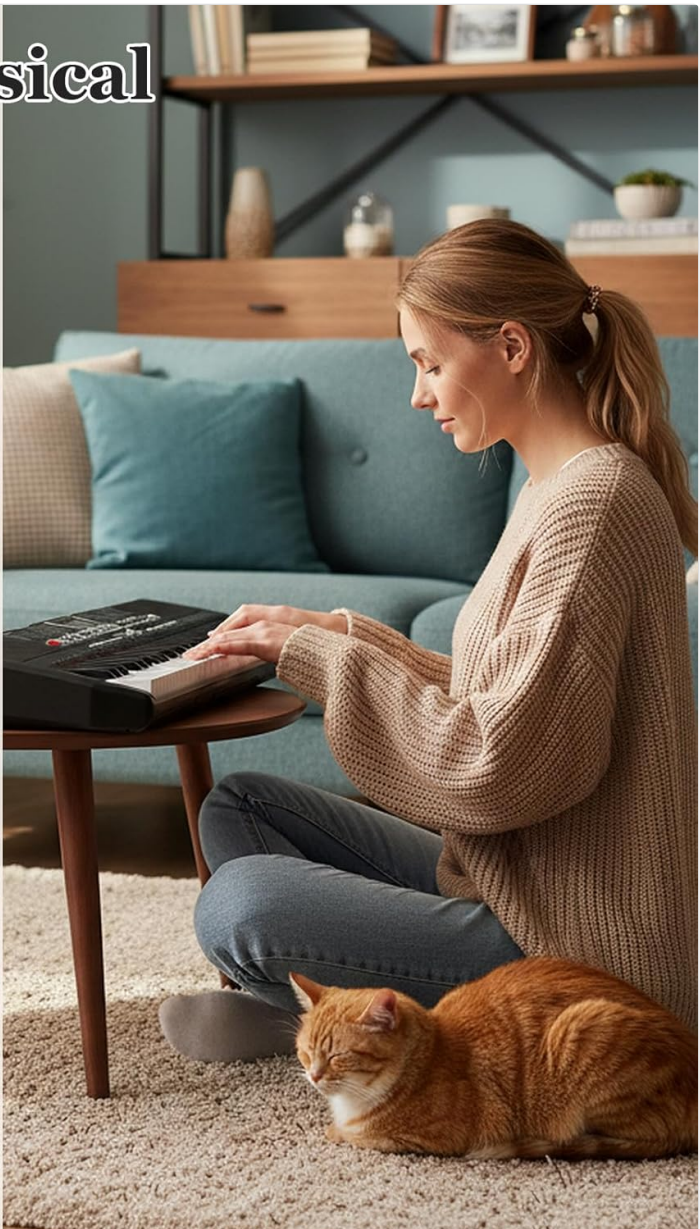









 200 Tones	 200 Rhythms
 70 Demos	 Dual Voices
 Sustain	 Vibrato
 Record	 Metronome

Image: An infographic highlighting the diverse musical functions of the keyboard, such as 200 tones, 200 rhythms, 70 demos, dual voices, sustain, vibrato, record, and metronome.



Image: A close-up view of the keyboard's keys, showcasing their faux wood grain texture for a comfortable and natural playing feel.

SPECIFICATIONS

Feature	Detail
Item Weight	14.5 Pounds (6.5 kg)
Model Name	Piano Keyboard
Product Dimensions	11"D x 33.5"W x 5"H (85 x 28 x 12 cm)
Power Source	Battery Powered & Corded Electric
Manufacturer	Costzon
Item model number	MU10138
Number of Keys	61
Skill Level	All

Special Feature	Digital Display, Lighted Keys, Portable
Age Range (Description)	Adult (suitable for children, teenagers, and adults)
Keyboard Stand Size	25" x 8" x 22"-27.5" (63 x 20 x 56-70 cm)
Stool Size	16" x 12" x 13.5-19" (40 x 30 x 34-48 cm)



Image: A diagram illustrating the dimensions of the keyboard, its adjustable stand, and the accompanying stool, providing clear measurements for setup and use.

MAINTENANCE

- Keep the keyboard clean by wiping it with a soft, dry cloth.
- Avoid exposing the keyboard to direct sunlight, high temperatures, or excessive moisture.
- Do not use abrasive cleaners or solvents.
- When not in use, cover the keyboard to protect it from dust.

TROUBLESHOOTING

If you encounter any issues, please refer to the following common troubleshooting tips:

- **No Sound:**
 - Ensure the keyboard is powered on and the volume is turned up.
 - Check if headphones are plugged in; if so, unplug them to enable speaker output.
 - Verify the power adapter is securely connected or that batteries are correctly inserted and not depleted.
- **Keys Not Lighting Up:**
 - Ensure the keyboard is in a mode that supports lighted keys (e.g., teaching mode).
 - Check the LED On/Off button if available.
- **Microphone Not Working:**
 - Ensure the microphone is securely plugged into the correct socket.
 - Check the microphone's volume settings on the keyboard.

For further assistance, please consult the full user manual or contact Costzon customer support.

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the contact details provided in your original product packaging or visit the official Costzon website. Keep your purchase receipt for warranty claims.