

Bissell 4329F

BISSELL CrossWave Edge Cordless Wet Dry Vacuum (Model 4329F) Instruction Manual

PRODUCT OVERVIEW

The BISSELL CrossWave Edge Cordless Wet Dry Vacuum (Model 4329F) is designed to vacuum and wash multiple sealed hard floor surfaces and refresh area rugs simultaneously. This cordless unit offers convenience and efficient cleaning with specialized features for edge-to-edge cleaning and easy maintenance.

- **Vacuum and Wash in One Step:** Combines vacuuming and mopping to clean wet and dry messes on various hard surfaces and area rugs.
- **Edge-to-Edge Cleaning:** Features ZeroGap Technology on the brush roll to clean close to walls and baseboards.
- **Cordless Operation:** Provides freedom of movement without being tethered to an outlet.
- **Multi-Surface Capability:** Transitions smoothly between hard floors (tile, sealed wood, laminate) and area rugs.
- **Easy Maintenance:** Equipped with Tangle-Free Technology to minimize hair wrap on the brush roll and a Self-Cleaning mode for quick cleanup.

Vac and mop in one step

Save time by vacuuming and mopping at the same time. The CrossWave Edge Cordless tackles dust, dirt, and everyday messes in one pass for faster, smarter cleaning.



The CrossWave Edge Cordless vacuum and mops in one step, effectively cleaning both wet and dry messes on hard floors.

Clean all the way to the edge

ZeroGap Technology cleans right up to walls, baseboards, and trim. Get a thorough clean with a zero millimeter gap, reaching corners and edges that some traditional vacuums miss.



ZeroGap Technology allows for thorough cleaning right up to edges and baseboards.

WHAT'S INCLUDED

Your BISSELL CrossWave Edge Cordless Wet Dry Vacuum package includes the following components:

- CrossWave Edge Cordless Wet Dry Vacuum Unit
- Charging Dock
- FreshStart Antimicrobial Filter
- Edge Cleaning Brush Roll
- Hard Floor Sanitize Formula (Trial Size)
- Storage & Rinse Tray



The complete package includes the vacuum, charging dock, cleaning formula, and additional accessories.

SETUP INSTRUCTIONS

Assembly

1. **Attach Handle:** Insert the handle into the main body of the vacuum until it clicks securely into place.
2. **Install Clean Water Tank:** Fill the clean water tank with water and the recommended BISSELL cleaning formula. Align the tank with the grooves on the back of the machine and push it firmly until it seats.
3. **Install Dirty Water Tank:** Ensure the dirty water tank is empty and properly seated in the front of the machine.
4. **Check Brush Roll and Filter:** Verify that the brush roll is correctly installed in the foot of the machine and the FreshStart filter is in place.



Ensure all components are securely assembled before first use.

Initial Charging

Before first use, fully charge the vacuum. Place the unit on the charging dock. The battery indicator lights will illuminate to show charging status. A full charge typically takes several hours.



Place the vacuum on the charging dock to ensure it is fully charged before operation.


OPERATING INSTRUCTIONS

Preparing for Cleaning

1. **Fill Clean Water Tank:** Remove the clean water tank from the back of the machine. Fill it with warm tap water to the 'Water' fill line and add the appropriate BISSELL cleaning formula to the 'Formula' fill line. Do not use hot or boiling water.
2. **Power On:** Press the power button located on the handle to turn on the machine.

Cleaning Hard Floors

For hard floors, hold the spray trigger to dispense cleaning solution as you move the machine forward and backward. Release the trigger for dry passes to pick up excess solution and dry the floor.

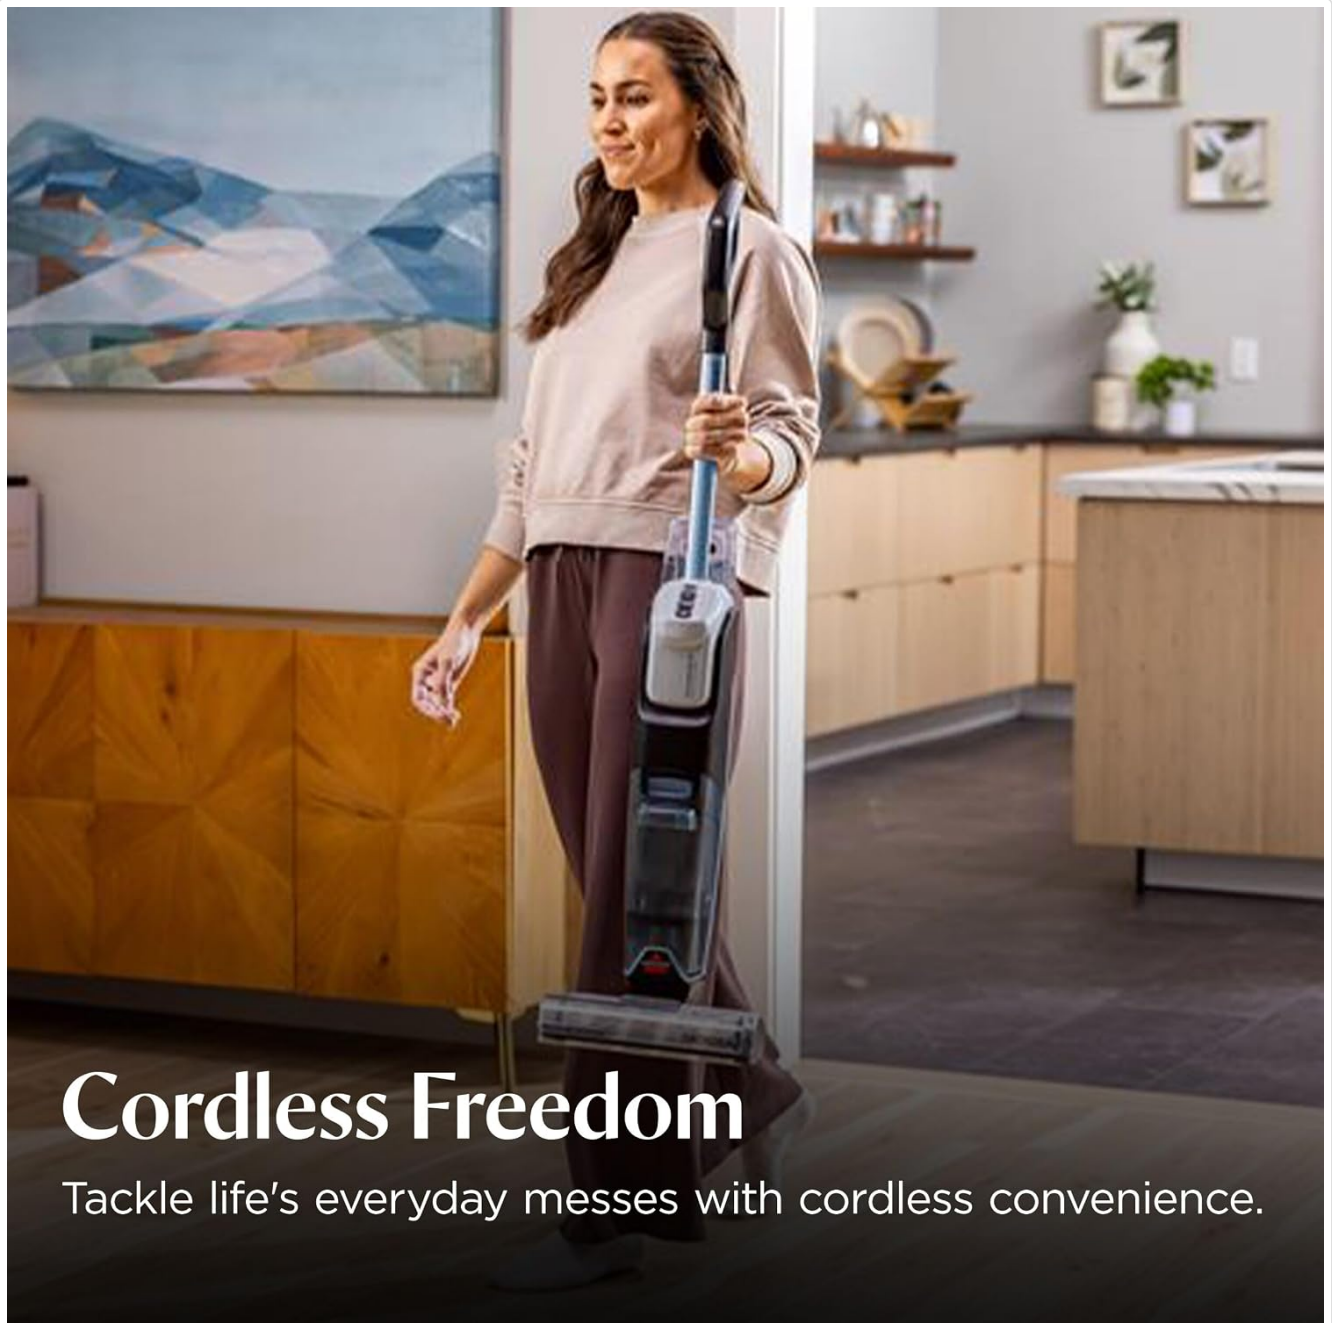

Cordless Freedom

Tackle life's everyday messes with cordless convenience.

Clean hard floors by holding the spray trigger for wet passes and releasing for dry passes.

Cleaning Area Rugs

For area rugs, ensure the machine is in the appropriate mode (if applicable, otherwise proceed with standard operation). Move the machine slowly over the rug, holding the spray trigger for a light application of solution to refresh the fibers. Release the trigger for dry passes to extract moisture.

Master multiple surfaces

Handles hardwood, tile, laminate, linoleum, area rugs, and rubber mats. One powerful wet dry vac adapts to multiple surfaces for streak-free anywhere in your home.



The vacuum can also refresh area rugs with a light application of cleaning solution.

Edge Cleaning

To clean along edges and baseboards, position the machine with the brush roll's edge cleaning side facing the wall. The ZeroGap Technology ensures thorough cleaning in these areas.



One Tool for Multiple Surfaces

Effortlessly transitions from hard floors to area rugs.

Utilize the edge cleaning feature for a complete clean along walls and furniture.

Using BISSELL Cleaning Solutions

For optimal cleaning results and to ensure the longevity of your machine, always use BISSELL brand cleaning formulas. These formulas are specifically designed for use with BISSELL CrossWave machines.

Your browser does not support the video tag.

Video: Ask A Chemist: Why Choose A BISSELL Solution Over Water? This video from BISSELL Homecare Inc. explains the benefits of using BISSELL cleaning solutions for effective cleaning and machine maintenance.

MAINTENANCE AND CARE

Emptying and Cleaning Dirty Water Tank

After each use, remove the dirty water tank, empty its contents, and rinse it thoroughly with water. Allow it to air dry before reinserting.

Cleaning the Brush Roll

The Tangle-Free Technology brush roll helps minimize hair wrap. To clean, remove the brush roll cover and the brush roll. Rinse it under running water to remove any debris. Ensure it is completely dry before reassembling.

Using Self-Cleaning Mode

Place the machine on its storage and rinse tray. Ensure the dirty water tank is empty and the clean water tank has at least 8 oz of water. Press the self-clean button. The machine will run a cycle to flush out debris from the brush roll and internal components.

Easy upkeep

Tangle-Free Technology and Self-Cleanout Cycle keep your brush roll clear of hair and debris. Spend less time on maintenance and more time enjoying a clean home.



The self-cleaning mode simplifies maintenance by cleaning the brush roll and internal pathways.

Cleaning/Replacing FreshStart Filter

The FreshStart Antimicrobial Filter should be rinsed after each use and replaced every 3-6 months, or as needed, to maintain optimal performance and prevent odors. Allow the filter to air dry completely before reinserting.

TROUBLESHOOTING GUIDE

If you encounter issues with your BISSELL CrossWave Edge Cordless Wet Dry Vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on	Battery is not charged	Ensure the machine is fully charged on the charging dock.
Poor suction or leaving streaks	Dirty water tank is full or improperly seated; Clogged brush roll or filter	Empty and clean the dirty water tank. Check and clean the brush roll and FreshStart filter.
No solution dispensing	Clean water tank is empty or improperly seated; Spray nozzle is clogged	Refill the clean water tank and ensure it is securely in place. Check spray nozzle for blockages.
Short battery runtime	Battery not fully charged; Battery degradation over time	Ensure a full charge before use. For persistent issues, contact customer support.

For issues not covered here, or if problems persist, please contact BISSELL Customer Support.

PRODUCT SPECIFICATIONS

- **Model Number:** 4329F
- **Product Dimensions:** 10.8 x 10.5 x 43.5 inches
- **Item Weight:** 10 pounds
- **Power Source:** Battery Powered
- **Voltage:** 25.9 volts
- **Filter Type:** Cartridge (FreshStart Antimicrobial)
- **Surface Recommendation:** All floors (sealed hard floors and area rugs)
- **Clean Water Tank Capacity:** 1 liters
- **Color:** Black
- **Indoor/Outdoor Usage:** Indoor

WARRANTY AND SUPPORT

Your BISSELL CrossWave Edge Cordless Wet Dry Vacuum (Model 4329F) comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage.

For technical assistance, replacement parts, or further inquiries, please visit the official BISSELL website or contact their customer support line. Contact information can typically be found on the product packaging or the BISSELL website.