

Manuals.plus /

› MZK /

› MZK 20V 13-inch Cordless Electric Lawn Mower LM13B08 User Manual

MZK LM13B08

MZK 20V 13-inch Cordless Electric Lawn Mower User Manual

Model: LM13B08 (ET2601-1118)

1. SAFETY INSTRUCTIONS

Read all safety warnings and instructions before operating this lawn mower. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety

- Always wear appropriate personal protective equipment, including eye protection, sturdy footwear, and long pants.
- Keep children, bystanders, and pets at a safe distance (at least 15 meters) from the operating area.
- Do not operate the mower in wet conditions or rain.
- Inspect the area for objects such as rocks, sticks, or wires before mowing and remove them.
- Never operate the mower with damaged guards or without safety devices in place.

Battery Safety

- Use only the specified battery pack and charger for this mower.
- Do not expose battery packs to water or excessive heat.
- Store batteries in a cool, dry place away from metal objects.
- Remove the battery pack when cleaning, maintaining, or storing the mower.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your MZK Cordless Electric Lawn Mower.



Image: MZK 20V 13-inch Cordless Electric Lawn Mower. This image displays the complete lawn mower unit, highlighting its compact design, handle, motor housing, and grass catcher.

Key Components

- **Handle:** Ergonomic handle for comfortable pushing and control.
- **Motor Housing:** Encloses the powerful brushless motor.
- **Cutting Deck:** 13-inch cutting width for efficient mowing.
- **Grass Catcher:** 30-liter capacity for collecting grass clippings.
- **Battery Compartment:** Holds the 20V 4Ah battery.
- **Height Adjustment Lever:** Allows for 4-position cutting height adjustment.
- **Safety Start Button:** Part of the two-step activation process.

3. SETUP

Follow these steps to assemble and prepare your lawn mower for first use.

3.1 Unpacking

- Carefully remove all components from the packaging.
- Check for any damage or missing parts. Contact customer support if issues are found.
- Retain packaging for future storage or transport.

3.2 Handle Assembly

1. Unfold the handle sections and align them with the mower body.
2. Secure the handle using the provided knobs and bolts. Ensure all connections are tight.

3.3 Grass Catcher Assembly

1. Assemble the grass catcher fabric onto its frame, if required.
2. Lift the rear discharge flap of the mower.
3. Hook the grass catcher onto the mower's rear housing. Ensure it is securely seated.

3.4 Battery Charging and Insertion

1. Insert the 20V 4Ah battery into the charger.
2. Plug the charger into a standard electrical outlet. Allow the battery to fully charge (indicator light will change).
3. Once charged, remove the battery from the charger.
4. Open the battery compartment on the mower.
5. Slide the charged battery into the compartment until it clicks into place. Ensure it is firmly seated.

4. OPERATING INSTRUCTIONS

Learn how to safely and effectively operate your MZK lawn mower.

4.1 Pre-Operation Checks

- Ensure the battery is fully charged and securely inserted.
- Check that the grass catcher is correctly attached.
- Inspect the cutting blade for sharpness and damage.
- Clear the mowing area of any debris.

4.2 Adjusting Cutting Height

The mower offers four adjustable cutting heights, ranging from 1.2 inches to 1.5 inches.

1. Ensure the mower is off and the battery is removed before adjusting.
2. Locate the height adjustment lever on the mower deck.
3. Pull the lever outwards and move it to the desired height setting.
4. Release the lever to lock it into position. Ensure all wheels are at the same height.

4.3 Starting the Mower (Two-Step Activation)

The MZK mower features an intuitive two-step activation process for safety.

1. Ensure the battery is inserted.
2. Press and hold the safety start button.
3. While holding the safety button, pull the bail lever towards the handle.
4. Release the safety start button once the motor starts. Continue holding the bail lever to keep the mower running.

4.4 Mowing Techniques

- Push the mower at a steady, comfortable pace.

- Overlap cutting paths slightly to ensure even coverage.
- For best results, avoid cutting more than one-third of the grass blade length at a time.
- Mow in parallel lines for a uniform appearance.

4.5 Stopping the Mower

To stop the mower, simply release the bail lever. The blade will stop rotating.

4.6 Emptying the Grass Catcher

1. Stop the mower and remove the battery.
2. Lift the rear discharge flap.
3. Carefully unhook and remove the grass catcher.
4. Empty the clippings into a suitable receptacle.
5. Reattach the grass catcher securely before resuming operation.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your mower.

5.1 Cleaning the Mower

- Always remove the battery before cleaning.
- Use a brush or cloth to remove grass clippings and debris from the deck, wheels, and motor housing.
- Do not use water directly on electrical components.
- Clean the underside of the cutting deck after each use to prevent buildup.

5.2 Blade Inspection and Care

- Regularly inspect the cutting blade for sharpness, cracks, or damage.
- A dull blade can tear grass, leading to an unhealthy lawn. Sharpen or replace the blade as needed.
- When handling the blade, wear heavy-duty gloves.

5.3 Battery Care and Storage

- Store batteries in a cool, dry place, away from direct sunlight and extreme temperatures.
- For long-term storage, charge the battery to approximately 50% capacity.
- Do not store batteries in a discharged state.

5.4 General Storage

- Clean the mower thoroughly before storing.
- Store the mower in a dry, secure location, out of reach of children.
- The lightweight design allows for easy transport and storage.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Mower does not start	Battery not charged or improperly inserted; Safety button/bail lever not engaged correctly.	Ensure battery is fully charged and securely inserted. Follow two-step activation precisely.
Poor cutting performance	Dull or damaged blade; Grass too tall or wet; Cutting height too low.	Inspect and sharpen/replace blade. Avoid mowing wet or excessively tall grass. Adjust cutting height higher.
Excessive vibration	Damaged or unbalanced blade; Loose components.	Inspect blade for damage and replace if necessary. Check all fasteners for tightness.
Grass catcher not filling	Grass chute clogged; Grass catcher not properly attached.	Clear any blockages in the chute (with battery removed). Reattach grass catcher securely.

7. SPECIFICATIONS

Technical details for the MZK 20V 13-inch Cordless Electric Lawn Mower.

Feature	Specification
Model Number	LM13B08 (ET2601-1118)
Power Source	Battery Powered (20V)
Cutting Width	13 Inches
Cutting Heights	4 positions (1.2 inches to 1.5 inches)
Grass Catcher Capacity	30 Liters
Item Weight	7.48 kg (24.3 pounds)
Product Dimensions	76.2 x 101.6 x 38.1 cm
Motor Type	Brushless

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official MZK website or contact MZK customer service directly. Keep your purchase receipt as proof of purchase.

Contact information can typically be found on the manufacturer's packaging or official website.