

oraolo BS17

oraolo BS17 Portable Bluetooth Speaker User Manual

Model: BS17

INTRODUCTION

Thank you for choosing the oraolo BS17 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.


The oraolo BS17 is a compact, powerful, and versatile portable Bluetooth speaker designed for various environments. It features IPX7 waterproofing, extended battery life, and multiple connectivity options, including Bluetooth 5.4, AUX input, and TF-Card support.

WHAT'S IN THE BOX

- 1 x oraolo BS17 Portable Bluetooth Speaker
- 1 x USB-C Charging Cable
- 1 x Quick Start Guide (User Manual)
- 1 x Warranty Card

Contenido de la Caja

- 1 x altavoz Oraolo BS17
- 1 x cable USB-C
- 1 x guía de inicio rápido

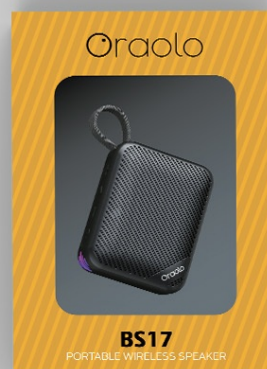

PRODUCT OVERVIEW

Buttons and Ports

The oraolo BS17 speaker features intuitive controls for easy operation:

- **Power Button:** Press and hold to turn on/off.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Play/Pause Button:** Press to play or pause music. Press to answer/end calls. Long press to reject calls.
- **Mode Button (M):** Press to switch between Bluetooth, AUX, and TF-Card modes. Long press to turn LED lights on/off.
- **USB-C Port:** For charging the speaker.
- **AUX Input:** For wired audio connection.
- **TF-Card Slot:** For playing music directly from a memory card.

LED Indicators

- **Charging Indicator:** Red light when charging, turns off when fully charged.
- **Bluetooth Indicator:** Blue light flashes when pairing, solid blue when connected.
- **Mode Indicator:** Different colors or patterns may indicate current mode (e.g., AUX, TF-Card).

SETUP

1. Charging the Speaker

1. Connect the provided USB-C cable to the speaker's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate red. It will turn off once the speaker is fully charged (approximately 4-5 hours).

For optimal battery life, fully charge the speaker before first use.

2. Power On/Off

- **To Power On:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the LED indicators light up.
- **To Power Off:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the LED indicators turn off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (the blue LED indicator will be flashing). If not, press the 'M' button to switch to Bluetooth mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "oraolo BS17" from the list of devices.
4. Once connected, the blue LED indicator will become solid, and you will hear a confirmation sound.

Bluetooth 6.0 Avanzado

Conexión más rápida y estable.



Image: Connecting the oraolo BS17 speaker to a smartphone via Bluetooth for wireless audio playback.

4. True Wireless Stereo (TWS) Pairing

To achieve a stereo sound experience, you can pair two oraolo BS17 speakers together:

1. Ensure both BS17 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically search and connect to each other. Once connected, you will hear a confirmation sound, and the LED indicators on both speakers will synchronize.
4. Now, connect your device to the primary speaker via Bluetooth as described in step 3. Both speakers will play audio in stereo.

Emparejamiento Estéreo (TWS)

Conecta dos altavoces para un sonido estéreo real.



Image: Demonstrating the TWS (True Wireless Stereo) feature, allowing two oraolo BS17 speakers to be paired for enhanced stereo sound.

5. AUX and TF-Card Mode

- **AUX Mode:** Insert a 3.5mm audio cable into the AUX port of the speaker and connect it to your audio source. The speaker will automatically switch to AUX mode.
- **TF-Card Mode:** Insert a TF (microSD) card with MP3 audio files into the TF-Card slot. The speaker will automatically switch to TF-Card mode and begin playing music.

OPERATING INSTRUCTIONS

Basic Music Controls

- **Play/Pause:** Press the Play/Pause button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.

- **Next Track:** Long press the '+' button.
- **Previous Track:** Long press the '-' button.

Call Functions

When connected to a smartphone via Bluetooth:

- **Answer/End Call:** Press the Play/Pause button.
- **Reject Call:** Long press the Play/Pause button.

MAINTENANCE

Cleaning

To clean your speaker, use a soft, dry cloth. Do not use abrasive cleaners, alcohol, or other chemical solvents, as these may damage the surface or internal components.

Water Resistance (IPX7)

The oraolo BS17 speaker is designed with an IPX7 waterproof rating, meaning it can be immersed in water up to 1 meter deep for 30 minutes. This makes it suitable for use by the pool, at the beach, or in the shower. However, it is important to ensure all ports are securely closed before exposing the speaker to water.

Impermeable IPX7

Resistente a la lluvia, salpicaduras e inmersión total.



Image: The oraolo BS17 speaker showcasing its IPX7 waterproof design, suitable for use near water.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, charge the battery at least once every three months to maintain its health.

TROUBLESHOOTING

- **Speaker does not turn on:** Ensure the battery is charged. Connect the speaker to a power source using the USB-C cable.
- **Cannot pair via Bluetooth:**
 - Ensure the speaker is in Bluetooth pairing mode (blue LED flashing).
 - Make sure Bluetooth is enabled on your device.
 - Move the speaker closer to your device.
 - Forget "oraolo BS17" from your device's Bluetooth list and try pairing again.

- Ensure no other devices are currently connected to the speaker.

- **No sound:**

- Check the volume level on both the speaker and your connected device.
- Ensure the speaker is correctly paired or connected via AUX/TF-Card.
- If using AUX, ensure the cable is fully inserted and functional.

- **Poor sound quality:**

- Move the speaker closer to your Bluetooth device to avoid interference.
- Ensure the audio source is of good quality.

- **TWS pairing fails:**

- Ensure both speakers are not connected to any other Bluetooth device before initiating TWS pairing.
- Make sure both speakers are the same model (oraolo BS17).
- Try resetting both speakers and repeating the TWS pairing process.

SPECIFICATIONS

Feature	Specification
Model Number	BS17
Brand	oraolo
Connectivity Technology	Bluetooth 5.4
Water Resistance Level	IPX7 (Waterproof)
Maximum Speaker Output Power	15 Watts
Audio Output Mode	Stereo
Battery Life	Up to 24 hours (at 50% volume, LED lights off)
Charging Time	Approximately 4-5 hours
Charging Port	USB-C
Additional Inputs	AUX, TF-Card
Product Dimensions	8.55 x 12.2 x 4.6 cm
Product Weight	260 g
Material	Plastic

WARRANTY AND SUPPORT

Warranty Information

The oraolo BS17 Portable Bluetooth Speaker comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse,

accidents, unauthorized modifications, or natural disasters.
Please retain your proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions regarding your oraolo BS17 speaker, please refer to the troubleshooting section of this manual. For further assistance, contact oraolo customer support through the contact information provided on the warranty card or the official oraolo website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question