



[Manuals.plus](#) /

› [Ogawa](#) /

› Ogawa Cosmox 2.0 OG7266 Massage Chair Instruction Manual

## Ogawa OG7266

# Ogawa Cosmox 2.0 OG7266 Massage Chair User Manual

Model: OG7266

## 1. INTRODUCTION

---

The Ogawa Cosmox 2.0 OG7266 massage chair is a full-body massage chair designed to support relaxation and muscle comfort. It features a 3D massage mechanism along an extended S+L track that follows the natural curve of the back, supporting the neck down to the lower spine and hips. The smart body scan system adjusts massage depth based on individual posture, while air pressure cushions apply gentle compression for added comfort. Heat therapy is included to help improve comfort and relaxation during use. The chair offers 12 automatic massage programs including stress relief, Thai technique, spinal care, athlete recovery, neck and shoulder focus, and foot massage support. The design is intended for daily home use with attention to comfortable seating and consistent performance. This massage chair is for home use and comes in Meteor Grey.



Image 1.1: The Ogawa Cosmox 2.0 OG7266 Massage Chair, showcasing its sleek design and Meteor Grey finish.

## 2. SAFETY INFORMATION

---

Please read all instructions carefully before using the Ogawa Cosmox 2.0 OG7266 massage chair. Failure to follow safety warnings and instructions may result in electric shock, fire, or serious injury.

- Always unplug the massage chair from the electrical outlet immediately after use and before cleaning.
- Do not use the chair in a wet or damp environment, such as a bathroom.
- Keep the power cord away from heated surfaces.
- Never operate the chair if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Consult your physician before using the massage chair if you have any medical conditions, including but not limited to pregnancy, heart disease, high blood pressure, or if you have a pacemaker.
- Do not stand on or place heavy objects on the chair.
- Use the chair only for its intended purpose as described in this manual.

### 3. PACKAGE CONTENTS

---

Verify that all components are present in the packaging:

- Ogawa Cosmox 2.0 OG7266 Massage Chair Unit
- Backrest
- Arm Cushions
- Power Cord
- User Manual (this document)

### 4. SETUP

---

The Ogawa Cosmox 2.0 OG7266 massage chair requires no assembly. Follow these steps for initial setup:

1. **Unpacking:** Carefully remove the massage chair from its packaging. Retain packaging materials for future transport or storage.
2. **Placement:** Position the massage chair on a flat, stable surface in your living room or desired indoor area. Ensure there is sufficient space around the chair for recline and movement (approximately 10-15 cm from a wall for full recline).
3. **Power Connection:** Locate the power input port on the back or bottom of the chair. Connect the provided power cord to the chair and then plug it into a grounded electrical outlet. Ensure the power switch (if present) is in the OFF position before plugging in.
4. **Initial Check:** Before first use, inspect the chair for any visible damage or loose connections.



Image 4.1: Front view of the massage chair, illustrating its compact footprint for placement.

### 5. OPERATING INSTRUCTIONS

---

Familiarize yourself with the control panel or remote control to operate your Ogawa Cosmox 2.0 OG7266 massage chair.

#### 5.1 Power On/Off

- Press the **Power** button on the control panel or remote to turn the chair ON.
- Press the **Power** button again to turn the chair OFF. The chair will return to its upright position.

## 5.2 Smart Body Scan

Upon starting a massage program, the chair will perform a smart body scan. This system automatically detects your shoulder height and body shape to customize the massage rollers' position and depth for an individualized massage experience along the S+L track.



Image 5.1: Illustration of the internal 3D massage mechanism, responsible for precise body scanning and customized massage.

## 5.3 Automatic Programs

The chair features 12 pre-programmed automatic massage routines designed for various needs:

- **Stress Relief:** Gentle massage to alleviate daily tension.
- **Thai Technique:** Stretching and compression for flexibility.
- **Spinal Care:** Focuses on the back and spine for alignment and relief.
- **Athlete Recovery:** Deeper massage to aid muscle recovery after physical activity.
- **Neck & Shoulder Focus:** Targets upper body tension.
- **Foot Massage Support:** Concentrates on foot and calf areas.
- *And 6 other specialized programs.*

Select your desired program from the control panel. Each program has a default duration and intensity, which can often be adjusted manually.

## 5.4 Manual Massage Modes

You can customize your massage experience using manual modes:

- **Massage Techniques:** Choose from kneading, tapping, shiatsu, rolling, or a combination.
- **Area Selection:** Target specific areas such as full back, upper back, lower back, or a spot massage.
- **Intensity Adjustment:** Adjust the speed and intensity of the rollers.

## 5.5 Air Pressure Massage

Activate the air pressure massage for gentle compression on the arms, shoulders, calves, and feet. Adjust the intensity level as desired.

## 5.6 Heat Therapy

Turn on the heat function for soothing warmth to the lumbar area, enhancing relaxation and muscle relief.

# 6. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your massage chair.

## 6.1 Cleaning

- **Exterior:** Wipe clean with a damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the synthetic leather material.
- **Interior:** For hard-to-reach areas, use a soft brush or vacuum cleaner with a brush attachment to remove dust and debris.
- Ensure the chair is unplugged before cleaning.

## 6.2 Storage

When not in use for extended periods, store the chair in a cool, dry place, away from direct sunlight and extreme temperatures. Cover the chair to protect it from dust.

## 6.3 General Care

- Avoid spilling liquids on the chair.
- Do not place sharp objects on the chair that could puncture the upholstery.
- Regularly check the power cord for any signs of damage.

# 7. TROUBLESHOOTING

---

If you encounter issues with your Ogawa Cosmox 2.0 OG7266 massage chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair does not power on.	Power cord not properly connected. Power outlet not functioning. Main power switch is off.	Ensure power cord is securely plugged into both the chair and the outlet. Test the outlet with another device. Check if the main power switch (if any) on the chair is in the ON position.
Massage rollers are not moving.	Program not selected. Safety feature activated.	Select an automatic program or manual massage mode. Ensure no obstructions are preventing roller movement. Power cycle the chair.
Airbags are not inflating.	Air pressure function is off. Air hose disconnected.	Activate the air pressure function via the control panel. Contact customer support if you suspect a disconnected air hose.
Heat function is not working.	Heat function is off.	Ensure the heat function is activated. Note that it may take a few minutes to feel the warmth.

If the problem persists after attempting these solutions, please contact Ogawa customer support for assistance.

## 8. SPECIFICATIONS

---

Detailed technical specifications for the Ogawa Cosmox 2.0 OG7266 Massage Chair:

**Brand:** Ogawa

**Model Number:** OGA.MSG.CHR.030-Meteor Grey

**Product Type Name:** Massage Chair

**Color:** Meteor Grey

**Material:** Synthetic Leather

**Frame Material:** Metal

**Product Dimensions (D x W x H):** 130 cm x 100 cm x 120 cm

**Item Weight:** 85 kg

**Size:** Oversized

**Back Style:** Solid Back

**Special Features:** Back support, Armrest, Adjustable headrest, Adjustable backrest

**Product Care Instructions:** Wipe clean with damp cloth

**Recommended Uses:** Relaxation, Rest, Gaming, Reading, Sleeping

**Room Type:** Living Room

**Age Range Description:** Adult

**Included Components:** Backrest, Arm cushion

**Indoor/Outdoor Use:** Indoor

**Assembly Required:** No

**Style:** Modern, Single Color

**Finish Type:** Polished

**Item Shape:** Rectangular

**Arm Style:** Round

## 9. WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your purchase or visit the official Ogawa website. If you require technical support, have questions about operation, or need to report a defect, please contact Ogawa customer service. Keep your purchase receipt and model number (OG7266) handy when contacting support.

**Contact Information:** Please refer to the contact details provided on the official Ogawa website or your product packaging for the most up-to-date support channels.