

KINGSMITH Tabletop for WR3L

KINGSMITH Foldable Tabletop for WR3L Rowing Machine User Manual

Model: Tabletop for WR3L | Brand: KINGSMITH

1. PRODUCT OVERVIEW

The KINGSMITH Foldable Tabletop is designed to enhance the functionality of your WR3L Rowing Machine by providing a convenient surface for various items. This tabletop is specifically engineered to be compatible with the folded WR3L rowing machine, utilizing its existing space without requiring additional placement. Its foldable design allows for quick and easy assembly and disassembly.

- **Dimensions:** 25 inches (D) x 23.6 inches (W) x 0.4 inches (H)
- **Compatibility:** Designed for use with the folded KINGSMITH WR3L Rowing Machine.
- **Space Utilization:** Integrates with the rowing machine's folded form, saving space.
- **Ease of Use:** Features quick assembly and disassembly.



Figure 1: KINGSMITH Foldable Tabletop in its compact, folded state, resting on the WR3L Rowing Machine.

2. SAFETY INFORMATION

Please read and understand all safety instructions before installing, operating, or removing the tabletop. Keep this manual for future reference.

Important Note on Removal: When disassembling the tabletop, always follow the step-by-step instructions provided in this manual and the accompanying video. **Do not lift the table straight up vertically**, as this may scratch the slide rails of the rowing machine or cause other damage to the product or the rowing machine. Exercise caution to prevent injury or damage.

3. SETUP AND INSTALLATION

Follow these steps to install the KINGSMITH Foldable Tabletop onto your WR3L Rowing Machine:

1. **Remove the Rowing Machine Seat:** Before installing the tabletop, carefully remove the seat from your WR3L Rowing Machine.
2. **Secure the Rear Clamp:** Position the tabletop over the folded rowing machine. First, secure the clamp located at the rear of the tabletop to the rear crossbar of the rowing machine.
3. **Secure the Side Clamps:** Once the rear clamp is in place, secure the side clamps to the corresponding points on the rowing machine.
4. **Unfold the Tabletop:** Carefully unfold the tabletop sections until it forms a flat, stable surface. Ensure all sections are fully extended and locked into place.

Your browser does not support the video tag.

Video 1: This video provides a step-by-step guide for installing and removing the KINGSMITH Foldable Tabletop on the WR3L Rowing Machine. It demonstrates how to secure the table and the correct procedure for removal to prevent damage.



Figure 2: KINGSMITH Foldable Tabletop installed on the WR3L Rowing Machine, with the rowing machine seat extended.

4. OPERATION AND USAGE

Once installed, the KINGSMITH Foldable Tabletop provides a stable and convenient surface. It is ideal for holding small items such as a book, tablet, phone, or a beverage while your WR3L Rowing Machine is in its folded, storage position. This allows you to utilize the space efficiently, transforming your rowing machine into a functional piece of furniture when not in use for exercise.



Figure 3: A person using the KINGSMITH Foldable Tabletop as a small table while seated next to the WR3L Rowing Machine.

5. DISASSEMBLY AND REMOVAL

To remove the tabletop from your WR3L Rowing Machine, follow these steps carefully:

1. **Unlock Rear Clamp:** First, unlock the clamp on the rear crossbar of the tabletop.
2. **Slide Table Forward:** Gently slide the tabletop towards the front end of the rowing machine. This action will disengage the side clamps.
3. **Remove Tabletop:** Once the clamps are disengaged, carefully lift the tabletop away from the rowing machine. Remember the safety note: **Do not lift the table straight up vertically** to avoid scratching the slide rails or causing other damage.
4. **Replace Rowing Machine Seat:** Reinstall the seat onto your WR3L Rowing Machine if you intend to use it for exercise.

Refer to Video 1 in the "Setup and Installation" section for a visual guide on both installation and removal procedures.

6. MAINTENANCE

To ensure the longevity and appearance of your KINGSMITH Foldable Tabletop, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the tabletop surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Storage:** When not in use, store the tabletop in a dry environment. If removed from the rowing machine, ensure it is placed on a flat surface to prevent warping.
- **Inspection:** Periodically check the clamps and folding mechanisms for any signs of wear or damage. Ensure they are securely fastened.

7. TROUBLESHOOTING

If you encounter any issues with your KINGSMITH Foldable Tabletop, please refer to the following common solutions:

- **Tabletop not sitting flat:** Ensure all folding sections are fully extended and locked into place. Check that the clamps are properly secured to the rowing machine's crossbars.
- **Difficulty installing/removing:** Review the installation and removal steps in this manual and the provided video. Ensure the rowing machine seat is removed before installation. For removal, remember to unlock the rear clamp and slide the table forward before lifting.
- **Scratches on rowing machine rails:** This typically occurs if the tabletop is lifted vertically during removal. Always slide the tabletop forward to disengage the clamps before lifting.

If problems persist, please contact KINGSMITH customer support for assistance.

8. SPECIFICATIONS

Brand	KINGSMITH
Model Name	Tabletop for WR3L
Product Dimensions (D x W x H)	25" x 23.6" x 0.4" (63.5 cm x 59.9 cm x 1 cm)
Item Weight	3.7 Pounds (1.68 kg)
Color	Natural Wood
Frame Material	Carbon Steel
Special Feature	Foldable
Maximum Weight Recommendation	220 Pounds (99.79 kg)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact KINGSMITH customer service. Refer to your purchase documentation for specific warranty terms and contact details. You can typically find support information on the official KINGSMITH website or through your retailer.

