

CHOEZON TCJ17BF-TCJ37BB

CHOEZON Foldable Grid Wall Display Rack

Model: TCJ17BF-TCJ37BB

INTRODUCTION

Thank you for choosing the CHOEZON Foldable Grid Wall Display Rack. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new display rack. Please read these instructions carefully before use and retain them for future reference.

SAFETY INSTRUCTIONS

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the unit on a flat, stable surface to prevent tipping.
- Do not overload the display rack. Refer to the specifications for weight capacity.
- Keep children and pets away during assembly. Small parts may pose a choking hazard.
- Regularly check all connections and fasteners to ensure they remain tight and secure.
- Use the locking knobs and wheel brakes to secure the rack in place when not in motion.

PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Foldable Grid Wall Panel (Main Unit)
- 2 x Side Triangular Frames
- 4 x Industrial Wheels (with brakes)
- 4 x S-Shaped Hooks
- 4 x Garment Hooks
- Assembly Hardware (screws, wrench, etc.)
- Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS


The CHOEZON Foldable Grid Wall Display Rack is designed for straightforward assembly. One person can typically complete the setup quickly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the 'Package Contents' list.
2. **Attach Triangular Frames:** Position the main grid wall panel upright. Attach the two side triangular frames to the base of the main unit using the provided hardware. Ensure they are securely fastened.
3. **Install Wheels:** Screw the four industrial wheels into the designated holes on the bottom of the triangular frames. Ensure all wheels are tightly secured. Engage the brakes on the wheels to prevent movement during the next steps.
4. **Unfold the Grid Panel:** If the grid panel is in its folded state, carefully unlock the locking knobs and extend the panels to their full upright position. Secure the locking knobs to ensure the panels are stable.
5. **Attach Hooks:** Place the S-shaped hooks and garment hooks onto the grid panels as desired for your display needs.



Image: The display rack demonstrating its folding design and various display configurations.


PRODUCT DETAILS

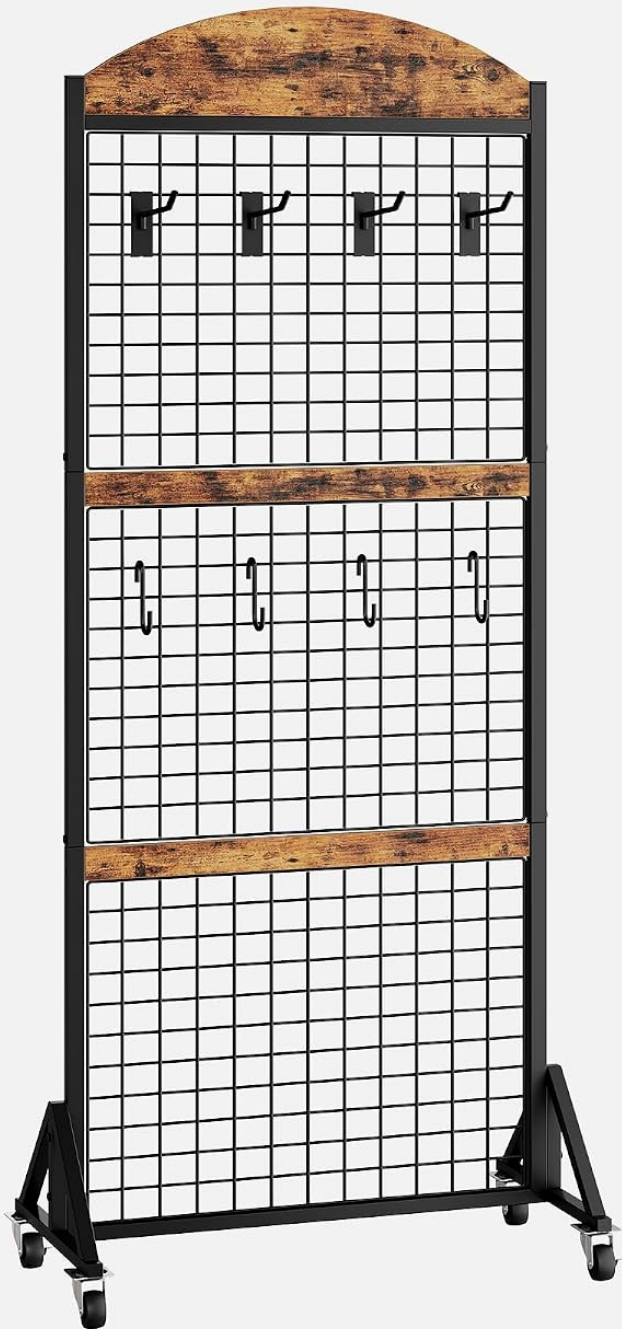

Arc-Shaped
Wooden Top



Sturdy Metal
Frame

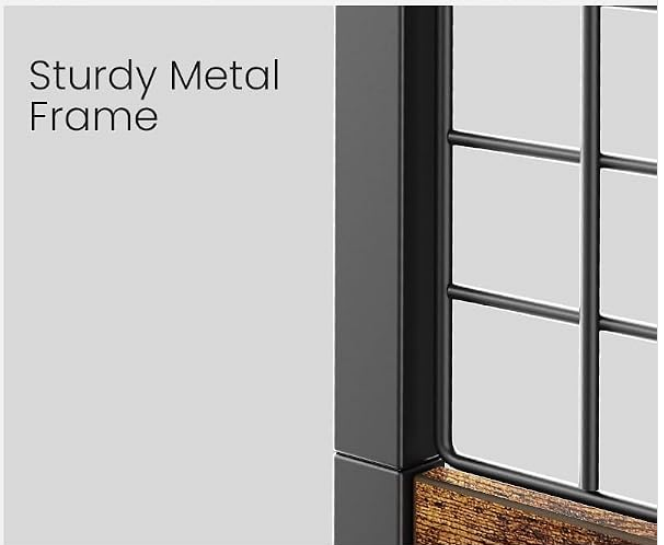

Industrial
Wheels



Image: Detailed view of the arc-shaped wooden top, sturdy metal frame, and industrial wheels.

OPERATING INSTRUCTIONS

Using the Display Rack

- **Displaying Items:** Utilize the S-shaped hooks and garment hooks to hang various items such as bags, hats, clothing, or accessories. The grid pattern allows for flexible arrangement of hooks and other gridwall accessories (sold separately).
- **Mobility:** To move the display rack, disengage the brakes on all four industrial wheels. Carefully push or pull

the rack to its desired location. Once positioned, engage the wheel brakes to secure the rack.

- **Folding for Storage/Transport:** To fold the rack, first remove all displayed items. Unlock the locking knobs on the grid panels. Carefully fold the panels inward. The top arc-shaped handle facilitates easy carrying when folded. The side triangular frames are designed to allow direct vehicle loading without complete disassembly.



Image: Example of the display rack in use, showcasing its versatility for various items.

MAINTENANCE

- **Cleaning:** Wipe the metal frame and wooden top with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically inspect all screws, bolts, and connections to ensure they are tight. Re-tighten any loose fasteners.
- **Wheel Care:** Keep the wheels free of debris to ensure smooth movement. Lubricate wheel axles if necessary.
- **Storage:** When not in use, store the folded display rack in a dry, cool place to prevent rust or damage to the wooden components.

TROUBLESHOOTING

Common Issues and Solutions

- **Rack is unstable/wobbly:**
Solution: Ensure all assembly screws are fully tightened. Verify that the rack is placed on a level surface. Check that the locking knobs for the folding panels are securely engaged.
- **Wheels do not roll smoothly:**
Solution: Check for debris (hair, lint, etc.) caught in the wheels and remove it. Ensure wheel brakes are disengaged. Lubricate the wheel axles if necessary.
- **Panels do not fold/unfold easily:**
Solution: Ensure the locking knobs are fully disengaged before attempting to fold. Do not force the panels; check for any obstructions.

SPECIFICATIONS

Brand	CHOEZON
Model	TCJ17BF-TCJ37BB
Overall Dimensions (Assembled)	23.6" L x 15.7" W x 68.9" H (60cm L x 40cm W x 175cm H)
Grid Size	1.5" x 1.5" (approx. 4cm x 4cm)
Material	Reinforced Metal Frame, Wooden Top
Features	Foldable Design, Mobile (with industrial wheels), Arc-Shaped Wooden Top, Includes 4 S-Hooks, 4 Garment Hooks

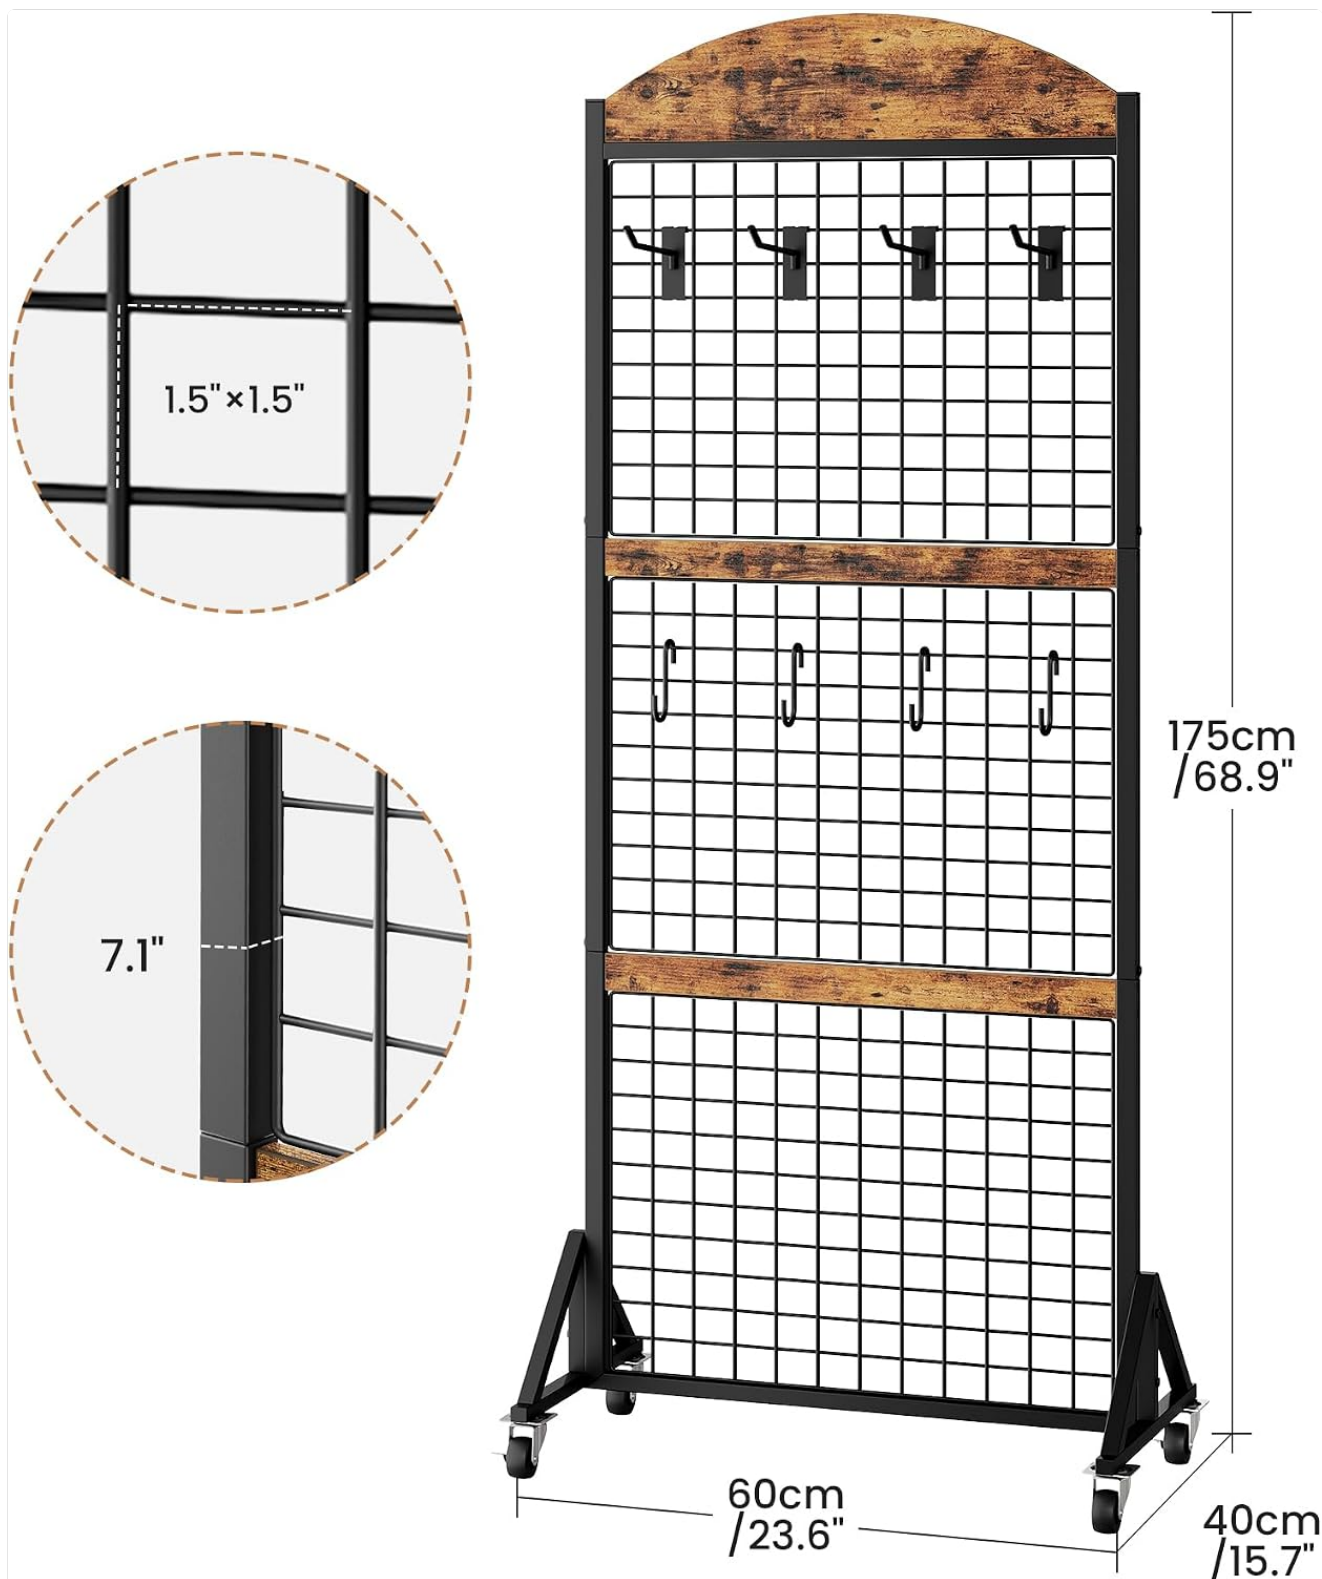


Image: Detailed dimensions of the display rack.

WARRANTY AND SUPPORT

CHOEZON products are manufactured with quality and durability in mind. For specific warranty information or technical support, please refer to the product packaging or contact CHOEZON customer service through the retailer where the product was purchased. Please have your model number (TCJ17BF-TCJ37BB) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question