



[Manuals.plus](#) /

> [HolliWill](#) /

> [HolliWill Fireplace TV Stand with Power Outlets & LED Lights \(Model HH-TV-FP-AZ\) User Manual](#)

HolliWill HH-TV-FP-AZ

HolliWill Fireplace TV Stand User Manual

Model: HH-TV-FP-AZ

INTRODUCTION

Thank you for choosing the HolliWill Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read all instructions carefully before assembly and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following:

- Always unplug the product before assembly or disassembly.
- Keep the product away from flammable materials.
- Do not operate the fireplace heater without proper ventilation.
- Always follow the manufacturer's instructions for safe use and maintenance.
- Use caution when handling tools during assembly.

SETUP AND ASSEMBLY

The HolliWill TV stand is designed for straightforward assembly. For detailed visual guidance, please refer to the official installation video provided by HolliWill Direct. The product ships in 3 reinforced boxes, which may arrive at different times.

Official Installation Video: How to install the farmhouse TV Stand with fireplace. This video provides step-by-step instructions for assembling your TV stand, including the fireplace unit.

Assembly Steps Overview:

1. **STEP 1:** Secure Cam Bolts (A) into Board (1).
2. **STEP 2:** Insert Wooden Dowels (C) into Board (1). Attach Boards (2, 3, 4 & 5) to Board (1) and secure using Cam Locks (B).
3. **STEP 3:** Attach the LED Strip Light to Board (1). Use Screws (N) to secure the LED Strip Light (O).
4. **STEP 4:** Secure Cam Bolts (A) into Board (8).

5. **STEP 5:** Insert Wooden Dowels (C) into Boards (2, 3, 4 & 5). Attach Board (8) to Boards (2, 3, 4 & 5).
6. **STEP 6:** Use Screws (D) to lock Board (8).
7. **STEP 7:** Insert Wooden Dowels (C) into Board (8).
8. **STEP 8:** Use Cam Locks (B) to secure Boards (10 & 11) to Board (8).
9. **STEP 9:** Secure Cam Bolts (A) into Boards (9 & 12).
10. **STEP 10:** Use Cam Locks (B) to secure Boards (9 & 12) to Board (16).
11. **STEP 11:** Use Screws (F) to secure (L) to Board (16).
12. **STEP 12:** Insert Wooden Dowels (C) into Board (8). Use Cam Locks (B) to secure Boards (9 & 12) to Board (8).
13. **STEP 13:** Secure Cam Bolts (A) into Board (18).
14. **STEP 14:** Insert Wooden Dowels (C) into Boards (10 & 11). Attach Board (18) to Boards (10 & 11).
15. **STEP 15:** Use Cam Locks (B) to secure Boards (10 & 11) to Board (18).
16. **STEP 16:** Secure Cam Bolts (A) into Board (19).
17. **STEP 17:** Insert Wooden Dowels (C) into Boards (9, 10, 11 & 12). Attach Board (19) to Boards (9, 10, 11 & 12).
18. **STEP 18:** Use Screws (D) to secure (19) to Boards (9, 10, 11 & 12).
19. **STEP 19:** Secure Cam Bolts (A) into Boards (20 & 21).
20. **STEP 20:** Use Cam Locks (B) to secure Boards (22 & 23) to Boards (20 & 21).
21. **STEP 21:** Insert Wooden Dowels (C) into Board (19). Attach Base Part to Board (19).
22. **STEP 22:** Use Cam Locks (B) to secure the Base Part.
23. **STEP 23:** Use Screws (Q) to secure (24) to the Base Part.
24. **STEP 24:** Use Screws (Q) through Anti-tipping Belt (R) to assemble Back Panels (G) to the main body.
25. **STEP 25:** Use Screws (Q) to secure Plug Socket (27).
26. **STEP 26:** Plug the USB connector of the light strip into the USB socket.
27. **STEP 27:** Use Screws (P) to secure slide (3) to Board (2, 3, 4 & 5).
28. **STEP 28:** Use Screws (Q) to secure Drawer stop (2) to Board (7).
29. **STEP 29:** Use Screws (I) to secure Drawer Handle.
30. **STEP 30:** Put the Flip Drawers into the TV Stand.
31. **STEP 31:** Insert Drawer Stop (M) into Board (2, 3, 4 & 5).
32. **STEP 32:** Insert (J) into Board (9, 10, 11 & 12).
33. **STEP 33:** Insert Wooden Dowel (C) into Board (19), and then attach Board (15) to Board (19).
34. **STEP 34:** Place the shelf into the pre-drilled holes.
35. **STEP 35:** Use Screws (E) to secure (L) to Board (17).
36. **STEP 36:** Use Screws (Q) to secure (K) to Board (17).
37. **STEP 37:** Insert the Sliding Barn Doors (17) into the cabinet.

OPERATING INSTRUCTIONS

Electric Fireplace Operation

The electric fireplace can be controlled via the integrated control panel or the included remote control. It features adjustable flame brightness, multiple color options, and a heating function.

- **Power On/Off:** Press the power button on the control panel or remote.
- **Flame Brightness:** Adjust the flame intensity using the dedicated button (L1, L2, L3 levels).
- **Flame Colors:** Cycle through various flame colors to match your ambiance.
- **Heating Function:** Activate the 1400W heater to warm spaces up to 400 square feet. The temperature is adjustable from 62°F to 82°F.
- **Timer:** Set the fireplace to operate for a specific duration (0.5 to 6 hours) using the timer function.

LED Lighting System

The integrated LED lights offer 16 color options and over 20 dynamic lighting modes, controllable via a dedicated app (details in manual) or remote.

- **App Control:** Download the specified app to access customizable scene modes and music synchronization features.
- **Remote Control:** Use the remote to change colors and modes.

Integrated Charging Hub

The TV stand includes a built-in charging station to keep your devices powered and organized.

- **AC Outlets:** Two (2) 125V/12A AC outlets for standard electronics.
- **USB Ports:** Two (2) 5V-2A USB ports for charging mobile devices.

Storage Features

- **Flip Drawers:** Two roomy flip drawers for concealed storage.
- **Sliding Barn Doors:** Two sliding barn doors on high-quality steel rails for flexible access to storage areas or open shelves.
- **Open Shelves:** Three open shelves for media equipment, books, or decorative items.

MAINTENANCE

Regular maintenance will ensure the longevity and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Dust regularly to prevent buildup.
- **Electrical Components:** Ensure all electrical connections are secure and free from damage. Unplug the unit before cleaning or performing any maintenance on electrical parts.

TROUBLESHOOTING

If you encounter issues with your HolliWill Fireplace TV Stand, please refer to the following common solutions:

- **Fireplace Not Turning On:** Check if the power cord is securely plugged into a working outlet. Ensure the main power switch on the fireplace unit is in the 'On' position.
- **No Heat Output:** Verify that the heating function is activated and the temperature setting is above the current room temperature. Ensure the air vents are not obstructed.
- **LED Lights Not Responding:** Check the connection of the LED strip light to the USB port. Ensure the remote control batteries are functional or try controlling via the app.
- **Sliding Doors Sticking:** Inspect the steel rails for any obstructions or debris. Clean the rails and ensure the doors are properly aligned.

If problems persist, please contact HolliWill customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	HolliWill
Model Name	HH-TV-FP-AZ

Overall Dimensions	70"W x 15.8"D x 33.5"H
Material	Engineered Wood
Color	White
Item Weight	92.5 Pounds
Fireplace Heater	1400W, 5,000 BTU (Heats up to 400 sq ft)
LED Lights	16 Colors, 20+ Dynamic Modes, App Control
Charging Hub	2 AC Outlets (125V/12A), 2 USB Ports (5V-2A)
Storage	2 Flip Drawers, 2 Sliding Barn Doors, 3 Open Shelves
Assembly Required	Yes

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or visit the official HolliWill website. Contact details for customer service are typically provided in the product packaging.