

[Manuals.plus](#) /

› [Solace Shade](#) /

› Solace Shade Outdoor Roller Shades Instruction Manual (Model PJJL05-Grey-1008)

Solace Shade PJJL05-Grey-1008

Solace Shade Outdoor Roller Shades Instruction Manual

Model: PJJL05-Grey-1008

INTRODUCTION

Thank you for choosing Solace Shade Outdoor Roller Shades. This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your new outdoor shades. Designed to offer up to 90% UV block, privacy, and air circulation, these shades enhance your outdoor living space.

Please read all instructions carefully before beginning installation and retain this manual for future reference.

SETUP AND INSTALLATION

The Solace Shade Outdoor Roller Shades feature a splicing design for easier handling and installation. Most installations can be completed in approximately 20 minutes.

Package Contents

Before starting, verify that all components are present:

- One-piece Fabric Shade
- Upper Tubes (for roller assembly)
- Below Tubes (for bottom rail)
- Aluminum Tube Plugs
- Plugs (for roller brackets)
- Plastic Anchors
- Screws
- Grub Screws
- Bungee Brackets
- Bungee Cords
- Crank Rod (Wand)
- Roller Brackets
- Allen Wrench
- Installation Template

NOTE: We use a splicing design, so the actual package you receive will be smaller than you imagined.

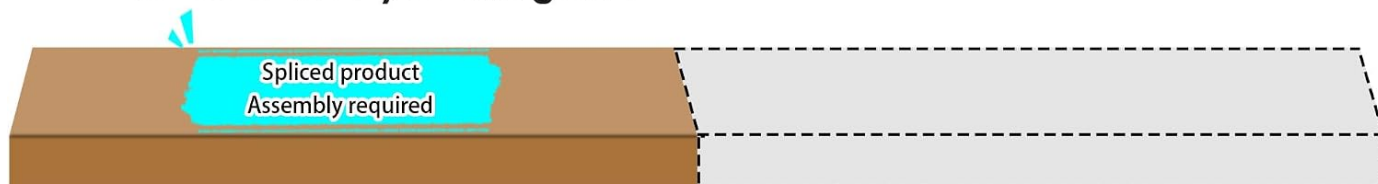 


Image: All components included in the package.

Assembly of Roller and Bottom Rail

The shade comes with a splicing design, meaning the roller and bottom rail tubes will need to be assembled from multiple sections.

1. Connect the Upper Tubes to form the full-length roller. Ensure they are securely joined.
2. Slide the one-piece fabric onto the assembled upper tube.
3. Connect the Below Tubes to form the full-length bottom rail.
4. Insert the Aluminum Tube Plugs into the ends of the assembled tubes.
5. Secure components using the provided Grub Screws and Allen Wrench as indicated in the detailed instructions.



Image: Splicing design assembly process.

Mounting the Shades

The shades can be mounted on a wall or ceiling. Use the provided installation template for accurate placement of the roller brackets.

1. **Measure and Mark:** Use the installation template to mark the positions for the roller brackets. Ensure the marks are level and spaced correctly for your shade's width.
2. **Drill Pilot Holes:** Drill pilot holes at the marked locations. For masonry or concrete, use the plastic anchors.
3. **Attach Roller Brackets:** Securely fasten the roller brackets to the wall or ceiling using the provided screws.
4. **Install Shade:** Carefully place the assembled roller shade into the installed roller brackets. Ensure it clicks securely into place.
5. **Attach Bungee Brackets:** Install the bungee brackets at the desired height on your patio or porch structure, typically near the bottom of where the shade will extend.

NOTE: We use a splicing design, so the actual package you receive will be smaller than you imagined.

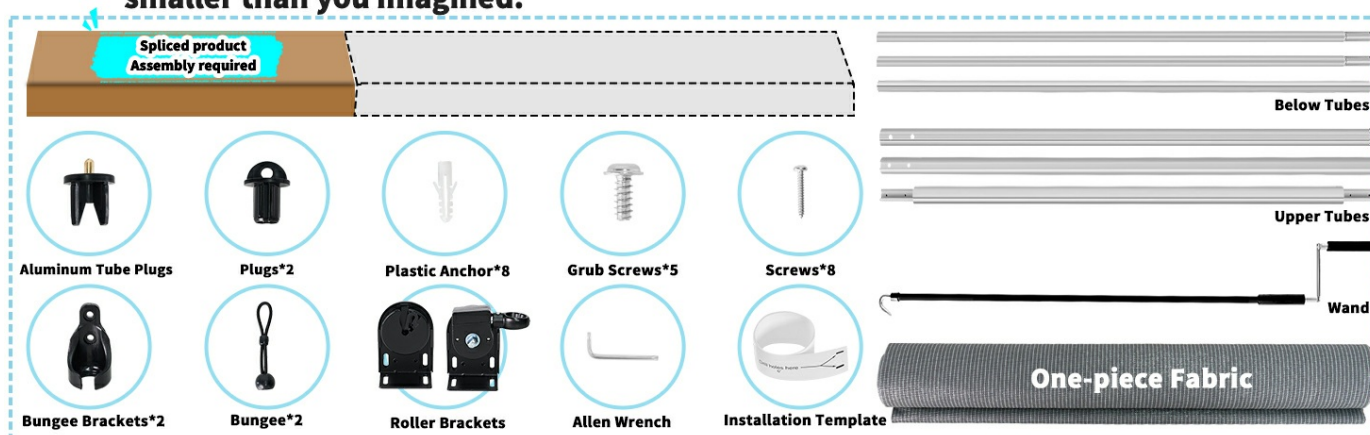 


Image: Wall mounting and ceiling mounting options.

Installation Video Guide

Your browser does not support the video tag.

Video: A detailed installation guide for Solace Shade Outdoor Roller Shades. This video demonstrates the step-by-step process of assembling the shade and mounting it, including securing brackets and attaching the crank rod.

OPERATING INSTRUCTIONS

Your Solace Shade roller shade features a cordless design for safety and ease of use, operated by a metal hand crank.

Raising and Lowering the Shade

1. Insert the hook of the metal hand crank into the loop on the roller mechanism.
2. To lower the shade, turn the crank rod clockwise.
3. To raise the shade, turn the crank rod counter-clockwise.
4. Ensure the shade rolls up and down evenly to prevent damage to the fabric or mechanism.



Image: Operating the shade with the metal hand crank.

Securing the Shade

Use the bungee cords and brackets to secure the bottom of the shade, preventing it from swaying in windy conditions.

1. Once the shade is lowered to the desired position, attach the bungee cords from the bottom rail to the installed bungee brackets.

2. Ensure the bungee cords are taut but not overly stretched to allow for slight movement.



Attention: Order width $\neq$ fabric width. Purchase width is 2~3 inches wider than the fabric width. All dimensions are measured manually, please allow a slight margin of error.

Listing Size (Feet)	Blind Maxium Height (Inch)	Blind Width (Inch)	Fabric Width (Inch)	Wand Length (Inch)
6'W x 6'H	72.05''	72.05''	69.29''	48''
6'W x 8'H	96.06''	72.05''	69.29''	48''
7'W x 6'H	72.05''	84.64''	81.89''	48''
7'W x 8'H	96.06''	84.64''	81.89''	48''
8'W x 6'H	72.05''	96.06''	93.31''	48''
8'W x 8'H	96.06''	96.06''	93.31''	48''

Image: Bungee set for securing the shade.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your Solace Shade outdoor roller shades.

- **Cleaning:** The high-density polyethylene (HDPE) fabric is designed for easy cleaning. Use a mild soap solution and a soft brush or cloth to clean the fabric. Rinse thoroughly with water and allow to air dry completely before rolling up.
- **Mechanism Check:** Periodically inspect the roller mechanism, brackets, and crank rod for any signs of wear or damage. Ensure all screws are tight.
- **Weather Conditions:** In strong winds or severe weather, it is recommended to roll up the shades to prevent damage.

HIGH-QUALITY FABRIC



220 GSM
HDPE



SUSTAINABLE
UTILIZATION



PROTECT
PRIVACY



AIR
CIRCULATION



90% UV
BLOCK



EASY TO
CLEAN



DURABLE



MOISTURE-
PROOF

Image: High-quality HDPE fabric, easy to clean.

TROUBLESHOOTING

If you encounter issues with your Solace Shade, refer to the following common solutions:

Problem	Possible Cause	Solution
Shade does not roll up/down smoothly.	Misaligned installation, debris in mechanism, or fabric snagged.	Check that brackets are level. Inspect the roller and fabric for obstructions. Ensure the crank rod is properly engaged.
Shade sways excessively in light wind.	Bungee cords not attached or not taut enough.	Ensure bungee cords are securely attached to the bottom rail and bungee brackets, and are sufficiently taut.

Problem	Possible Cause	Solution
Fabric appears damaged or torn.	Exposure to extreme weather, sharp objects, or improper handling.	Inspect for the source of damage. For minor tears, repair kits may be available. For significant damage, contact customer support for replacement options.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	PJL05-Grey-1008
Dimensions (W x H)	120"W x 96"H
Material	High Density Polyethylene (HDPE)
Color	Grey
UV Block	Up to 90%
Operation Mode	Manual (Cordless with Crank Rod)
Mounting Type	Outside Mount (Wall or Ceiling)
Item Weight	5.69 kg
Included Components	User Manual, Mounting Hardware, Crank Rod, Bungee Fittings

 
Why choose us?

1




High-quality Metal Bracket
MORE SECURE

2

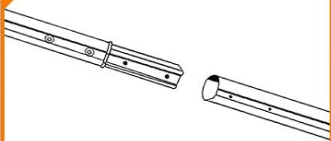

Two-section Splicing Design
15-Mins Install
MORE COST-EFFECTIVE

 3

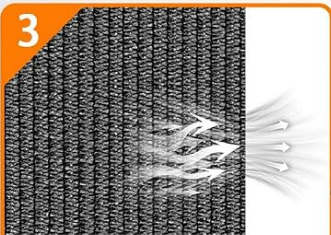


High-quality Fabric
UV BLOCK & BREATHABLE

4



Metal Hand Crank
Cordless Design
SAFER FOR CHILDREN/PETS

 5

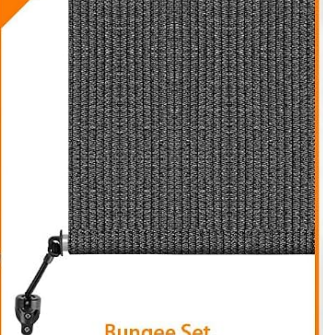

Bungee Set
PREVENTS SWAYING

Image: Blind width and height specifications.

WARRANTY INFORMATION

Solace Shade products are manufactured to high-quality standards. For specific warranty details regarding your outdoor roller shade, please refer to the warranty card included in your product packaging or contact Solace Shade customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with installation, or need to report a missing or damaged part, please contact Solace Shade customer support through the retailer's platform or the official Solace Shade website. Please have your model number (PJL05-Grey-1008) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question