

## ATTAV B0G2XBJTYP

# ATTAV Outdoor Dog Kennel with Dog Fence Instruction Manual

Model: B0G2XBJTYP | Brand: ATTAV

## PRODUCT OVERVIEW

---

The ATTAV Outdoor Dog Kennel with Dog Fence provides a secure and spacious enclosure for your pet. Designed for outdoor use, this kennel features a robust construction with an anti-rust coating and a protective roof, ensuring durability and comfort in various weather conditions. The integrated pen offers additional space for your dog to move freely.

- **Spacious and Versatile:** Offers ample room for pets, with an added roof for weather protection.
- **Robust and Durable:** Features an anti-rust coating for corrosion resistance and stability in outdoor environments.
- **Enhanced Safety:** Equipped with a dual-lock system and ground nails for secure placement and to prevent escapes.
- **Easy Assembly and Maintenance:** Designed for straightforward assembly without complex tools and features a smooth, easy-to-clean surface.
- **Multi-Purpose Use:** Suitable for various settings including home, farms, and training facilities.



Image: The ATTAV Outdoor Dog Kennel with its integrated pen and roof, situated in a green outdoor space, providing a secure area for a dog.

## SETUP INSTRUCTIONS

---

Follow these steps for the correct assembly of your ATTAV Outdoor Dog Kennel. It is recommended to have at least two people for assembly.

### 1. Unpack and Identify Components

Carefully unpack all components from the packaging. Verify that all parts are present according to the packing list (not provided in this manual, refer to your product's packaging). Components typically include:

- Metal fence panels (various sizes)
- Gate panel with pre-installed double locks
- Connectors/Clamps
- Roof frame components
- Weather-resistant roof cover
- Ground nails/stakes

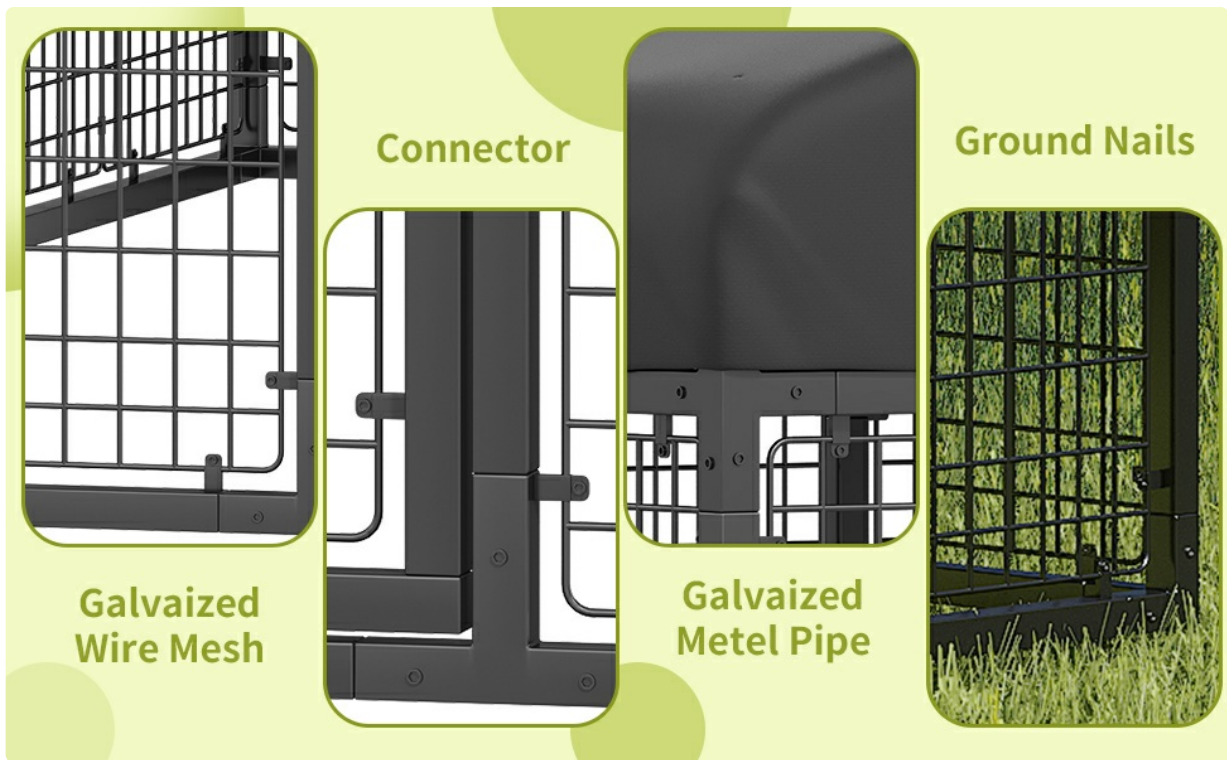


Image: Detailed view of key components: galvanized wire mesh, panel connectors, galvanized metal pipes, and ground nails for securing the kennel.

## 2. Assemble the Base Structure

1. Choose a level and stable outdoor location for the kennel.
2. Begin by connecting the main fence panels to form the perimeter of the kennel and the attached pen. Use the provided connectors to secure the panels firmly.
3. Ensure the gate panel is installed in a convenient location, allowing for easy access.

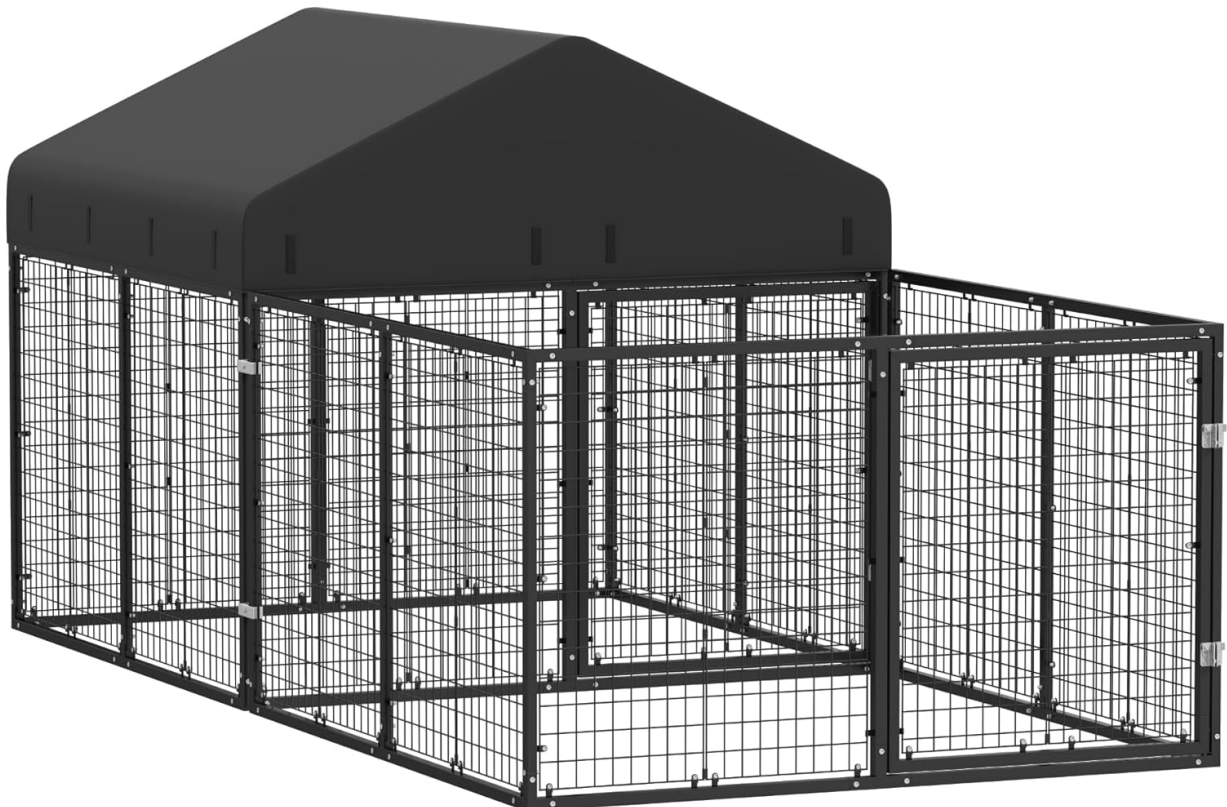


Image: An angled view of the kennel's metal panel structure during assembly, illustrating the main enclosure and the attached pen.

### 3. Install the Roof Frame and Cover

1. Assemble the roof frame according to the manufacturer's instructions (refer to your product's specific guide for detailed diagrams).
2. Attach the assembled roof frame securely to the top of the kennel panels.
3. Drape the weather-resistant roof cover over the frame, ensuring it is taut and properly secured to prevent water pooling and wind damage. Use any provided rubber ropes or fasteners.



Image: A complete view of the ATTAV Outdoor Dog Kennel, showcasing the installed roof and the integrated pen.

### 4. Secure the Kennel

For maximum stability and to prevent movement, insert the provided ground nails into the ground through the designated holes at the base of the kennel panels. Ensure they are driven deep enough to provide a firm anchor.



## DETAILED DISPLAY IN MANY ASPECTS

Perfect for different pets and occasions



Small Size



Medium Size



Large Size



Durable  
Metal Bottom



Strong Button



Lockable  
Design Safety

Image: Detailed display highlighting the durable metal bottom for stability, strong panel connection buttons, and the secure lockable gate design.

### Video: Assembly Overview

Your browser does not support the video tag.

Video: A general overview of the assembly process for the outdoor dog kennel, demonstrating key steps and component connections.

## OPERATING INSTRUCTIONS

### 1. Accessing the Kennel

The kennel features a gate equipped with a dual-lock system. To open, disengage both locks and pull the gate open. Ensure both locks are securely engaged when the gate is closed to prevent accidental escapes.

# AN EXCELLENT GIFT FOR YOUR PETS

An comfortable safety and suitable area



Image: A person demonstrating how to open the kennel gate, highlighting the ease of access for pet owners.

## 2. Pet Placement and Supervision

Place your dog inside the kennel. Always ensure your pet has access to fresh water and adequate shade, especially during warm weather. While the kennel provides a secure environment, regular supervision of your pet is recommended.

## 3. Environmental Considerations

The kennel is designed for outdoor use. The roof provides protection from sun and rain. In conditions of heavy snow, it is recommended to remove the roof cover to prevent structural damage from excessive weight accumulation.

## MAINTENANCE

---

### 1. Cleaning

The kennel's smooth surfaces are designed for easy cleaning. Regularly clean the metal panels and the roof cover with mild soap and water. Rinse thoroughly and allow to air dry. Avoid abrasive cleaners that could damage the anti-rust coating.

### 2. Inspection

Periodically inspect all connections, locks, and ground nails to ensure they remain secure. Check the roof cover for any tears or damage, especially after severe weather. Address any loose components or damage promptly to maintain the kennel's integrity and safety.

### 3. Seasonal Care

During winter months with heavy snowfall, remove the roof cover to prevent snow accumulation from causing structural stress or collapse. Reinstall the cover when the risk of heavy snow has passed.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Kennel feels unstable or wobbly.	Ground nails not fully inserted or loose connections.	Ensure all ground nails are driven deep into the ground. Check and tighten all panel connectors. Verify the kennel is on a level surface.
Gate does not close securely.	Locks are misaligned or damaged.	Inspect the dual-lock mechanism for obstructions or damage. Adjust the gate alignment if necessary. Ensure both locks engage properly.
Roof cover sags or collects water.	Roof cover not taut or frame not properly assembled.	Re-tension the roof cover using all available fasteners. Verify the roof frame is correctly assembled and securely attached to maintain proper pitch.
Rust spots appear on metal.	Damage to anti-rust coating or prolonged exposure to moisture.	Clean the affected area and apply a rust-inhibiting paint or coating to prevent further corrosion. Ensure proper drainage around the kennel.

## SPECIFICATIONS

Feature	Detail
Model Number	B0G2XBJTYP
Brand	ATTAV
Dimensions (L x W x H)	79" x 79" x 72.5" (with pen)
Material	Metal (with anti-rust coating)
Specific Uses	Outdoor dog enclosure
Breed Recommendation	All Breed Sizes
Special Feature	Durable, Anti-Rust Coating, Double Locks, Roof Cover



Image: A diagram illustrating the dimensions of the kennel, including overall width, depth, and height measurements.

## **WARRANTY INFORMATION**

---

Specific warranty details for the ATTAV Outdoor Dog Kennel are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the product packaging, any included warranty cards, or contact ATTAV customer support directly.

## **CUSTOMER SUPPORT**

---

If you encounter any issues or have questions not addressed in this manual, please contact ATTAV customer support. Contact information can typically be found on the product packaging or the official ATTAV website.