



Manuals.plus /

› Sherilyn /

› Sherilyn Kids Play Tent DSG-TU Instruction Manual

Sherilyn DSG-TU

Sherilyn Kids Play Tent (Model DSG-TU) Instruction Manual

Brand: Sherilyn | Model: DSG-TU

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Sherilyn Kids Play Tent. Designed as a portable fantasy adventure castle, this playhouse features double doors, breathable windows, and a comfortable mat, encouraging creative and independent play for children aged 36 months to 12 years.

WHAT'S IN THE BOX

Please ensure all components are present before beginning assembly:

- Poles (various lengths and connectors)
- Tent Cover (fabric with double doors and windows)

SETUP INSTRUCTIONS

Follow these steps to assemble your Kids Play Tent:

1. **Remove Packaging:** Carefully remove all items from the packaging.
2. **Identify Components:** Locate the tent's fabric cover, including the two doors and windows. Separate the various poles and connectors. Poles are typically labeled for easy identification.
3. **Assemble Frame:** Connect the poles according to the provided diagram, ensuring they are securely fitted into their corresponding connectors. No tools are required for this step.

4. **Attach Tent Cover:** Drape the tent fabric cover over the assembled pole frame. Ensure the sleeves and attachment points on the fabric align with the poles.
5. **Secure Tent:** Extend the poles to fully expand the tent. Secure the fabric cover to the frame using any ties or fasteners provided. Ensure the tent is stable and secure before use.
6. **Position Mat:** Place the included mat on the floor inside the tent for added comfort.



SAFE & DURABLE MATERIAL

Crafted from fabric, sturdy poles, and adorable polka dot sheer curtains, it's gentle on kid's skin and built to withstand hours of rough-and-tumble play.

Image: Assembling the tent frame with poles and connectors.

PERFECT FOR EVERY SCENE Indoor Outdoor Fun: Place it in the living room, bedroom, or outdoor garden—an instant play area that keeps kids entertained for hours. **Easy to Set Up & Easy to Clean:** No tools required—assemble in minutes and the tent's fabric cover is easy to clean and can be machine washed.



Image: The assembled Kids Play Tent with its double-door design.

OPERATING INSTRUCTIONS

The Sherilyn Kids Play Tent is designed for versatile play. Here's how to utilize its features:

- **Double Doors:** The tent features two doors for easy entry and exit. The main door can be rolled up and secured with ties for an open play area. The arched door can be used as a playful "secret passage."
- **Breathable Windows:** Multiple windows provide excellent airflow and allow for visibility. These windows can be tied up to remain open or left down for a more enclosed feel.
- **Comfort Mat:** The included quilted mat provides a soft and comfortable surface for sitting, reading, or playing inside the tent.

VERSATILE USES This play tent isn't just a playhouse - it works as a cozy reading nook for kids to dive into their favorite storybooks, a quiet corner for nap time, or a decorative prop for birthday parties and themed events.



Image: A child enjoying the spacious interior of the play tent, complete with the comfortable mat.

MAINTENANCE AND CARE

To ensure the longevity of your play tent, follow these care instructions:

- **Cleaning:** The tent's fabric cover is machine washable. For best results, wash on a gentle cycle with cold water. Air dry or tumble dry on low heat. Avoid harsh detergents or bleach.
- **Storage:** For storage, collapse the tent by retracting the poles and folding the fabric. Place the tent back into its original packaging or store it in a dry, cool place away from direct sunlight.
- **Frame Care:** Wipe down poles with a damp cloth as needed. Ensure poles are dry before storing to prevent mildew.

TROUBLESHOOTING

- **Tent Instability:** Ensure all poles are fully extended and securely connected. Check that the fabric cover is properly attached to the frame.
- **Difficulty Folding:** If the tent is difficult to collapse, ensure all pole connections are disengaged and the fabric is not snagged.

SPECIFICATIONS

Product Dimensions	51.18 x 35.04 x 51.18 inches
Item Weight	8.3 pounds
Item Model Number	DSG-TU
Manufacturer Recommended Age	36 months - 12 years
Manufacturer	Sherilyn

SAFETY WARNINGS

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children while they are playing in the tent.
- Keep the tent away from open flames or heat sources.
- Ensure the tent is assembled correctly and stable before use.
- Do not hang heavy objects from the tent frame.

WARRANTY AND SUPPORT

This product is subject to a standard 30-day return policy. For any questions, concerns, or support needs, please contact Sherilyn customer service through your original point of purchase.