

[Manuals.plus](#) /

> [SJCAM](#) /

> SJCAM C400 4K Pocket Vlog Action Camera User Manual

## SJCAM C400

# SJCAM C400 4K Pocket Vlog Action Camera User Manual

Model: C400

## 1. INTRODUCTION

Thank you for choosing the SJCAM C400 4K Pocket Vlog Action Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it carefully before use to ensure optimal performance and longevity of your device.



The SJCAM C400 is a versatile 4K pocket vlog action camera designed for capturing high-quality video and photos in various scenarios.

## 2. SAFETY INFORMATION

- Do not expose the camera to extreme temperatures or direct sunlight for extended periods.
- Keep the camera away from strong magnetic fields.

- Avoid dropping or subjecting the camera to strong impacts.
- Do not attempt to disassemble or modify the camera.
- Ensure all ports are dry before charging or connecting to other devices.
- Use only approved accessories and chargers.

### 3. PACKAGE CONTENTS

---

Verify that all the following items are included in your package:

- SJCAM C400 Camera Unit
- Battery Handle
- Frame Mount
- Waterproof Case
- USB Cable
- Hand Strap
- Bracket
- Back Clip
- Flat Bottom Bracket
- Helmet Base
- Tripod
- Magnetic Strap

# 2.5D



Image showing the SJCAM C400 camera and its various included accessories.

## 4. CAMERA OVERVIEW

Familiarize yourself with the main components of your SJCAM C400 camera:

- **Front Touch Screen:** 1.3-inch display for intuitive control and preview.
- **Main Screen:** 2.23-inch display for detailed viewing and settings.
- **Lens:** High-quality f/2.0 large aperture lens with 154° ultra-wide-angle FOV.
- **Power/Mode Button:** Used to power on/off and switch between modes.

- **Shutter/Record Button:** To start/stop recording or take photos.
- **USB Type-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For memory card insertion.



防水ケース



フレームマウント



バッククリップ



ランヤード



収納バッグ



磁気ランヤード



ベースマウント



 
ネジ



ハンディコントローラー



USBケーブル

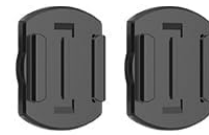

曲面・平面マウント



3m粘着シール



拭き布



アダプター



カメラ

## 箱内の内容品

The SJCAM C400 features dual screens for versatile operation and monitoring.

## 5. SETUP

### 5.1. Charging the Battery

Connect the camera to a power source using the provided USB Type-C cable. The charging indicator will show the charging status. A full charge provides approximately 460 minutes (7 hours 40 minutes) of continuous 4K30fps recording when using both the camera and battery handle.

**Rotate to Start**

**2.5D Screen Glass**

**4K**

**Horizon Steady**

**Wireless Handle Control**  
**8m**

**Six-axis Gyro Stabilization**

**Longer Operation Time**

**Work as low as -20°C**

**Mount Anywhere**  
durable and lightweight

The camera and battery handle provide extended operation time.

## 5.2. Inserting a MicroSD Card

Locate the MicroSD card slot on the camera. Insert a compatible MicroSD card (up to 128GB, Class 10 or higher recommended) with the contacts facing down until it clicks into place.

## 5.3. Powering On/Off

Press and hold the Power/Mode button for a few seconds to power the camera on or off.

## 5.4. Initial Settings

Upon first use, you may need to set the language, date, and time. Navigate through the menu using the touch screen to configure these settings.

# 6. OPERATING THE CAMERA

## 6.1. Basic Controls and Touchscreen

The SJCAM C400 features a responsive touch screen for easy navigation. Swipe and tap to access menus, change settings, and switch between shooting modes. The front 1.3-inch screen allows for intuitive composition adjustments, especially for vlogging.

### 大画面操作

大画面2.29インチディスプレイと直感的UIを搭載したC400アクションカメラは、パターのような滑らかな操作を指先に届けます



The large screen offers intuitive control and a clear view of your footage.

## 6.2. Rotating Screen Functionality

The camera's screen can be rotated to switch between horizontal (16:9) and vertical (9:16) recording orientations, ideal for different platforms like YouTube and TikTok.

### 先進的 回転スクリーン

スクリーンを回転させるだけで即起動。映画風の横撮影とSNS向け縦撮影を楽々切り替え



 
Easily switch between horizontal and vertical video formats by rotating the screen.

## 6.3. Video Recording and Photo Capture

The C400 supports 4K/30fps, 2.5K, and 1080P video resolutions. Press the Shutter/Record button to start or stop recording. For photos, switch to photo mode and press the Shutter/Record button.

### シャープに、 クリアに、鮮明に


高品質大型CMOSセンサーを搭載したC400は、圧倒的なシャープさと安定性でビデオを捉えます。粗粒ノイズの映像とはおさらば、フレームごとに輝くほどの鮮明さを実現

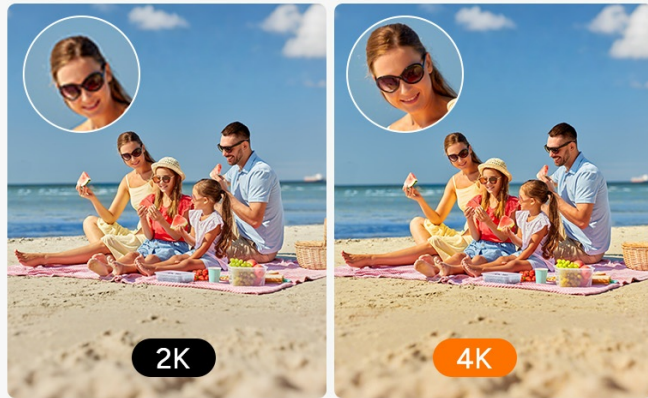

Experience sharp, clear, and vivid images with 4K resolution.


## 6.4. Image Stabilization

 The camera features 6-axis Electronic Image Stabilization (EIS) and Horizon Steady functions to ensure smooth and stable footage, even during dynamic activities.

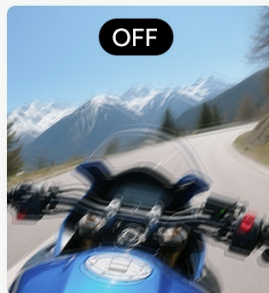

### 6軸ジャイロ安定化機能

 あらゆる振動や揺れをリアルタイムで補正するため、カメラのぶれを心配する必要はありません。

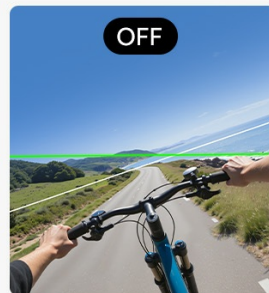

### ホライズンステディ

地平線をロックして映像を完全に水平に保ち、傾いたショットを気にせず、自由に創作できます。

6-axis gyro stabilization and Horizon Steady keep your footage smooth and level.

## 6.5. Wireless Control

The detachable handheld controller connects via Bluetooth, allowing you to operate the camera remotely from up to 8 meters away. The controller screen provides a real-time preview.

## ワイヤレスハンディコントローラー

Bluetooth接続で、リモート撮影を自由に操る



Control your camera wirelessly from a distance of up to 8 meters.

## 6.6. Shooting Modes

The C400 offers various shooting modes for creative capture:

- **Normal Recording:** Standard video capture.
- **Interval Recording (Time-lapse):** Condense long events into short videos.
- **Slow Motion:** Capture detailed movements (e.g., 720P/120fps).
- **Motion Detection:** Automatically records when motion is detected.
- **Loop Recording:** Continuously records, overwriting older footage.
- **Burst Shooting:** Capture multiple photos in quick succession.
- **Timer Shooting:** Set a delay before taking a photo.



### タイムラプス

街の車流れが描くまばゆい光の軌跡から、ゆっくりと咲き誇る花まで——手間ひまをかけずにすべてを捉えることができます。



### スローモーション

ドラマチックな水しぶきから、アスリートの圧倒的なパワーまで——すべてを8倍スローモーションで鮮明に逃さず撮影。

Time-lapse mode captures the essence of changing scenes.

## 6.7. Waterproof Usage

When placed in its professional waterproof case, the C400 is waterproof up to 30 meters (98 feet), making it suitable for snorkeling, surfing, and cycling in the rain.

## 30M (98FT) 防水

プロ用防水ケース搭載で、シュノーケリングからサーフィン、雨の中のサイクリングまで、あらゆるシーンを楽々対応



The waterproof case allows for underwater recording up to 30 meters.

## 6.8. Hands-free POV

The compact design and magnetic strap allow for easy, hands-free Point-of-View (POV) recording, perfect for vlogging and capturing daily activities.

## 楽々ハ ンズフリーPOV

創造力爆発! C400をどこでも貼り付ければ、めちゃくちゃカッコいい一人称映像が撮れる。vlogの相棒にピッタリ!



Capture hands-free POV footage with the magnetic strap accessory.

## 6.9. Webcam Mode & Live Streaming

Connect the camera to your computer via USB to use it as a webcam. The C400 also supports direct live streaming to compatible platforms without additional equipment.



### ウェブカメラモード

カメラをパソコンに接続するだけ。プラグ&プレイ対応で、簡単・手軽にご利用いただけます。



### ライブ配信

複雑な機材は一切不要。対応プラットフォームに直接配信できます。

Utilize the camera for webcam functionality or direct live streaming.

## 7. MAINTENANCE

### 7.1. Cleaning the Camera

Use a soft, lint-free cloth to clean the camera body and lens. For stubborn smudges on the lens, use a specialized lens cleaning solution and cloth. Do not use harsh chemicals or abrasive materials.

### 7.2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Store the camera with a partially charged battery (around 50%) if not used for extended periods. Do not expose the battery to extreme heat.

### 7.3. Storage

Store the camera in a cool, dry place, away from dust and moisture. When storing for long periods, remove the MicroSD card and ensure the battery is partially charged.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; faulty battery; camera malfunction.	Charge the battery fully. Try a different charging cable/adapter. If issue persists, contact support.
Cannot record video/take photos.	No MicroSD card; MicroSD card full; MicroSD card error; incorrect mode.	Insert a MicroSD card. Delete files or replace card. Format the card. Switch to correct mode.
Poor image/video quality.	Dirty lens; low light conditions; incorrect settings.	Clean the lens. Ensure adequate lighting. Adjust resolution, exposure, or other settings.

Problem	Possible Cause	Solution
Wireless control not working.	Bluetooth/Wi-Fi off; out of range; pairing issue.	Ensure Bluetooth/Wi-Fi is enabled on both devices. Move closer to the camera. Re-pair the devices.

## 9. SPECIFICATIONS

Feature	Detail
Brand	SJCAM
Model Number	C400
Photo Sensor Technology	CMOS (1/2.8-inch)
Video Capture Resolution	4K (30fps), 2.5K, 1080P
Lens Aperture	f/2.0
Field of View (FOV)	154° Wide Angle
Optical Zoom	8X
Image Stabilization	6-axis Gyro (EIS)
Front Screen Size	1.3 inches (Touchscreen)
Main Screen Size	2.23 inches
Connectivity	Bluetooth, Wi-Fi (5G), USB Type-C
Storage Media	MicroSD card (up to 128GB)
Waterproof Depth	30 meters (with waterproof case)
Battery Life	Approx. 460 minutes (4K30fps with handle + small battery)
Product Dimensions	3.8 x 3.8 x 14 cm
Product Weight	760 g

## 10. WARRANTY & SUPPORT

The SJCAM C400 comes with a **1-year free warranty** from the date of purchase. For any technical issues or inquiries, please contact our **24-hour online support**. Refer to the official SJCAM website or your purchase documentation for specific contact details.

## 11. OPTIONAL ACCESSORIES

Enhance your SJCAM C400 experience with a range of optional accessories:

- Extension Adapter
- Auxiliary Light
- Magnetic Pendant
- Additional Tripods and Mounts

### オプションアクセサリ

C400の多彩な機能が、旅行から日常のお出かけまで——あらゆるシーンで素敵な映像を簡単に捉えるお手伝いをします。



A selection of optional accessories to expand your camera's capabilities.