

Olvy ZJ-529

Olvy Digital Contact Grill (Model ZJ-529) User Manual

Your guide to safe and efficient use of your Olvy Digital Contact Grill.

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Improper use can result in personal injury and damage to the appliance.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors. This appliance is for household use only.
- Always place the appliance on a stable, heat-resistant surface.
- The surfaces of the appliance are hot during use. Use the cool-touch handle and wear oven mitts if necessary.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.

2. PRODUCT OVERVIEW

The Olvy Digital Contact Grill is a versatile 3-in-1 appliance designed for grilling, toasting, and pressing. It features adjustable temperature control, a digital timer, and non-stick plates for easy cooking and cleaning.

Grigliatura intelligente con controllo digitale della temperatura

Sempre la temperatura perfetta per ogni piatto



Figure 2.1: Smart grilling with digital temperature control and display for precise cooking.

Key Features:

- **Digital Temperature Control:** Ensures uniform heat and consistent results for perfect grilling.
- **3-in-1 Functionality:** Use as a sandwich toaster, panini press, or open grill (180°).
- **Large Cooking Area:** Accommodates up to 4 toasts simultaneously, ideal for families.
- **Non-Stick Plates:** Facilitates easy food release and quick cleaning.
- **Cool-Touch Handle:** Provides safe operation during and after cooking.
- **Digital Timer:** For worry-free grilling and precise cooking times.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the grill from its packaging.
2. Remove all packaging materials, stickers, and labels.

3. Check for any damage during transit. If the appliance is damaged, do not use it and contact customer support.

Initial Cleaning:

Before first use, it is important to clean the cooking plates.

1. Wipe the cooking plates with a damp cloth or sponge.
2. Dry thoroughly with a soft cloth or paper towel.
3. The appliance is now ready for use.

4. OPERATING INSTRUCTIONS

Basic Operation:

1. Plug the appliance into a suitable power outlet. The digital display will illuminate.
2. **Preheating:** Set your desired temperature using the '+' and '-' buttons. The grill will begin to preheat. The display will show the current temperature and target temperature.
3. Once the set temperature is reached, the grill is ready for cooking.
4. Place your food on the lower cooking plate.
5. Close the lid for contact grilling or leave it open for open grilling (see below).
6. Use the timer function (if desired) by pressing the 'M' button and adjusting the time with '+' and '-' buttons. The timer will alert you when cooking is complete.
7. After cooking, carefully remove the food using heat-resistant utensils.
8. Unplug the appliance and allow it to cool completely before cleaning.

Griglia senza pensieri

Imposta facilmente il tempo con il timer digitale



Timer digitale
pratico



Risultato perfetto,
sempre puntuale



Segnale acustico
automatico



Figure 4.1: Worry-free grilling with the practical digital timer and automatic acoustic signal.

3-in-1 Functionality:

The Olvy Digital Contact Grill offers versatile cooking options:

- **Contact Grill/Panini Press:** For sandwiches, paninis, and thinner cuts of meat. Close the lid to cook both sides simultaneously.
- **Open Grill (180°):** The grill can be fully opened to a flat position, doubling your cooking surface. This is ideal for grilling larger quantities of food like steaks, vegetables, or multiple items at once.
- **Adjustable Height:** The top plate can be set at various heights above the bottom plate, useful for melting cheese or warming delicate items without direct contact.

Più di una semplice tostiera

Adatto anche per panini, carne e verdure

Design 3 in 1
multifunzione



Apribile a 180°

Piastre
grill grandi



Figure 4.2: More than just a toaster: The 3-in-1 multifunctional design is suitable for paninis, meat, and vegetables, and can open 180°.

Qualità da caffè, direttamente a casa

Piastre grill con scanalature
profonde per toast ancora
più croccanti



Figure 4.3: Cafe quality directly at home: Deep-grooved grill plates for even crispier toast and capacity for up to four sandwiches.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your Olvy Digital Contact Grill.

Cleaning the Cooking Plates:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. The non-stick plates are designed for easy cleaning. Wipe them with a damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap.
3. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
4. Ensure all moisture is wiped away before storing or reusing the grill.

Facile da pulire e grigliare in sicurezza

Senza residui incrostati
né sostanze nocive



Rivestimento antiaderente



Senza PFAS



Figure 5.1: Easy and safe grilling: Non-stick coating ensures no encrusted residues or harmful substances, making cleaning simple.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use harsh chemicals or abrasive materials.

Storage:

- Store the grill in a clean, dry place.
- The compact and foldable design allows for space-saving storage.

6. TROUBLESHOOTING

If you encounter any issues with your Olvy Digital Contact Grill, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outlet issue; damaged cord/plug.	Ensure the plug is securely inserted into a working outlet. Check the power cord for damage.
Food sticks to the plates.	Plates not properly cleaned; food not suitable for non-stick; insufficient preheating.	Ensure plates are clean before use. Lightly brush plates with cooking oil if necessary. Allow grill to fully preheat.
Uneven cooking.	Grill not fully preheated; food unevenly distributed.	Allow the grill to reach the set temperature before placing food. Distribute food evenly on the plates.
Smoke or unusual odor during first use.	Residual manufacturing oils.	This is normal for first use. Ensure good ventilation. It should dissipate quickly.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Olvy
Model Number	ZJ-529
Color	Silver
Material	Stainless Steel
Product Dimensions (DxWxH)	37.5D x 15W x 38.5H cm
Special Feature	Cool Touch Handle, Adjustable Temperature, Digital Timer
Included Components	Non-stick plates
Number of Settings	3 (for cooking modes)
Country of Origin	China
Year of Manufacture	2025

Spazio per grigliare per tutta la famiglia



Figure 7.1: Grilling space for the whole family, showing plate dimensions of 29cm x 23cm.

8. WARRANTY AND SUPPORT

Warranty Information:

Olvy products are manufactured to the highest quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

Customer Support:

For any questions, technical assistance, or warranty claims, please contact Olvy customer support through the retailer where you purchased the product or visit the official Olvy website for contact information.