

HARPPA WG13A01Q

HARPPA 4-Seater Wagon Model WG13A01Q Instruction Manual

Thank you for choosing the HARPPA 4-Seater Wagon. This manual provides essential information for the safe assembly, operation, and maintenance of your wagon. Please read it thoroughly before use and retain it for future reference.

1. IMPORTANT SAFETY INFORMATION

Always prioritize the safety of children when using the HARPPA 4-Seater Wagon. Failure to follow these instructions could result in serious injury.

- **Always use the 5-point safety harnesses:** Ensure all children are securely fastened in their seats at all times.
- **Never leave children unattended:** Adult supervision is required at all times when children are in or near the wagon.
- **Maximum weight capacity:** Do not exceed the recommended total weight capacity for children and cargo. Refer to the Specifications section for details.
- **Proper folding and unfolding:** Ensure the wagon is fully locked in its open or folded position before use or transport. Keep hands and fingers clear of moving parts.
- **Braking:** Always engage the parking brake when the wagon is stationary.
- **Terrain:** Use caution on uneven terrain, inclines, or near stairs.
- **Maintenance:** Regularly inspect the wagon for loose parts, damage, or wear. Do not use if any components are damaged.

2. SETUP AND ASSEMBLY

2.1 Unpacking

Carefully remove all components from the packaging. Verify that all parts are present according to the packing list (not provided in this document, refer to your product packaging). Dispose of all packaging materials responsibly.

2.2 Initial Assembly

The HARPPA 4-Seater Wagon is designed for easy assembly. Typically, this involves attaching the wheels, handles, and canopy. Follow the specific instructions provided with your product for detailed steps.

2.3 Folding and Unfolding

The wagon features a convenient 3-step folding mechanism for compact storage and transport.



Image: The HARPPA 4-Seater Wagon in its open, partially folded, and fully folded states, illustrating the compact design and dimensions (Open: 31" L x 26" W x 45" H; Folded: 31" L x 15.7" W x 28" H).

1. **To Unfold:** Release the locking mechanism (if engaged). Pull the frame upwards and outwards until it clicks securely into place. Ensure all sides are fully extended and locked.
2. **To Fold:** Locate the folding release mechanisms (usually levers or buttons on the frame). Engage these mechanisms while pushing the sides of the wagon inwards and downwards. The wagon will collapse

into a compact form.

3. **Secure when folded:** Ensure the wagon is securely latched in its folded position to prevent accidental unfolding during transport.

3. OPERATING INSTRUCTIONS

3.1 Seating and Safety Harnesses

The wagon is equipped with four individual seats, each featuring a 5-point safety harness to secure children.



Image: A close-up view of the robust 5-point safety harness system, designed to securely fasten children in the wagon seats.

- **Securing a Child:** Place the child in the seat. Bring the shoulder straps over the child's shoulders and the waist straps around their waist. Insert the buckles into the central buckle until they click. Adjust the straps for a snug, secure fit.
- **Releasing a Child:** Press the button on the central buckle to release the harness.

3.2 Maneuvering and Wheels

The HARPPA wagon is designed with rugged wheels for various terrains and features both push and pull

handles for versatile handling.



Image: A person's foot engaging the brake mechanism on one of the 11.5-inch rugged wheels, suitable for grass, gravel, boardwalks, and park trails.

- **Push Handle:** Use the adjustable push handle for stroller-like maneuverability.
- **Pull Handle:** The front pull handle allows for easy towing, especially over rougher surfaces.
- **Brakes:** Engage the foot-activated parking brake located near the rear wheels when the wagon is stationary. Ensure it is fully engaged before releasing your grip.

3.3 UPF Canopy and Insect Mesh

The wagon includes a removable canopy with UPF protection and integrated insect mesh for comfort and protection.



UPF Canopy & Insect Mesh

Stay Cool & Covered
No Extra Add-Ons.

Image: A close-up of the UPF canopy fabric and integrated insect mesh, designed to provide shade and protection from insects.

- **Attaching the Canopy:** Slide the canopy poles into the designated slots on the wagon frame. Secure any clips or fasteners.
- **Adjusting the Canopy:** The canopy can be adjusted to provide optimal shade.
- **Using the Insect Mesh:** Unroll the insect mesh from the canopy and secure it around the wagon opening to protect children from insects.
- **Removing the Canopy:** Reverse the attachment steps to remove the canopy for storage or when not needed.

3.4 Storage and Accessories

The wagon offers various storage options and accessories for convenience.

Hands-Free

Mess-Free Organization Keep Drinks, Bags & Essentials Securely Stored



Image: The parent console attached to the handle, showing compartments for drinks, bags, and other essentials for hands-free organization.

Hands-Free Organization

Keep Drinks, Bags & Essentials
Securely Stored



Image: A close-up view of the mesh and fabric storage pockets located on the exterior sides of the wagon, providing additional space for small items.

Detachable Snack Tray



Image: The detachable snack tray installed inside the wagon, featuring cup holders and compartments for snacks, toys, or other small items.

- **Parent Console:** Attach the parent console to the push handle for convenient storage of drinks, keys, and personal items.
- **Side Pockets:** Utilize the mesh and fabric pockets on the exterior for additional storage.
- **Detachable Snack Tray:** Install the snack tray between the seats for children to hold drinks and snacks. Ensure it is securely attached before use.

4. MAINTENANCE

4.1 Cleaning

- **Fabric:** Spot clean fabric components with a mild soap and cold water. Do not use bleach. Air dry thoroughly.
- **Frame:** Wipe the metal and plastic frame components with a damp cloth. Dry immediately to prevent rust.
- **Wheels:** Periodically clean debris from the wheels and axles to ensure smooth operation.

4.2 Storage

Store the wagon in a clean, dry place away from direct sunlight and extreme temperatures. Ensure it is fully folded and latched to prevent accidental opening.

5. TROUBLESHOOTING

- **Wagon not folding/unfolding smoothly:** Check for obstructions in the folding mechanism. Ensure all locking levers are disengaged before folding.
- **Wheels not turning freely:** Inspect wheels for debris (e.g., hair, dirt) and remove. Ensure the brake is not engaged.
- **Harness difficult to buckle/unbuckle:** Ensure no fabric is caught in the buckle. Clean the buckle if necessary.
- **Canopy not staying in place:** Verify that the canopy poles are fully inserted and any clips are securely fastened.

If you encounter issues not listed here or require further assistance, please contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	HARPPA
Model Number	WG13A01Q
Color	Black
Item Weight	19.75 kg
Special Feature	Easy Assembly
Seating Capacity	4 Children

7. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official HARPPA website. If you have any questions, concerns, or require technical support, please contact HARPPA customer service through the contact details provided on your product packaging or the official website.