



Manuals.plus /

› Gourmia /

› Gourmia 4-Slice Toaster GDT2680 Instruction Manual

Gourmia GDT2680

Gourmia 4-Slice Toaster Instruction Manual

Model: GDT2680

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Always attach plug to appliance first, then plug cord into the wall outlet.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Gourmia 4-Slice Toaster (Model GDT2680) features dual independent controls, extra-wide slots, and multiple toasting functions for versatile use. Its compact design and smudge-resistant finish make it a practical addition to any kitchen.

PRECISION *Toasting*

6 BROWNING SETTINGS

PERFECT TOAST


DIAL IN YOUR PERFECT SHADE WITH 6 ADJUSTABLE BROWNING LEVELS

TAP & TOAST

DEFROST, BAGEL, AND CANCEL FUNCTIONS AT YOUR FINGERTIPS



BARELY TOASTED

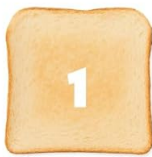

WARM & PALE

GOLDEN GLOW



GENTLE CRISP

HONEY BROWN



BROWNED & TENDER

AMBER CRISP



GOLDEN CRISP

TOFFEE CRUNCH



BOLD TEXTURE

DARK ROAST



FULL CRUNCH

Front view of the Gourmia 4-Slice Toaster, showcasing the dual control panels and four toasting slots.

INDEPENDENT Temperature SETTINGS



The toaster features independent temperature settings for each pair of slots, allowing different items to be toasted simultaneously.

SETUP

1. **Unpack the Toaster:** Carefully remove the toaster and all packaging materials.
2. **Position the Toaster:** Place the toaster on a stable, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. **Initial Use (Burn-off):** Before toasting food for the first time, operate the toaster without bread on the highest browning setting (6) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. It is normal for some smoke or odor to be present during this process.
4. **Plug In:** Insert the power plug into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

The Gourmia 4-Slice Toaster features two independent control panels, allowing you to toast different items simultaneously with separate settings.

1. Loading Bread

- Place up to two slices of bread, bagels, or other items into each set of toasting slots. The extra-wide slots accommodate various bread types.
- Ensure items are centered within the slots for even toasting.

Easy AS

- 1**
ADD YOUR TOAST
- 2**
CHOOSE YOUR SETTINGS
- 3**
ENJOY YOUR TOAST

Illustration of the simple three-step process: Add toast, choose settings, and enjoy.

2. Selecting Browning Level

- Use the browning control knob on each side of the toaster to select your desired toast shade from 1 (lightest) to 6 (darkest).
- The digital display will show the selected browning level and a countdown timer during operation.

6 BROWNING LEVELS

ONE-TOUCH TOASTING MODES

LARGE FAMILY CAPACITY

SLIDE-OUT CRUMB TRAY

AUTO POP-UP

FINGERPRINT-RESISTANT FINISH

2 INDEPENDENT TEMPERATURES

CONSISTENT TOASTING RESULTS

Visual guide to the six browning levels, from barely toasted to dark roast.

3. Using Special Functions

Each control panel has dedicated buttons for special toasting modes:

- **Bagel Mode:** Press the **BAGEL** button. This mode toasts the cut side of the bagel while gently warming the outer side.
- **Defrost Mode:** Press the **DEFROST** button. This mode is ideal for toasting frozen bread, waffles, or pastries, adding extra time to thaw before toasting.
- **Reheat Mode:** Press the **REHEAT** button. This mode warms previously toasted items without further browning.
- **Cancel:** Press the **CANCEL** button at any time to stop the toasting cycle and eject the bread.



The control panel showing the Bagel, Defrost, and Cancel function buttons.



Using the Defrost preset for frozen items like waffles.

PERFECTLY TOASTED Bagels



The extra-wide slots accommodate bagels, and the Bagel preset ensures proper toasting.

4. Starting the Toasting Cycle

- After selecting your desired browning level and any special functions, push down the carriage lever until it locks into place. The toasting cycle will begin.
- The digital display will show a countdown of the remaining toasting time.
- Once the cycle is complete, the toast will automatically pop up.

POPS UP WHEN IT'S *Ready*



AUTO POP-UP

AUTOMATICALLY LIFTS
TOAST WHEN READY
FOR **CONSISTENT,**
NEVER-BURNT RESULTS

EASY LIFT

RAISES TOAST HIGHER
FOR **SAFE, BURN-FREE**
REMOVAL

The auto pop-up feature and extra-lift lever for safe removal of smaller items.

5. Using the Extra-Lift Lever

For smaller items that may be difficult to retrieve, gently lift the carriage lever upwards after the toasting cycle is complete. This raises the toast higher for easier and safer removal.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Empty Crumb Trays:** Pull out the two slide-out crumb trays located at the bottom of the toaster. Discard accumulated crumbs. Wipe the trays clean with a damp cloth and dry thoroughly before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, use a mild non-abrasive cleaner. The toaster features a smudge-resistant finish for easy cleaning.
4. **Do Not Immerse:** Never immerse the toaster in water or any other liquid.
5. **Clean Interior:** Do not insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully remove the food after it has cooled.
6. **Storage:** When not in use, store the toaster in a clean, dry place. The power cord can be wrapped around the cord storage area at the bottom of the unit.



The removable crumb tray simplifies cleaning and keeps your countertop tidy.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged into a working electrical outlet. Check your circuit breaker.
Bread does not toast.	Carriage lever not fully depressed; browning setting too low.	Push the carriage lever down until it locks. Increase the browning setting.
Toast is too light/dark.	Browning setting incorrect for desired shade.	Adjust the browning control knob to a higher setting for darker toast or a lower setting for lighter toast.
Smoke coming from toaster.	Food lodged in slots; excessive crumbs in tray; initial burn-off.	Press CANCEL, unplug, and allow to cool. Carefully remove any lodged food. Empty crumb trays. Initial smoke is normal during first use.
Bread stuck in toaster.	Item too large; item not centered.	Press CANCEL, unplug, and allow to cool. Use the extra-lift lever. If still stuck, carefully remove with non-metallic tongs.

SPECIFICATIONS

Model: GDT2680

Brand: Gourmia

Color: Black

Material: Plastic, Stainless Steel

Product Dimensions (D x W x H): 11.5" x 10" x 8"

Item Weight: 5 Pounds

Wattage: 1700 watts

Voltage: 120 Volts

Slot Count: 4

Browning Levels: 6

Special Features: Cord Storage, Removable Crumb Tray, Variable Browning Control, Dual Independent Controls, Bagel Mode, Defrost Mode, Reheat Mode, Auto Pop-up, Extra-Lift Lever, Smudge-Resistant Finish.

Included Components: Toaster, Crumb Tray

— THE — *Ideal* FIT



Dimensions of the Gourmia 4-Slice Toaster for counter space planning.

WARRANTY AND SUPPORT

This Gourmia product is covered by a **1-Year Manufacturer's Warranty**. For extended coverage, you can register your product online.

- **Warranty Registration:** Register your new product at www.gourmia.com/register to receive an additional **2 years of FREE warranty coverage**. This includes repair service and customer support.
- **Customer Support:** For any questions, assistance, or warranty claims, please visit the Gourmia website or contact their customer service.