

Manuals.plus /

› **Bosch** /

› Bosch Unlimited 10 Cordless Stick Vacuum Cleaner User Manual - Model BBS104SBUC

Bosch BBS104SBUC

Bosch Unlimited 10 Cordless Stick Vacuum Cleaner User Manual

Model: BBS104SBUC

1. INTRODUCTION

The Bosch Unlimited 10 Cordless Stick Vacuum Cleaner is engineered for outstanding cleaning performance across various surfaces. Featuring MicroClean Technology, it effectively captures even microscopic particles and allergens, ensuring a truly clean environment. This manual provides essential information for the safe and efficient operation, maintenance, and care of your vacuum cleaner.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the appliance is switched off before cleaning or maintenance.
- Do not use the appliance to pick up water or wet substances.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only manufacturer-recommended attachments.
- Do not operate the vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water.
- Store the vacuum cleaner in a dry, indoor area.

3. PACKAGE CONTENTS

Your Bosch Unlimited 10 vacuum cleaner comes with the following components and accessories:

- Bosch Unlimited 10 Handheld Unit

- MicroClean Brush with LED Lights
- Precise Brush
- Furniture Brush
- XXL Upholstery Nozzle
- Long Flexible Crevice Nozzle
- Crevice Nozzle
- Hard Floor Soft Brush
- 4.0Ah Battery
- Fast Charger
- Charging Dock
- User Manual



Charge directly on the docking station or the quick charger

*Compared to standard 1amp charger that comes with the docking station.

Image: The Bosch Unlimited 10 vacuum cleaner displayed with its full range of included accessories, such as various brushes, nozzles, battery, and charger.

4. SETUP

4.1 Assembly

Assemble the main unit by connecting the handheld vacuum to the extension tube, and then attach the desired cleaning nozzle. Ensure all connections click securely into place.

4.2 Charging the Battery

Before first use, fully charge the 4.0Ah battery using the provided fast charger. The battery can be charged directly on the docking station or using the quick charger for faster charging.



Image: The Bosch Unlimited 10 handheld unit charging on its wall-mounted docking station, alongside a separate quick charger for the battery.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off and Mode Selection

Press the power button to turn the vacuum on or off. Use the intuitive display to select from 6 cleaning modes, including Eco, Auto, and Turbo, to suit different cleaning tasks and surfaces. The Auto mode intelligently adjusts suction power based on the surface detected.

Your browser does not support the video tag.

Video: Demonstrates the Bosch Unlimited 10's display and its 6 cleaning modes, including Eco, Auto, and Turbo, showing how the vacuum adapts to different surfaces and tasks.

5.2 MicroClean Brush with LED Lights

The MicroClean Brush features LED lights to illuminate fine dust in dark areas, ensuring no particle is missed. It removes particles down to 0.3 microns from all floor types.

Power and performance, all in one.



Up to 80min
runtime¹



>99.9% dust
pick-up²



Dust Box w/
Compression



90° bendable
Flex Tube



6 extra
accessories



Bonus: fast
charger



6 cleaning
modes



Soft brush for
delicate floors

¹Maximum runtime is measured in Eco mode without electrical nozzle. Tested according to EN IEC 62885-4:2020/A1:2023. ²Dust pick-up measured in Turbo mode on hard floors with crevices. Tested according to IEC 62885-4:2020/A1:2023.

Image: The Bosch Unlimited 10 in stick mode, highlighting the MicroClean Brush with its integrated LED lights for enhanced visibility during cleaning.

5.3 Flex Tube and Ergonomic Features

The 90° bendable Flex Tube allows for convenient cleaning under low furniture without bending down. The Quick Stand and Nozzle Foot Release provide flexibility for cleaning various surfaces and heights.



MicroClean Ring visibly confirms when surface is clean vs. thoroughly clean

Image: A person using the Bosch Unlimited 10 with its 90° bendable Flex Tube to clean effortlessly under a sofa.

5.4 MicroClean Ring

The MicroClean Ring visually confirms when a surface is thoroughly clean, providing assurance that even invisible particles have been removed.

Your browser does not support the video tag.

Video: Illustrates the MicroClean Ring feature, showing how it changes color to visually confirm when a surface has been thoroughly cleaned.

6. MAINTENANCE

6.1 Emptying the Dust Box

The dust box features a compression slider that packs dust, helping to avoid dust clouds during emptying and allowing you to empty the bin up to 50% less often.



Image: Demonstrates the dust box with its compression slider, showing how it compacts dust to reduce emptying frequency and prevent dust clouds.

6.2 Cleaning the Filters

The HEPA filtration system traps over 99.99% of dust particles, including allergens. For best suction performance, clean the filter regularly by rotating it to shake off excess dust. For deeper cleaning, disassemble the filter cartridge.

Your browser does not support the video tag.

Video: Provides instructions on how to clean the filter of the Bosch Unlimited 10 vacuum cleaner for optimal performance.

Say goodbye to post-cleaning cleanup.



Avoid dust clouds & empty up to 50% less often¹

Dust Box with Compression Slider



Anti-hair tangling

Wider rollers and specially arranged bristles



Ideal for those with allergies

HEPA Filtration² traps >99.9%³ of particles, including allergens

[1] Compression increases the dust receptacle capacity (weight of compressed vs. uncompressed dust with same volume) based on Bosch internal test results with a mix of fiber material (cl. 7.2.3) and test dust (cl. 5.12.2.2) acc. to IEC 62885-2:2021. [2] Tested according to ASTM F3150. [3] Tested according to IEC 62885-4:2020/A1:2023.

Image: A step-by-step visual guide on how to easily clean the removable filter of the Bosch Unlimited 10 by rotating it to dislodge dust.

6.3 Cleaning the Brush Roller

The MicroClean Brush is designed with wider brush rollers and a special arrangement of bristles to prevent hair tangling. The roller is removable for deep cleaning.

Your browser does not support the video tag.

Video: Demonstrates the process of cleaning the brush roller of the Bosch Unlimited 10, including how to remove tangled hair.



Image: Close-up view of the Bosch Unlimited 10's brush roller, highlighting its anti-hair tangling design with wider bristles and easy removal for cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your Bosch Unlimited 10, please refer to the following common solutions:

- **No Power:** Ensure the battery is fully charged and correctly inserted.
- **Reduced Suction:** Check if the dust box is full, the filter is clogged, or the brush roller is tangled with hair. Clean as necessary.
- **Unusual Noises:** Inspect the brush roller and nozzle for any obstructions.
- **Automatic Mode Issues:** If the vacuum is not switching modes correctly, ensure the sensor is clean.

For more detailed troubleshooting, scan the QR code provided in the quick start guide or visit the Bosch website.

8. SPECIFICATIONS

Feature	Specification
Brand	Bosch
Model Name	Bosch Unlimited 10
Model Number	BBS104SBUC
Power Source	Battery (18 Volts)
Battery Runtime	Up to 80 minutes (Eco mode)
Filter Type	HEPA Filter
Special Features	90° Bendable Tube, Anti-hair tangling, Bagless, Fast Charger, MicroClean Ring
Surface Recommendation	All floors
Item Weight	8.16 Pounds
Color	Black

9. WARRANTY & SUPPORT

Your Bosch Unlimited 10 Cordless Stick Vacuum Cleaner comes with a **10-year motor warranty** and a **2-year manufacturer warranty**. For full details, please refer to the warranty statement included with your product or visit the Bosch website.

For customer support, please contact Bosch at **1-800-701-5231** or visit www.bosch-home.com/us.