 


Nekteck FM17



Nekteck 2026 Upgraded Shiatsu Foot Massager with Heat

 
Model: FM17



1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Nekteck Foot Massager. Retain this manual for future reference.

- Always unplug the massager before cleaning.
- Do not use while sleeping or with wet feet.
- Keep the power cord away from heat sources and sharp objects.
- Do not use if you have a blood clot, heart condition, or are pregnant.
- Consult a doctor before use if you have any medical conditions.
- Keep out of reach of children and pets.



2. PRODUCT OVERVIEW

The Nekteck 2026 Upgraded Shiatsu Foot Massager with Heat (Model FM17) is designed to provide a comprehensive foot massage experience. It combines deep kneading rollers with 360° full-foot air compression and adjustable heat for relaxation and relief.





Figure 2.1: Nekteck 2026 Upgraded Shiatsu Foot Massager.

Key Features:

- Professional Shiatsu system with deep kneading rollers.
- 360° full-foot air compression.
- 3 intensity levels for both kneading and air compression.
- Adjustable heat function up to 126°F with NTC smart temperature control.
- Selectable 15- or 30-minute timer.
- Upgraded touchscreen for easy operation.
- Memory function to recall previous settings.
- Elevated foot entry with gentle calf support and air-cushion ankle compression.
- Lightweight, quiet, and portable design.

- Fits feet up to US size 13.
- Washable foot covers for hygiene.

Your browser does not support the video tag.

Video 2.1: Overview of the Nekteck Foot Massager with Heat features.

3. PACKAGE CONTENTS

Upon opening the package, ensure all the following items are present:

- Nekteck Shiatsu Foot Massager Unit
- Power Adapter
- User Manual

4. SETUP

1. Place the foot massager on a flat, stable surface. The anti-slip pads on the bottom will help secure the unit.
2. Connect the power adapter to the massager's power input port, located at the rear of the unit.
3. Plug the power adapter into a suitable electrical outlet.
4. Ensure your feet are clean and dry. For optimal comfort and hygiene, it is recommended to wear socks.
5. Gently insert your feet into the foot chambers. The elevated foot entry and air-cushion ankle compression are designed for comfort.

For Tired & Achy Feet After Long Days



Figure 4.1: User inserting feet into the massager.

5. OPERATING INSTRUCTIONS

The Nekteck Foot Massager features an intuitive touchscreen control panel. All functions can be used independently or in combination.

Customize Your Massage

Independent Controls for Perfect Relief



Air Compression
OFF/L/M/H



Kneading Intensity
OFF/L/M/H



Soothing Heating
OFF/L/H



Adjustable Timer
15/30Min



Figure 5.1: Control panel of the Nekteck Foot Massager.

1. **Power On/Off:** Press the **Power Button** (red circle with line) to turn the unit on or off. The massager will start with the last used settings due to its memory function.
2. **Adjusting Kneading Intensity:** Press the **Kneading Intensity Button** (three vertical bars) to cycle through 3 levels: Low (1 bar), Medium (2 bars), High (3 bars).
3. **Adjusting Air Compression:** Press the **Air Compression Button** (wifi-like icon) to cycle through 3 levels: Low (L), Medium (M), High (H).
4. **Activating Heat Function:** Press the **Heat Button** (three wavy lines) to turn the heat on or off. The heat can reach up to 126°F. For optimal warmth, turn on the heating function 10-15 minutes before use and set to 'H'.
5. **Setting the Timer:** Press the **Timer Button** (clock icon) to select a massage duration of 15 or 30 minutes.

Gentle Yet Deep Foot Massage

Innovative High-Entry Design for Comfort & Support

3 Personalized Intensity Levels

Low

Medium

High



Figure 5.2: Visual representation of adjustable intensity levels.

126°F Adjustable Heat

Consistent & Comfortable Warmth
for Deep Relaxation

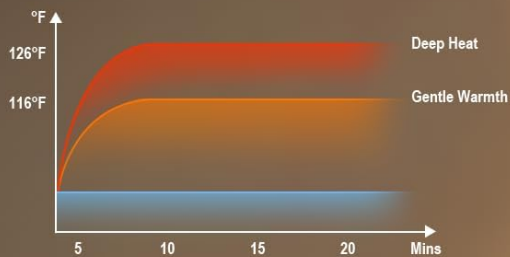 


Figure 5.3: Adjustable heat function reaching 126°F.

360-degree Air Compression

Advanced Deep Kneading Tech

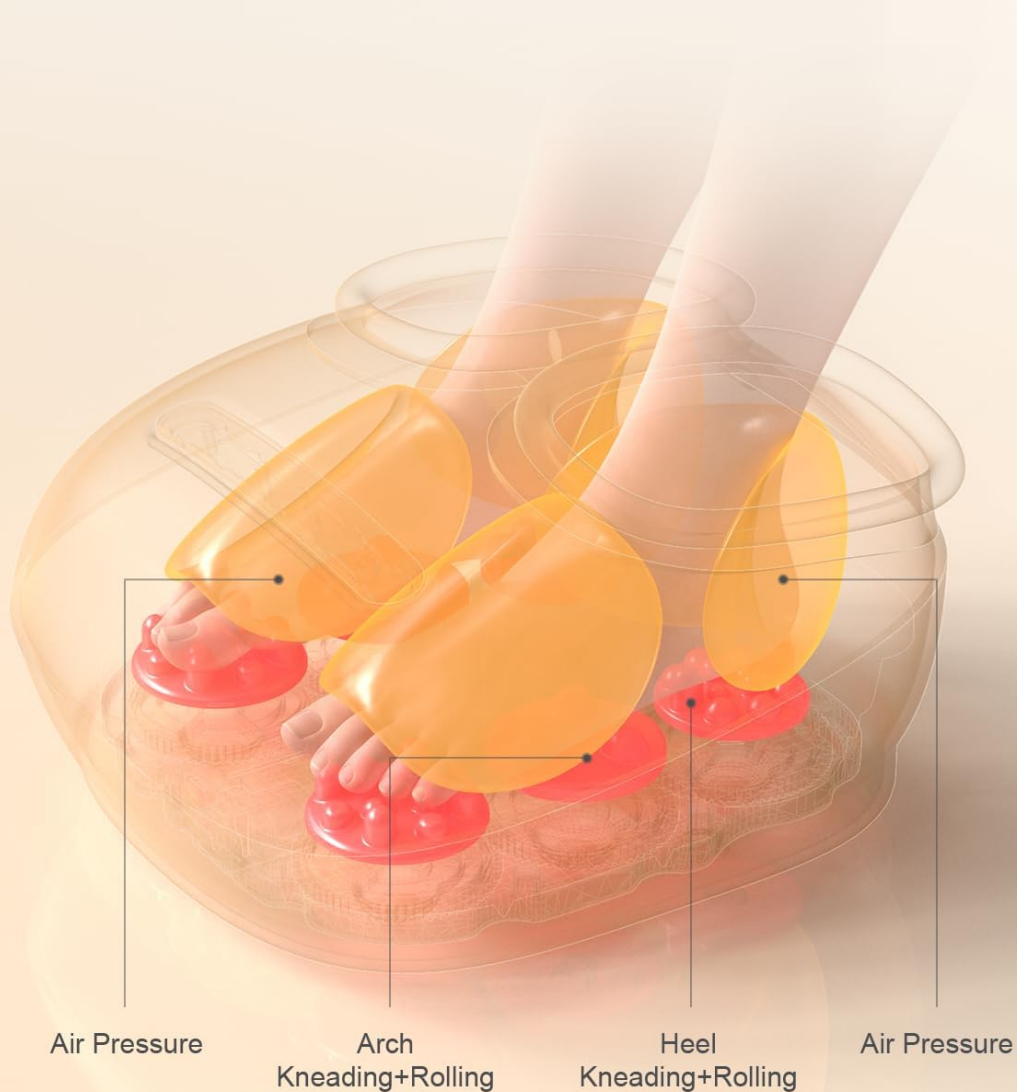 


Figure 5.4: Illustration of 360-degree air compression and kneading points.

Your browser does not support the video tag.

Video 5.1: Demonstration of the Nekteck Foot Massager in use.

6. MAINTENANCE

Cleaning:

- Always unplug the massager from the power outlet before cleaning.
- The internal foot covers are removable and washable for easy hygiene. Unzip the covers, remove them, and wash according to fabric care instructions. Ensure they are completely dry before reattaching.
- Wipe the exterior of the massager with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

Storage:

- Store the massager in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on the massager.



Figure 6.1: User-friendly design highlights, including washable foot covers.

7. TROUBLESHOOTING

If you experience any issues with your Nekteck Foot Massager, please refer to the following common solutions:

- **Unit not powering on:** Ensure the power adapter is securely connected to both the massager and a working electrical outlet.
- **No massage or abnormal massage:** Check that your feet are properly inserted into the chambers. If the issue persists, power cycle the device by unplugging it for a few minutes and then plugging it back in.

- **No heat:** Ensure the heat function is activated on the control panel. Allow 10-15 minutes for the heat to reach optimal temperature.
- **Discomfort during massage:** Adjust the kneading and air compression intensity to a lower setting. Ensure you are wearing socks.

If the problem cannot be resolved using these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	13.4 x 14.6 x 6.9 inches
Item Weight	6 Pounds
Model Number	FM17
Power Source	Corded Electric
Target Use Body Part	Ankle, Feet, Foot, Heel
Special Features	Auto Shut-Off, Heat, Quiet, Speed Control, Timer
Massage Therapy Technique	Compression, Kneading, Rolling, Shiatsu
Material Type	Polyethylene (PE)
Color	Black

9. WARRANTY AND SUPPORT

1-Year Free Product Replacement Insurance:

Your purchase qualifies for a 1-Year Free Product Replacement Insurance. Once registered, if anything goes wrong with the product, Nekteck will send a brand-new replacement (absolutely FREE) or provide a FULL refund of your order.

IMPORTANT: Register within 30 days from the date of purchase. Failure to complete registration does not diminish your warranty rights.

Register at: registration.nekteck.com

Customer Support:

For any questions or concerns regarding your Nekteck Foot Massager, please contact customer support:

- Email: support@nekteck.com
- Support Hours: Monday - Friday: 9:00 AM - 5:00 PM PST

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G33C8PMB>

More documents and user manuals: <https://manuals.plus/>