

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Waitbird](#) /

› [Waitbird Multipurpose Steam Cleaner \(Model CB-03A\) Instruction Manual](#)

## Waitbird CB-03A

# Waitbird Multipurpose Steam Cleaner (Model CB-03A) Instruction Manual

Chemical-Free High-Temperature Steam Cleaning for Various Surfaces

## INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Waitbird Multipurpose Steam Cleaner, Model CB-03A. This powerful steamer utilizes 248°F high-temperature steam for chemical-free cleaning across a wide range of surfaces, including floors, grout, tiles, and car interiors. Please read this manual thoroughly before operation.

## IMPORTANT SAFETY INFORMATION

- Always unplug the device before changing attachments or refilling the water tank to prevent burns or injury.
- The steam cleaner operates at high temperatures (up to 248°F). Exercise caution to avoid direct contact with steam.
- Ensure the safety cap is securely closed after filling the water tank. The cap is designed to prevent opening when the unit is hot.
- Use only distilled water to prolong the life of the appliance and prevent mineral buildup.
- Keep out of reach of children and pets.

## PACKAGE CONTENTS

Your Waitbird Steam Cleaner comes with 21 multifunctional replaceable accessories, designed for comprehensive cleaning:

- 6 x Nylon Utility Brushes
- 4 x Brass Utility Brushes
- 3 x Ironing Towels
- 6 x Microfiber Mop Pads
- 2 x Extension Tubes
- 1 x Measuring Cup
- 1 x Glove
- 1 x Ironing Brush

- 1 x Shoulder Strap
- 1 x Glass Brush
- 1 x Big Nozzle
- 1 x Floor Brush
- 1 x Carpet Glider



Image: A detailed view of the Waitbird Steam Cleaner and its 21 accessories, including various brushes, nozzles, cloths, and extension tubes.

## SETUP

1. **Fill Water Tank:** Unscrew the safety cap. Use the provided measuring cup and funnel to add up to 38oz (1.08 Liters) of distilled water into the tank. Do not overfill.
2. **Secure Safety Cap:** Screw the safety cap back on tightly. Ensure it is fully closed to prevent steam leakage.
3. **Connect Power:** Plug the steam cleaner into a suitable electrical outlet.
4. **Power On:** Press the power switch. The indicator light will turn red, signifying that the unit is heating up.
5. **Wait for Heating:** Allow approximately 5 minutes for the unit to heat up. The indicator light will turn green when the steam cleaner is ready for use.

FREE OF CHEMICALS, EASY TO CLEAN OVEN OIL STAINS, CAN BE USED WITH CONFIDENCE



Image: A visual guide demonstrating the four simple steps for setting up the steam cleaner, from adding water to waiting for the ready indicator.

## OPERATING INSTRUCTIONS

### Attaching Accessories

To attach any accessory, align it with the nozzle and twist until it locks securely into place. Always ensure the unit is unplugged and cool before changing attachments.

### Steam Control

The steam gun features a manual trigger for steam release. For continuous steam, push the steam lock button forward. To stop continuous steam, push the lock button backward. An adjustable knob allows you to control the steam intensity from minimum to maximum.

A SUFFICIENTLY LONG WIRE AND TRACHEA CAN RELIEVE BACK PAIN DURING CLEANING



Image: A visual representation of the steam gun's manual and automatic steam modes, along with the steam intensity adjustment knob.

### Cleaning Various Surfaces

- **Floors & Tiles:** Attach the floor brush with a microfiber mop pad. Use the extension tubes for comfortable upright cleaning. Move the brush slowly over the surface to allow steam to penetrate and clean.
- **Grout & Stubborn Stains:** Use the small nylon or brass utility brushes directly on the nozzle or with the extension tube for hard-to-reach areas. The high-temperature steam combined with the bristles effectively loosens grime.
- **Windows & Glass:** Attach the glass brush or squeegee tool. Steam the surface and then wipe clean for streak-free results.
- **Upholstery & Garments:** Use the ironing brush with an ironing towel or microfiber pad. Gently steam the

fabric to refresh and remove wrinkles.

- **Kitchen Appliances & Cars:** Utilize the big nozzle or various utility brushes for targeted cleaning of grease and dirt.

## Manual & Automatic Mode



### Manual Mode

Hold on to the steam gun by hand and move the steam button ahead, steam will come out directly



### Automatic Mode

If you need automatic steam without hand, just turn the steam lock to the right side when in use

## Adjust The Amount of Steam



Image: A collage illustrating the versatility of the steam cleaner on different surfaces like floors, tiles, car interiors, and sofas.

## DETAIL CLEANING IS NO PROBLEM, FASTER AND CLEANER



Image: The steam cleaner effectively removing baked-on grease from an oven interior using a brush attachment.

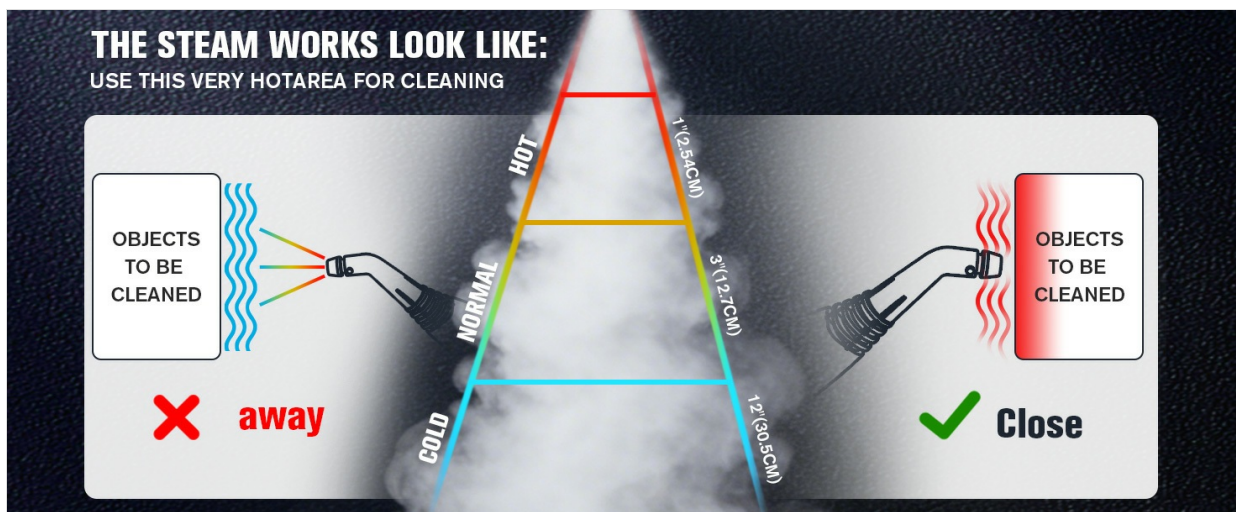


Image: The steam cleaner being used to clean a dirty window track, demonstrating its ability to reach tight spaces.

### Optimal Steam Distance

For effective cleaning, hold the steam nozzle close to the surface (approximately 1-3 inches). Holding it too far away (12 inches or more) will result in cooler, less effective steam.



Image: A diagram illustrating the optimal distance for steam cleaning to ensure maximum heat and effectiveness.

### Official Product Video

Video: A seller-provided video demonstrating various uses and features of the Waitbird Steam Cleaner for effective home cleaning.

## MAINTENANCE

- **Empty Water Tank:** After each use, unplug the unit and allow it to cool completely. Carefully unscrew the safety cap and empty any remaining water.
- **Clean Accessories:** Wash microfiber pads and ironing towels. Clean brushes and nozzles with water to remove debris.
- **Storage:** Store the steam cleaner and all accessories in a dry, safe place. The shoulder strap and accessory bag can assist with organized storage.

## TROUBLESHOOTING

- **No Steam:** Check if the unit is plugged in and powered on. Ensure the water tank is filled and the safety cap is securely closed. Wait for the green indicator light.
- **Water Dripping:** A small amount of water dripping is normal when the unit first starts or if the nozzle is held too far from the surface. Ensure the unit is fully heated and hold the nozzle closer to the cleaning

area.

- **Difficulty Removing Cap:** The safety cap is designed not to open when the unit is hot and pressurized. Allow the steamer to cool down completely before attempting to open the cap.

## SPECIFICATIONS

Feature	Detail
Brand	Waitbird
Model Name	CB-03A
Wattage	1500 watts
Voltage	230.0
Capacity	1.08 Liters (38oz)
Heat Time	5 Minutes
Maximum Temperature	248 Degrees Fahrenheit
Item Weight	10.18 pounds
Package Dimensions	20.5 x 11.5 x 7.5 inches
Special Features	Carry Handle, Child Lock, Compact Design, High Pressure, Rapid Heat Up
Surface Recommendation	Carpet, Ceiling, Counter Top, Door, Floor, Grout, Tile, Upholstery, Wall, Window

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact customer service. Keep your purchase receipt for warranty claims.