

[Manuals.plus](#) /

> [Wyklaus](#) /

> Wyklaus FK-86081 5-in-1 Electric Shaver User Manual

Wyklaus FK-86081

Wyklaus FK-86081 5-in-1 Electric Shaver User Manual

Model: FK-86081

INTRODUCTION

Thank you for choosing the Wyklaus FK-86081 5-in-1 Electric Shaver. This versatile device is designed for efficient and gentle hair removal across various body areas, offering a comprehensive grooming solution. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

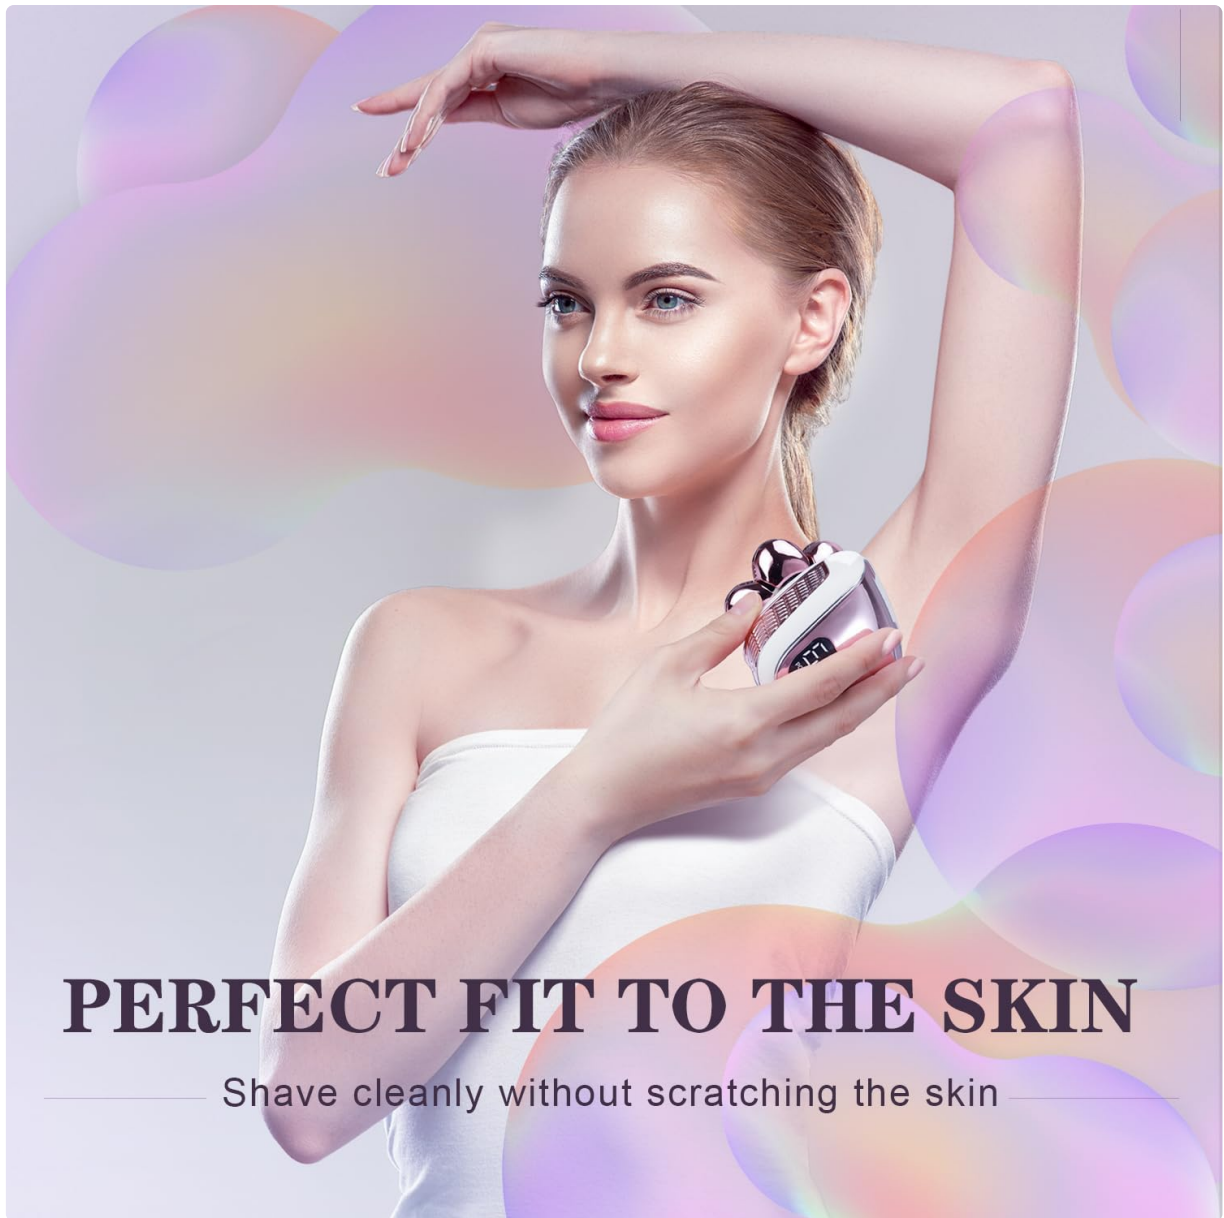


Image: The Wyklus 5-in-1 Electric Shaver, showcasing its ergonomic design and 7D shaving head.

PRODUCT OVERVIEW

The Wyklus FK-86081 is a multi-functional electric shaver system that includes several interchangeable heads to cater to different grooming needs:

- **7D Floating Shaving Head:** Designed for close and comfortable shaving on legs, body, and sensitive areas.
- **Hair Trimmer Head:** For precise trimming of longer hair.
- **Nose Hair Trimmer Head:** Safely removes unwanted nose and ear hair.
- **Facial Cleansing Brush Head:** For deep cleansing and exfoliation of the face.
- **Facial Massage Brush Head:** For gentle facial massage.



PERFECT FIT TO THE SKIN

Shave cleanly without scratching the skin

Image: An illustration of the Wyklus 5-in-1 Electric Shaver with its various interchangeable heads, including the nose hair trimmer, facial massage brush, hair trimmer, and facial cleaning brush.

SAFETY INSTRUCTIONS

- Do not use the device while charging.
- Keep the charging port dry.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children should be supervised to ensure they do not play with the appliance.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.
- Avoid using the shaver on irritated, damaged, or infected skin.

CHARGING THE DEVICE

The shaver features an LED intelligent display that shows the battery percentage. A low battery reminder will appear when charging is needed.

1. Ensure the shaver is turned off before charging.
2. Connect the charging cable to the shaver's charging port and then to a suitable USB power adapter (not included).
3. The LED display will show the charging progress.
4. A full charge takes approximately 1.5 hours and provides up to 90 minutes of working time.

To activate the travel lock, long-press the power button for 3 seconds. This prevents accidental activation during travel.



Image: The Wyklus Electric Shaver positioned next to a travel bag and sunglasses, illustrating its portability and travel lock feature.

ATTACHING AND DETACHING HEADS

To change the shaver head:

1. Hold the shaver body firmly.
2. Gently twist the current head counter-clockwise and pull it upwards to detach.
3. Align the desired attachment head with the shaver body.

4. Push down and twist clockwise until it clicks securely into place.

OPERATING INSTRUCTIONS

Using the 7D Floating Shaving Head

This head is ideal for smooth hair removal on larger body areas and sensitive curves.

- **Wet Shave:** Apply shaving cream or gel to the skin. Move the shaver in circular motions against the direction of hair growth.
- **Dry Shave:** Ensure skin is clean and dry. Move the shaver in circular motions, applying light pressure.
- The 7D floating head adapts to the contours of your body for a close and comfortable shave on legs, underarms, bikini area, and other body parts.

5-IN-1 WOMEN'S ELECTRIC SHAVER



Nose Hair Trimmer Facial Massage Brush Hair Trimmer Facial Cleaning Brush

Image: A woman using the Wyklus Electric Shaver on her leg in a bath, demonstrating its IPX6 waterproof capability for wet shaving.



Image: A close-up of a woman using the Wyklus Electric Shaver on her leg, highlighting the shaver's effectiveness on body hair.



Image: A woman using the Wyklus Electric Shaver to remove hair from her armpit, demonstrating its suitability for sensitive areas.

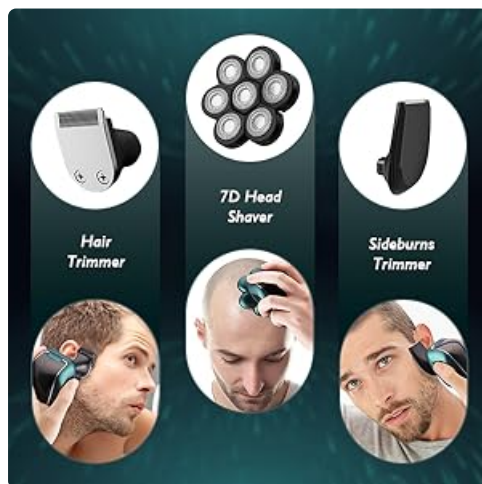


Image: A woman using the Wyklus Electric Shaver on her bikini area, illustrating its gentle and effective use for delicate skin.

Using the Hair Trimmer Head

Use this head for pre-trimming longer hair before shaving or for maintaining specific hair lengths. It comes with 3/5/7mm guide combs.

- Attach the desired guide comb (3mm, 5mm, or 7mm) to the hair trimmer head.

- Turn on the shaver and move the trimmer against the direction of hair growth.

Using the Nose Hair Trimmer Head

This attachment is designed for safe and comfortable removal of unwanted hair in the nose and ears.

- Insert the trimmer tip gently into the nostril or ear canal.
- Move the trimmer in a circular motion to cut hair. Do not insert too deeply.

Using the Facial Cleansing Brush Head

For daily facial cleansing and exfoliation.

- Dampen your face and apply your preferred facial cleanser to the brush head or directly to your face.
- Turn on the shaver and gently move the brush in circular motions across your face.
- Rinse your face and the brush head thoroughly after use.

Using the Facial Massage Brush Head

For a relaxing facial massage.

- Apply a small amount of facial oil or serum to your face.
- Gently move the massage brush in upward and outward circular motions across your face.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene. The Wyklaus FK-86081 is IPX6 waterproof, allowing for easy cleaning under running water.

- **After Each Use:** Turn off the shaver. Detach the head and rinse it thoroughly under running water. Use the provided cleaning brush to remove any trapped hairs from the blades and inside the head.
- **Shaver Body:** Wipe the shaver body with a damp cloth. Do not immerse the main body in water for extended periods, especially the charging port.
- **Drying:** Allow all parts to air dry completely before reattaching or storing.
- **Storage:** Store the shaver and its attachments in a dry, cool place, away from direct sunlight.

The LED display includes a water washing reminder to prompt cleaning.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------|--|--|
| Shaver does not turn on. | Low battery; Travel lock activated. | Charge the shaver; Long-press the power button for 3 seconds to deactivate travel lock. |
| Poor shaving performance. | Blades are dull or clogged with hair; Incorrect usage. | Clean the shaving head thoroughly; Ensure proper technique (circular motions, light pressure). |
| Device not charging. | Charging cable or adapter faulty; Poor connection. | Check cable and adapter; Ensure secure connection; Try a different USB port or adapter. |

| Problem | Possible Cause | Solution |
|--------------------------------|--|---|
| Skin irritation after shaving. | Excessive pressure; Dry shaving on sensitive skin; Unclean blades. | Use light pressure; Try wet shaving with cream; Ensure blades are clean before use. |

SPECIFICATIONS

- **Model Number:** FK-86081
- **Power Source:** Battery Powered (1 Nonstandard Battery included)
- **Battery Capacity:** 600mAh
- **Charging Time:** Approximately 1.5 hours
- **Operating Time:** Up to 90 minutes
- **Waterproof Rating:** IPX6
- **Dimensions:** 7.52 x 4.92 x 3.43 inches
- **Weight:** 14.39 ounces
- **Included Components:** Shaver body, 7D floating shaving head, hair trimmer head, nose hair trimmer head, facial cleansing brush head, facial massage brush head, 3/5/7mm guide combs, cleaning brush, charging cable.

WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries, please contact Wyklaus customer service through the retailer where the product was purchased or visit the official Wyklaus website. Please retain your proof of purchase for warranty claims.