

Faber FFSD 7PR 14S BK

Faber 14 Place Free Standing Dishwasher FFSD 7PR 14S BK User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Faber 14 Place Free Standing Dishwasher, model FFSD 7PR 14S BK. Please read these instructions carefully before using the appliance and retain them for future reference.

2. SAFETY INFORMATION

General Safety:

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating or when the door is open.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Avoid touching the heating element during or immediately after a wash cycle.
- Do not overload the dishwasher.

Electrical Safety:

- Ensure the power supply matches the voltage specified on the rating plate.
- Do not use extension cords or adapters.
- Unplug the appliance before cleaning or performing any maintenance.

3. SETUP AND INSTALLATION

Your Faber dishwasher is designed as a freestanding unit. Proper installation is crucial for optimal performance and safety. It is recommended to have the appliance installed by a qualified technician.

Placement

Position the dishwasher on a level, stable surface. Ensure there is adequate space around the unit for ventilation and access. The dimensions of the dishwasher are 60D x 84.5W x 59.8H Centimeters.



14 Place Free Standing Dishwasher

Powerful. Spacious. Elegant.

Smart cleaning solution for modern Indian families.



14 Place
Settings



A++ Energy
Rating



7 Wash
Programs



10L Water
Consumption

Image: Faber Dishwasher with indicated dimensions (600mm depth, 598mm width, 845mm height).

Water and Drain Connections

Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Two pipes are included with the dishwasher for these connections.

Electrical Connection

Connect the dishwasher to a dedicated 230 Volts (AC) power outlet. Do not use extension cords.

4. OPERATING INSTRUCTIONS

Follow these steps for effective use of your dishwasher:

Loading the Dishwasher

Arrange dishes, pots, and cutlery in the baskets. Ensure items do not block the spray arms. The dishwasher has a 14 place setting capacity, suitable for families of up to 6 members. The upper basket is height-adjustable for accommodating larger items.



HALF LOAD WASH – SAVE WATER & ENERGY



Adjustable upper basket



Efficient for small loads



Smart space optimization

Image: Interior view of the Faber Dishwasher demonstrating its 14 place setting capacity with loaded dishes.



Image: Overview of the dishwasher's internal accessories, including adjustable racks, a cutlery basket, and a detachable cutlery tray.

Adding Detergent and Rinse Aid

Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser lid securely. Fill the rinse aid dispenser as needed; the dishwasher features a rinse aid indicator.

Selecting a Wash Program

Press the power button to turn on the dishwasher. Use the push button controls to select your desired wash program. Refer to the 'Wash Programs' section for details on each program.

Starting the Cycle

Close the dishwasher door firmly. Press the Start/Stop button to begin the wash cycle. The LED display will show the remaining time or program status.

Video Demonstration: Loading and Operation

Your browser does not support the video tag.

Video: A demonstration of loading dishes into the dishwasher and operating the control panel to select a wash cycle.

5. WASH PROGRAMS

The Faber dishwasher offers 7 distinct wash programs to suit various cleaning needs:

SMART INDICATORS & DELAY START



Image: Overview of the 7 wash programs available on the Faber Dishwasher.

- **Normal:** For everyday plates and bowls with standard soil.
- **Intensive:** A 70°C wash program designed for heavily soiled items, such as greasy kadhais or cookware with masala stains.



Image: Visual representation of the 70°C Intensive Wash program's effectiveness on tough grease and stains.

- **Eco:** An energy-efficient program for lightly used utensils with minimal load.
- **Rapid:** A quick wash scenario for lightly soiled dishes.
- **90 Mins:** A balanced load program suitable for a mix of plates and cookware.
- **Half Load:** Optimizes water and energy consumption when only one rack is partially filled.
- **Child Lock:** A safety feature that locks the control panel to prevent accidental operation.

Special Wash Features

The dishwasher also includes a 70°C Hygiene Wash, ideal for sanitizing baby utensils, ensuring deep cleaning and germ removal.

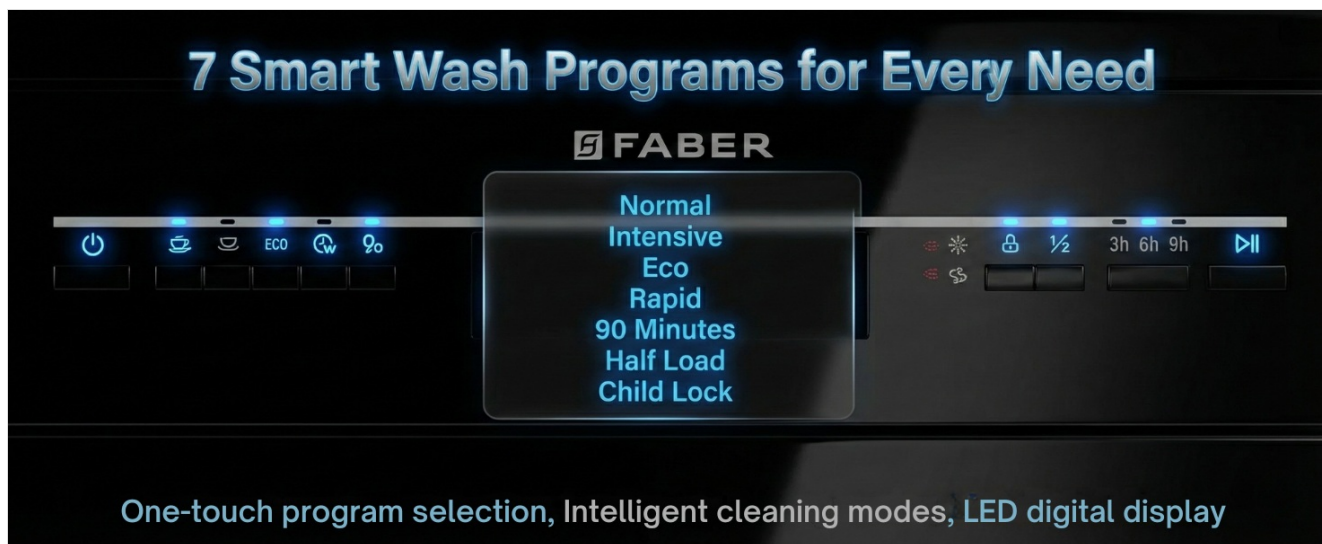


Image: Demonstration of the 70°C Hygiene Wash for baby utensils, showing before and after results.

6. FEATURES

- **Half Load Function:** This feature allows you to run a wash cycle with a partially filled dishwasher, saving water, energy, and time.
- **Adjustable Racks:** The upper basket can be adjusted in height to accommodate taller items in either the upper or lower basket.
- **Salt and Rinse Indicators:** LED indicators on the control panel alert you when to refill dishwasher salt and rinse aid.
- **Delay Start Function:** You can set the dishwasher to start a cycle after 3, 6, or 9 hours, allowing you to run it at a convenient time.

**Built for
Performance.
Made to Last.**

**Premium Stainless
Steel Cavity**



100% Stainless Steel Interior
Rust-free & durable



Hygienic & Odour Free
Keeps your dishwasher
clean and fresh



High Temperature Resistant
Built to withstand intense
heat



Image: Close-up of the control panel highlighting the Delay Start function with options for 3, 6, or 9 hours.

- **Child Lock:** Activates a lock on the control panel to prevent unintended operation, ensuring safety in homes with children.
- **Push Button Control:** Easy-to-use interface for program selection and operation.
- **Natural Drying:** Utilizes residual heat for efficient drying.
- **Stainless Steel Tub:** The interior cavity is made of stainless steel, ensuring durability, hygiene, and resistance to rust and odors.

7. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and performance of your dishwasher.

Cleaning the Filters

Periodically check and clean the filters located at the bottom of the dishwasher tub to remove food particles and debris. Refer to the detailed instructions in the included user manual for filter removal and cleaning.

Cleaning the Interior

Wipe down the interior of the dishwasher, including the spray arms and door seal, with a damp cloth. The stainless steel tub is designed to be hygienic and odor-free.



Image: Interior view of the dishwasher, emphasizing the premium stainless steel cavity and its benefits.

Exterior Cleaning

Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.

8. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Load dishes correctly, clean spray arm nozzles, use appropriate detergent, select suitable program.
Water not draining	Clogged drain hose or filter.	Clean the filter, check for kinks or blockages in the drain hose.
Excessive noise	Improperly loaded dishes, foreign object in pump.	Rearrange dishes, inspect for and remove any foreign objects.

If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

Specification	Detail
Brand	Faber
Model Number	FFSD 7PR 14S BK (117.0737.644)

Specification	Detail
Product Dimensions (D x W x H)	60D x 59.8W x 84.5H Centimeters
Capacity	14 Place Settings
Colour	Black
Controls Type	Push Button
Noise Level	49 Decibels
Voltage	230 Volts (AC)
Item Weight	40.8 Kilograms
Water Consumption	10 Litres per cycle
Energy Efficiency	Rated A++/A/A
Included Components	Dishwasher, 2 Pipes, User Manual, Warranty Card

10. WARRANTY AND SUPPORT

Warranty Information

Your Faber 14 Place Free Standing Dishwasher comes with a **2-Year Comprehensive Warranty** on the product and a **10-Year Warranty on the cavity**. Please retain your purchase receipt for warranty claims.



Image: Visual representation of the warranty coverage for the Faber Dishwasher.

Customer Support

For any service, support, or warranty-related inquiries, please contact:

Franke Faber India Pvt Ltd

Address: 1086/1/2, SANASWADI, TAL - SHIRUR, PUNE - 412208, MAHARASHTRA, INDIA

Contact Number: 1800-209-3484

