

#fRM703f3495

Generic Replacement Remote Control Instruction Manual

Model: #fRM703f3495

1. INTRODUCTION

This manual provides essential instructions for the Generic replacement remote control, designed for use with specific Hannspree LCD HDTV TV models. This remote offers a convenient and stable way to control your television. Please read this manual carefully before use.



An overhead view of the black Generic replacement remote control, showcasing its compact design.

2. COMPATIBILITY

This replacement remote control is compatible with the following Hannspree LCD HDTV TV models:

- Hannspree HSG1241
- Hannspree HSG1187
- Hannspree HSG1161
- Hannspree HSG1066
- Hannspree HSG1058

Please verify your TV model number to ensure full compatibility. While designed as a replacement, some advanced functions of your original remote may not be supported.

3. SETUP

No programming or complex setup is required for this remote control. Simply install the batteries to begin operation.

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or press the latch to open the battery compartment.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

The remote is now ready for use.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your television's infrared receiver. Ensure there are no obstructions between the remote and the TV.

- **Power Button:** Press to turn the TV on or off.
- **Channel Buttons:** Use to navigate through TV channels.
- **Volume Buttons:** Adjust the TV's audio level.
- **Number Pad:** Directly input channel numbers.
- **Menu/Navigation Buttons:** Access and navigate the TV's on-screen menu.

The remote offers a stable performance and a farther transmitting distance of up to 15 meters under optimal conditions.

5. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Durability:** The remote is made of durable ABS material, but avoid dropping it or exposing it to excessive force.

6. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's IR sensor.
 - Ensure you are within the effective operating range (up to 15 meters).
- **Some functions do not work:**
 - This is a replacement remote and may not support all advanced or specific functions of your original TV remote. This is not indicative of a defective product.
 - Refer to your TV's original manual for specific function requirements.

7. SPECIFICATIONS

Brand	Generic
Model Number	#fRM703f3495
Compatible Devices	Television (Hannspree HSG1241, HSG1187, HSG1161, HSG1066, HSG1058 LCD HDTV TV)
Connectivity Technology	Infrared (IR)
Maximum Range	15 Meters
Material	ABS Plastic
Power Source	2 x AAA Batteries (not included)

8. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by the seller at the time of purchase. If you experience any issues not covered in the troubleshooting section, please contact the seller directly for assistance.