

KLIM KLCD-6768

KLIM CD Player with USB, Cassette, AM/FM Radio, and Bluetooth

MODEL: KLCD-6768 USER MANUAL

1. Introduction

Thank you for choosing the KLIM CD Player. This versatile audio system combines classic and modern functionalities, allowing you to enjoy music from various sources. It features a CD player, cassette player/recorder, AM/FM radio, Bluetooth connectivity, USB playback, and an AUX input. Designed for portability and ease of use, this device delivers clear stereo sound through its dual 3W speakers.



The KLIM CD Player, a versatile audio system, features a top-loading CD player and a front-loading cassette deck, along with an integrated AM/FM radio and digital display.

2. Setup

2.1 Unpacking

Carefully remove all components from the packaging. Ensure you have the following items:

- KLIM CD Player Unit
- AC Power Cable
- Remote Control
- 2 x AAA Alkaline Batteries (for remote control)
- 8 GB USB Memory Stick
- User Manual

2.2 Powering the Device

The KLIM CD Player offers two power options:

1. **AC Power:** Connect the supplied AC power cable to the AC IN jack on the back of the unit and then to a standard wall outlet.
2. **Battery Power:** For portable use, insert 6 x C-type (UM-2) batteries (not included) into the battery compartment located on the bottom of the unit. Ensure correct polarity (+/-).



The KLIM CD Player can be powered by the included AC cable for indoor use or by 6 C-type batteries for portability, offering flexible power options.

2.3 Remote Control Battery Installation

Open the battery compartment on the back of the remote control and insert the 2 x AAA batteries, observing the correct polarity.

3. Operating Instructions

3.1 General Controls

Familiarize yourself with the main control buttons on the unit and remote control:

- **POWER:** Turns the unit on/off.
- **FUNCTION/MODE:** Selects between CD, USB, Bluetooth, Radio (AM/FM), and AUX modes.
- **VOLUME +/-:** Adjusts the sound level.
- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **SKIP/SEARCH:** Skips tracks/stations or fast forwards/rewinds.
- **REC:** Initiates recording (for cassette).

CONTIGO A CUALQUIER PARTE



Alimentación CA/CC
Batería de larga duración
Con mando a distancia

Detailed view of the control panel, illustrating the USB port for digital media playback, function buttons, and the clear LCD screen indicating current mode and track information.

3.2 CD Playback

1. Press the **FUNCTION/MODE** button to select CD mode.
2. Open the CD compartment lid on top of the unit.
3. Place a CD (CD, CD-R, CD-RW with MP3/WMA files) onto the spindle with the label side facing up.
4. Close the CD compartment lid. The unit will read the disc.
5. Press the **PLAY/PAUSE** button to start playback.
6. Use the **SKIP/SEARCH** buttons to navigate tracks.
7. **Program Play:** In stop mode, press the PROGRAM button. Use SKIP buttons to select a track, then press PROGRAM again to add it to the playlist. Repeat for up to 20 tracks. Press PLAY to start the programmed sequence.

3.3 Cassette Playback and Recording

1. Press the **FUNCTION/MODE** button to select TAPE mode.

2. Open the cassette door on the front of the unit.
3. Insert a cassette tape and close the door.
4. Press the **PLAY** button on the cassette deck controls to start playback.
5. **Recording:** Select the desired source (CD, Radio, AUX). Press the **REC** button on the cassette deck controls. The unit will automatically start recording from the selected source onto the cassette. Press **STOP** to end recording.

3.4 AM/FM Radio

1. Extend the telescopic antenna for optimal FM reception. For AM, rotate the unit for best reception.
2. Press the **FUNCTION/MODE** button to select RADIO mode.
3. Use the **AM/FM** switch (if available) or **FUNCTION/MODE** button to select the desired band.
4. Rotate the **TUNING** knob on the side of the unit to find your desired station. The frequency will be displayed on the LCD screen.

3.5 Bluetooth Connection

1. Press the **FUNCTION/MODE** button to select Bluetooth mode. The unit will enter pairing mode, indicated by a flashing Bluetooth icon on the display.
2. Enable Bluetooth on your external device (smartphone, tablet, etc.) and search for available devices.
3. Select "KLIM Boombox" from the list of devices.
4. Once paired, the Bluetooth icon will stop flashing, and you can play audio from your device through the KLIM CD Player.

3.6 USB Playback

1. Insert a USB memory stick (up to 32GB, formatted FAT32 or exFAT) into the USB port.
2. Press the **FUNCTION/MODE** button to select USB mode.
3. The unit will automatically detect and play compatible MP3/WMA files.
4. Use the **SKIP/SEARCH** buttons to navigate tracks or folders.

3.7 AUX Input

1. Connect an external audio device (e.g., MP3 player, phone) to the AUX IN jack using a 3.5mm audio cable (not included).
2. Press the **FUNCTION/MODE** button to select AUX mode.
3. Play audio from your connected device. The sound will be output through the KLIM CD Player.

3.8 Remote Control Operation

The remote control provides convenient access to most functions from a distance of up to 6 meters. Point the remote control directly at the unit's front panel.



The included remote control allows convenient operation of the KLIM CD Player from a distance, managing functions like volume, track selection, and input mode.

4. Maintenance

4.1 Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.

4.2 CD/Cassette Care

- Handle CDs and cassettes by their edges to avoid fingerprints and scratches.
- Store CDs in their cases and cassettes in their original packaging or suitable storage boxes.
- Periodically clean the CD lens with a specialized CD lens cleaner.
- For cassette players, regularly clean the tape heads and pinch rollers with a cotton swab lightly dampened with isopropyl alcohol.

4.3 Battery Replacement

Replace C-type batteries when the unit's performance diminishes or if it fails to power on. Replace AAA batteries in the remote control when its range decreases or it becomes unresponsive.

5. Troubleshooting

Problem	Possible Cause	Solution
No power	AC cable not connected; Batteries depleted or incorrectly inserted.	Check AC connection; Replace or correctly insert batteries.
No sound	Volume too low; Incorrect mode selected; Headphones connected.	Increase volume; Select correct source mode; Disconnect headphones.
CD skipping or not reading	CD dirty or scratched; CD inserted incorrectly; CD lens dirty.	Clean or replace CD; Insert CD correctly; Clean CD lens.
Cassette playback issues	Tape tangled or damaged; Tape heads dirty.	Check tape condition; Clean tape heads.
Poor radio reception	Antenna not extended; Weak signal.	Extend telescopic antenna; Reposition unit for better signal.
Bluetooth pairing failure	Device too far; Bluetooth not enabled on external device; Unit not in pairing mode.	Ensure devices are close; Enable Bluetooth; Select Bluetooth mode on unit.

6. Specifications

- **Model Number:** KLCD-6768
- **Dimensions (L x W x H):** 21.6 x 21.3 x 12.5 cm (8.5 x 8.4 x 4.9 inches)
- **Weight:** 1.5 kg (3.3 lbs)
- **Power Source:** AC 230V ~ 50Hz or 6 x 1.5V C-type batteries (UM-2)
- **Connectivity:** Auxiliary, Bluetooth 5.1, USB
- **Speakers:** 2 (Stereo)
- **Supported Media:** CD, CD-R, CD-RW, Cassette Tape, USB (MP3/WMA)
- **Radio Bands:** AM/FM
- **Remote Control Batteries:** 2 x AAA (included)
- **Included Accessories:** 8 GB USB Memory Stick, AC Power Cable, Remote Control, AAA Batteries
- **Country of Origin:** China

7. Warranty and Support

KLIM is committed to providing high-quality products and excellent customer service.

- **Product Warranty:** This product comes with a 5-year warranty.
- **Spare Parts Availability:** Spare parts are guaranteed to be available for 5 years within the EU.
- **Customer Support:** For any questions or assistance, please contact KLIM customer support, available 24/7. Refer to the contact information provided in your product packaging or on the official KLIM website.

