

[Manuals.plus](#) /

› [Kid Trax](#) /

› Kid Trax 12V Zero Turn Mower Jr. Ride-On Toy Instruction Manual

Kid Trax KT24020-AMA

Kid Trax 12V Zero Turn Mower Jr. Ride-On Toy Instruction Manual

Model: KT24020-AMA

Brand: Kid Trax

IMPORTANT SAFETY INFORMATION

Adult Supervision Required: This product is intended for children aged 2-5 years. Always ensure an adult supervises the child during operation to prevent accidents and ensure safe use.

- Read all instructions before operating the ride-on toy.
- Ensure the child wears the seat belt at all times while riding.
- Do not operate near streets, cars, steep inclines, swimming pools, or other bodies of water.
- Only use on flat, dry surfaces such as grass, sidewalks, or driveways.
- Do not allow more than one rider at a time.
- Keep hands, hair, and clothing away from moving parts.

PRODUCT OVERVIEW

The Kid Trax 12V Zero Turn Mower Jr. Ride-On Toy is designed to provide a realistic and engaging driving experience for young children. It features a dual-handle drive system for easy steering and Power Trax rubber traction tires for a smooth ride.



The Kid Trax 12V Zero Turn Mower Jr. Ride-On Toy in red.

Key Features:

- **Dual-Handle Drive System:** Allows for intuitive steering and control.
- **Power Trax Rubber Traction Tires:** Provides enhanced grip and a smoother ride on various surfaces.
- **Built-in Seat Belt:** Ensures rider security during operation.
- **12V Rechargeable Battery:** Powers the ride-on toy for extended play.
- **Max Speed:** Up to 2.5 MPH for safe and controlled movement.

WHAT'S INCLUDED

Your Kid Trax Zero Turn Mower Jr. package includes the following components:

- Kid Trax Zero Turn Mower Jr. Ride-On Toy
- 12V Rechargeable Battery
- Battery Charger

- Product Manual (this document)

SETUP

Assembly is required before initial use. Please follow the detailed assembly instructions provided in the separate assembly guide or on the product packaging. Ensure all parts are securely fastened.

Battery Charging:

1. Locate the 12V rechargeable battery and charger.
2. Connect the charger to the battery, then plug the charger into a standard wall outlet.
3. Allow the battery to charge for the recommended time (refer to the separate battery charging instructions for specific duration). The average battery life is 2 hours per charge.
4. Do not overcharge the battery. Unplug the charger once charging is complete.
5. Ensure the battery is properly installed in the ride-on toy after charging.

Dual Handle Drive System



Power Trax Rubber Traction Strip Tires



Seat Belt Included For Added Safety



12V Rechargeable Battery & Wall Charger Included



Key features like the dual handle system, seat belt, and battery access are important for setup and safety.

OPERATING INSTRUCTIONS

Follow these steps for safe and proper operation of your Kid Trax Zero Turn Mower Jr.:

1. **Seating:** Ensure the child is seated comfortably and securely in the driver's seat.
2. **Seat Belt:** Fasten the seat belt securely around the child.
3. **Starting:** The ride-on toy is operated using the dual-handle drive system. There is no separate start button.
4. **Moving Forward:** Press both dual handles forward simultaneously to move the toy forward.
5. **Steering:** To turn, push one handle further forward than the other. For example, to turn left, push the right handle further forward. To turn right, push the left handle further forward.
6. **Stopping:** Release both handles to bring the toy to a stop. The toy will automatically brake when the handles are released.
7. **Reverse:** This model does not feature a reverse function.
8. **Terrain:** Operate the toy on flat, dry surfaces such as grass, sidewalks, or driveways. Avoid uneven terrain, loose gravel, or wet areas.

REAL POWER TOOL FOR TONS OF HANDS-ON FUN!



A child demonstrating the operation of the ride-on toy.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your ride-on toy.

- **Cleaning:** Wipe the toy with a damp cloth to clean. Do not use harsh chemicals or abrasive cleaners. Avoid spraying water directly onto electrical components.
- **Battery Care:** Always recharge the battery after each use. If storing the toy for an extended period, charge the battery fully every 30 days to maintain its life. Do not store the battery in extreme temperatures.
- **Tire Inspection:** Periodically check the Power Trax rubber traction tires for wear and tear.
- **General Inspection:** Regularly inspect all nuts, bolts, and fasteners to ensure they are tight. Check for any damaged or broken parts and replace them immediately.

TROUBLESHOOTING

If you encounter issues with your Kid Trax Zero Turn Mower Jr., refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toy does not move or has low power.	Battery is low or not charged.	Charge the 12V battery fully. Ensure the charger is properly connected.
Toy moves slowly or inconsistently.	Overloaded weight capacity.	Ensure the rider's weight does not exceed 66 lbs.
Steering is difficult or unresponsive.	Handles not fully engaged or damaged.	Ensure both handles are pressed correctly. Inspect handles for damage.
Unusual noises during operation.	Loose parts or debris in moving components.	Inspect the toy for loose parts and tighten them. Remove any debris from wheels or axles.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	KT24020-AMA
Age Range	2-5 years old
Maximum Weight Capacity	66 lbs (30 kg)
Maximum Speed	2.5 MPH (4 km/h)
Battery Type	12V Rechargeable
Battery Average Life	2 Hours
Product Dimensions (L x W x H)	31.9" x 24" x 19.3" (81 cm x 61 cm x 49 cm)
Item Weight	19.7 lbs (8.9 kg)
Material	Plastic
Assembly Required	Yes



Product dimensions for the Kid Trax Zero Turn Mower Jr.

WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please refer to the contact information provided on the product packaging or visit the official Kid Trax website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question