

PETLIBRO WF305

PETLIBRO Dockstream RFID Smart Pet Water Fountain WF305 User Manual

Model: WF305

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the PETLIBRO Dockstream RFID Smart Pet Water Fountain. Keep this manual for future reference.

- Use indoors only.
- Do not immerse the base unit in water. The fountain base is not washable.
- Ensure the power adapter and cord are not damaged. If damaged, discontinue use immediately.
- Always unplug the fountain before cleaning or performing maintenance.
- Supervise children around the pet fountain.
- Use only original PETLIBRO parts and accessories.
- The device only supports 2.4GHz Wi-Fi networks; it is not compatible with 5GHz networks.

PACKAGE CONTENTS

- 1x PETLIBRO Dockstream RFID Smart Pet Water Fountain
- 2x RFID Collar Tags
- 1x Power Adapter (USB to USB-C braided cord and power block)
- 1x Cleaning Brush
- 1x User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your PETLIBRO Smart Pet Water Fountain.



Image: PETLIBRO Dockstream RFID Smart Pet Water Fountain, showing its overall design.

Key Features:

- **3L/101oz Capacity:** Large water tank suitable for multi-pet households.
- **RFID Recognition:** Identifies individual pets via collar tags for personalized hydration tracking.
- **Pump-Free Design:** Features a magnetic rotor for easy cleaning and maintenance.
- **Wi-Fi Connectivity (2.4GHz):** Connects to a smartphone app for monitoring and notifications.
- **Anti-Splash Design:** Prevents water spills and ensures accurate individual pet tracking.
- **Stainless Steel Tray:** Durable and hygienic drinking surface.

SETUP GUIDE

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Clean the Fountain:** Wash the stainless steel tray, water tank, and pump components (excluding the base unit)

with mild soap and water. Rinse thoroughly.


3. **Assemble the Pump:** Insert the pump into its designated slot in the water tank. Ensure it is securely placed.



Image: Close-up of the fountain's pump-free design, highlighting the magnetic rotor for easy cleaning.

4. **Fill with Water:** Fill the water tank with clean water up to the MAX line.
5. **Place Tray and Lid:** Place the stainless steel tray on top of the water tank, then secure the lid. Ensure the splash shield is in place for accurate tracking.
6. **Connect Power:** Connect the USB-C cable to the fountain base and plug the power adapter into a wall outlet. The fountain will power on.
7. **Download the App:** Download the PETLIBRO app from your smartphone's app store.
8. **Connect to Wi-Fi:** Follow the in-app instructions to connect the fountain to your 2.4GHz Wi-Fi network. Place the fountain and your phone within 20 inches of your router during initial setup.
9. **Pair RFID Collar Tags:** Attach the RFID collar tags to your pets' collars. In the app, scan the QR code on each collar tag to link it to a specific pet profile.

RFID collar tag recognition for each pet

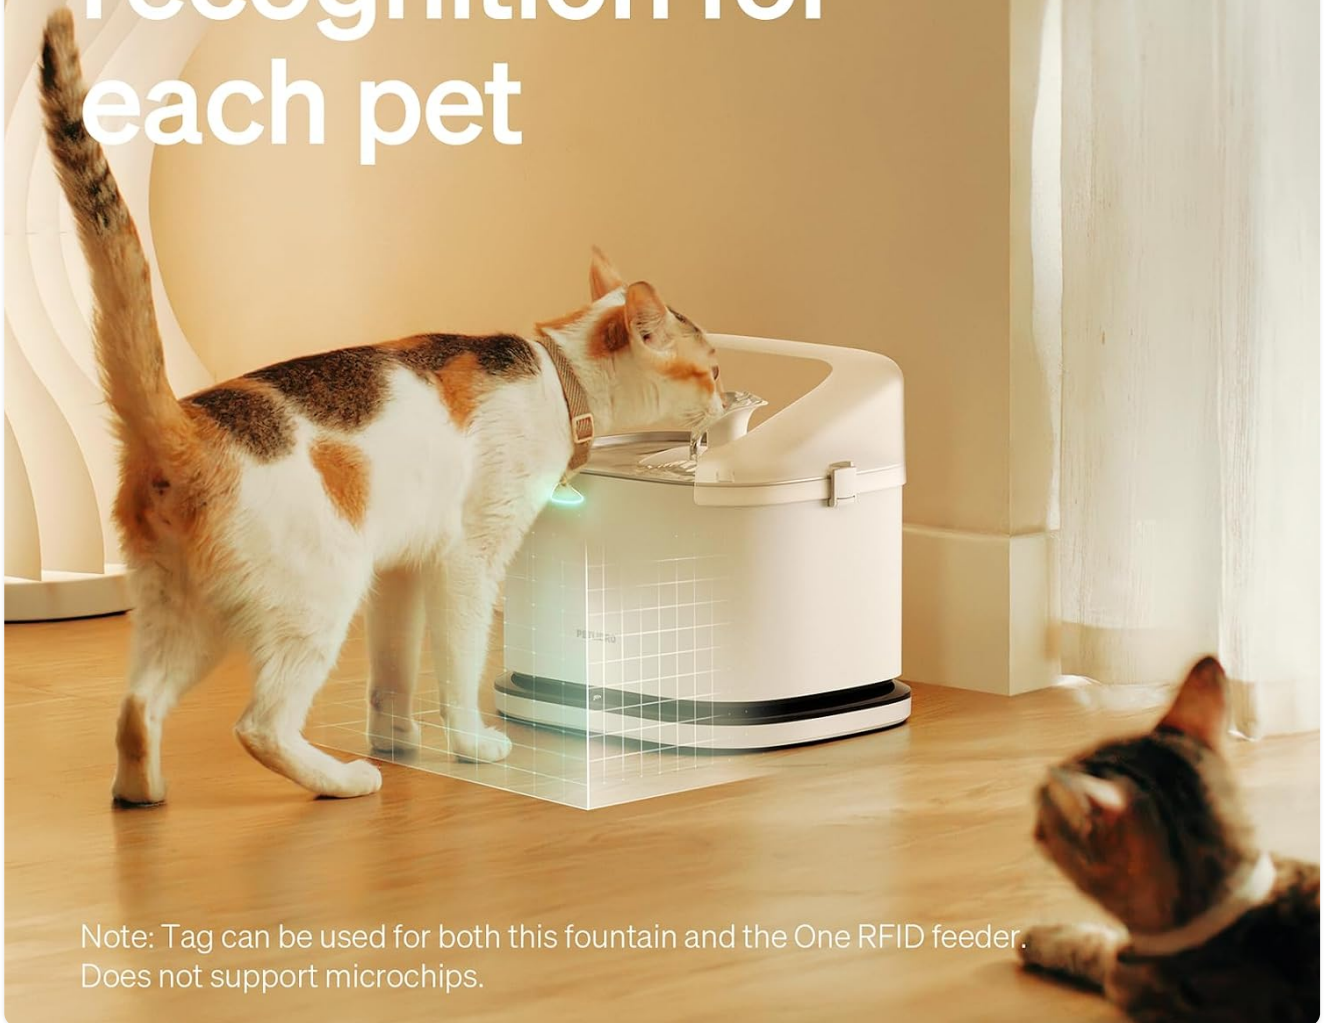

Note: Tag can be used for both this fountain and the One RFID feeder.
Does not support microchips.


Image: A cat wearing an RFID collar tag drinking from the fountain, illustrating the recognition feature.

OPERATING INSTRUCTIONS


Hydration Monitoring:

The fountain tracks individual pet drinking habits (water intake, frequency, duration) when they wear their paired RFID collar tags. This data is accessible via the PETLIBRO app.

 Track each pet's hydration

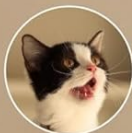

 3.2oz



3min30s / 5 times

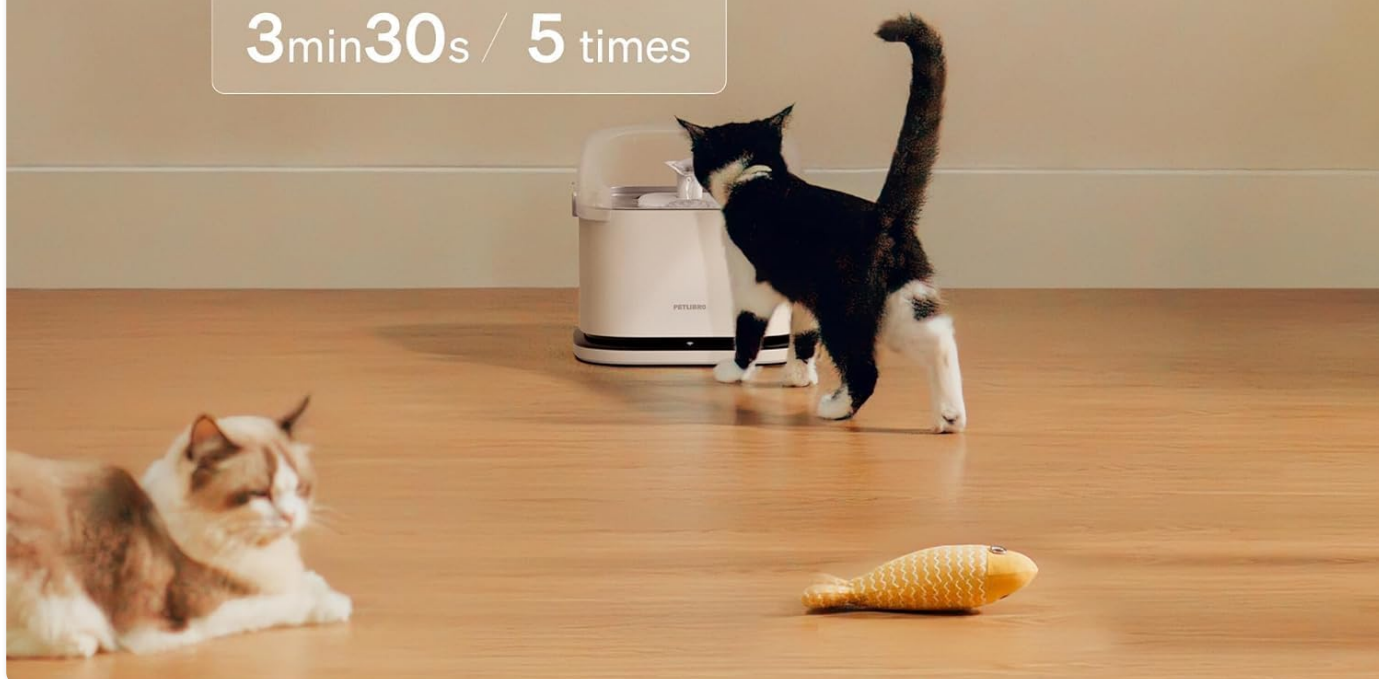 


Image: A cat drinking from the fountain, with an overlay showing tracked hydration data like duration and amount.

Smarter water

View hydration data in the all-in-one app

💧 Water intake

🕒 Duration

📅 Frequency

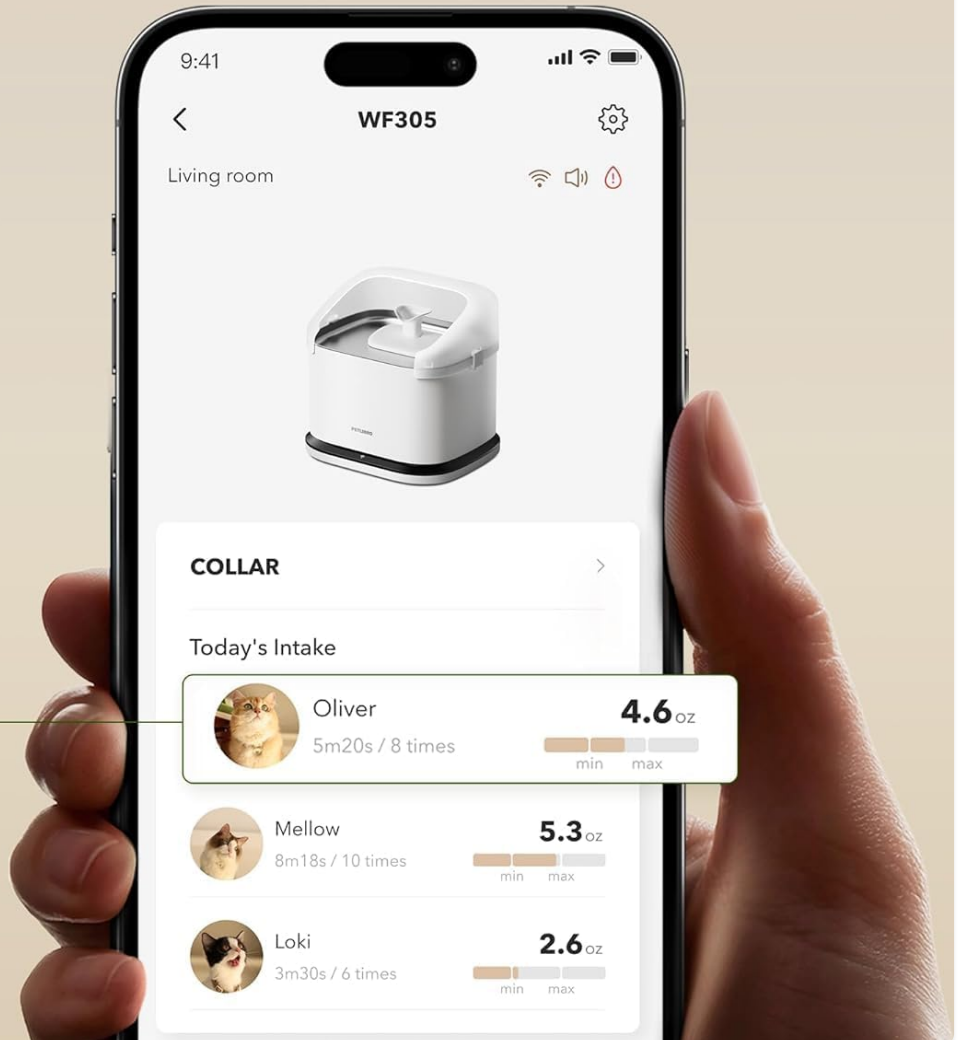 


Image: A smartphone displaying the PETLIBRO app interface, showing individual pet hydration data including water intake, duration, and frequency.

Smart App Reminders:

Receive real-time notifications on your smartphone for:

- Irregular pet hydration patterns.
- Low water levels in the fountain.
- Power or Wi-Fi connection failures.
- Filter replacement reminders.

Real-time notifications

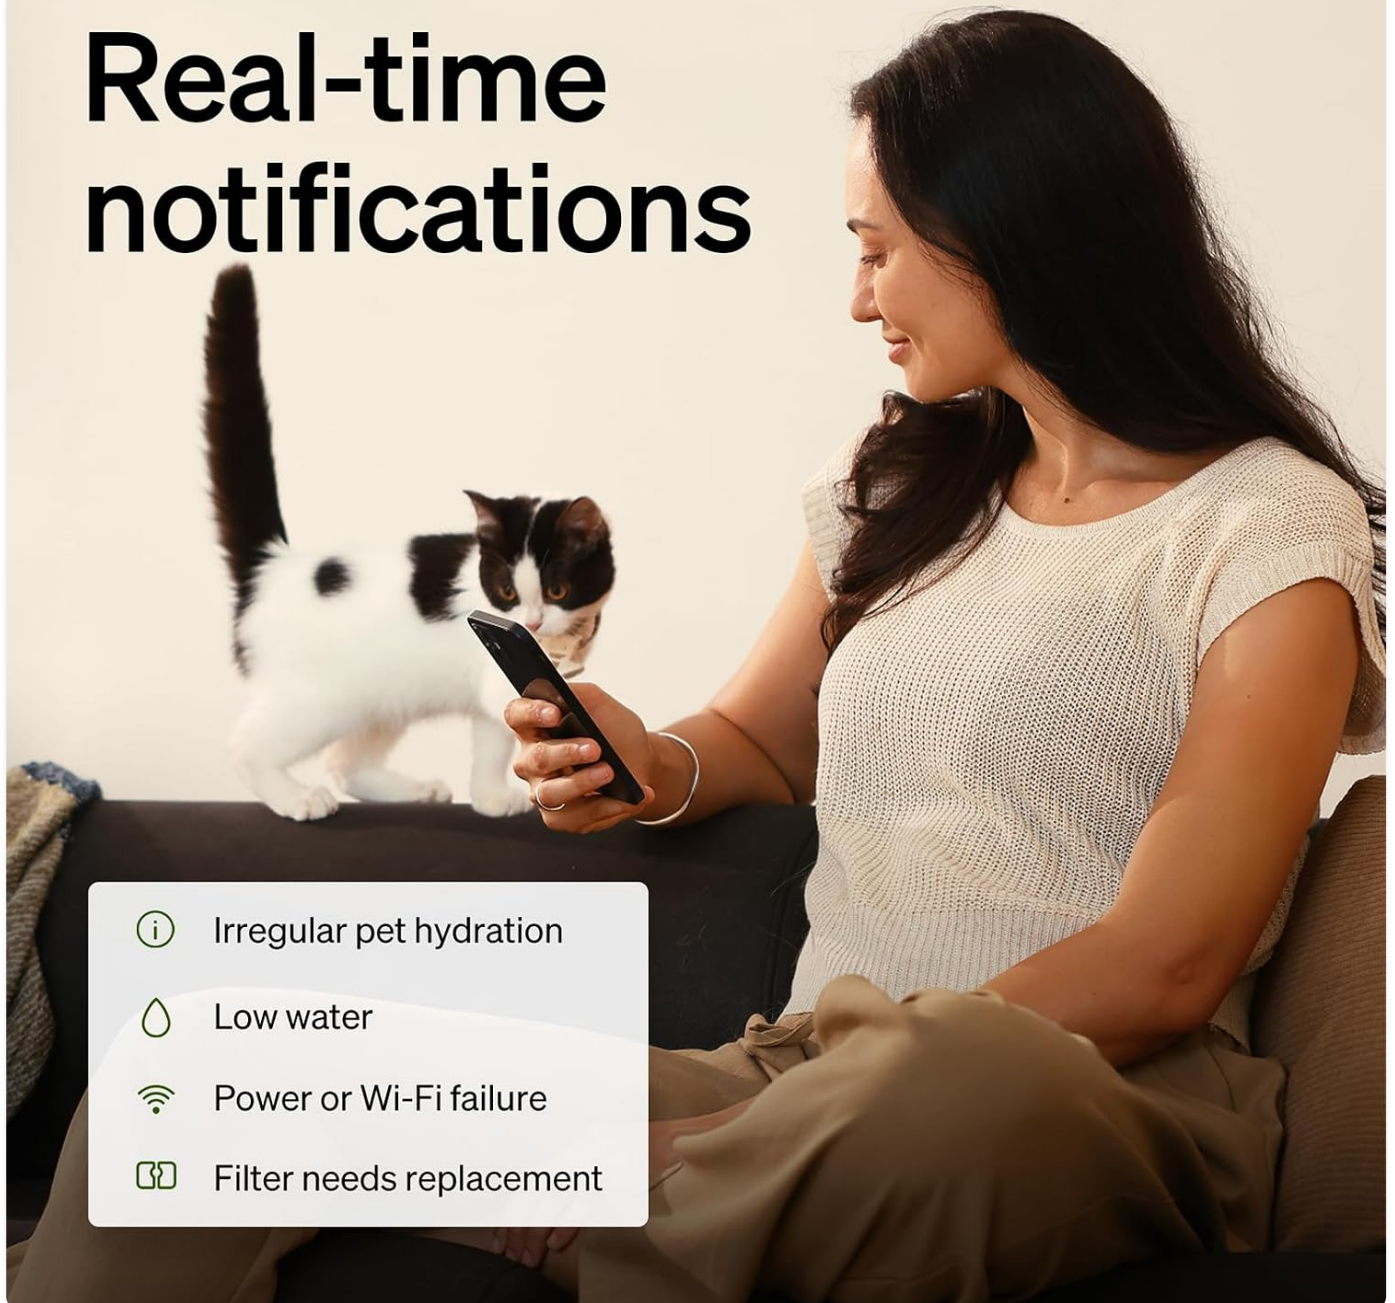


Image: A person looking at their smartphone receiving notifications about pet hydration, low water, power/Wi-Fi failure, and filter replacement.

Water Flow Modes:

The fountain offers dual flow modes, configurable via the app:

- **Continuous Flow:** Provides a constant stream of water.
- **Intermittent Flow:** Dispenses water at 15-minute intervals for 15 minutes.

MAINTENANCE

Regular cleaning and maintenance are crucial for your pet's health and the longevity of the fountain.

Weekly Cleaning:

- Unplug the fountain from the power outlet.
- Disassemble the water tank, stainless steel tray, and pump components.

- Wash all removable parts (except the base unit) with mild soap and water. Use the provided cleaning brush to remove any debris.
- Rinse all components thoroughly to remove soap residue.
- Refill the tank with fresh water and reassemble the fountain.

Filter Replacement:

It is recommended to replace the filters every 2 weeks to ensure fresh, clean water. The app will also send reminders.



Image: Diagram illustrating the 4-layer filtration system of the PETLIBRO fountain, showing non-woven fabric, ion exchange resin, activated carbon, and sponge layers.

1. Unplug the fountain.
2. Remove the lid and stainless steel tray.
3. Remove the old filter and dispose of it.
4. Rinse the new filter under running water before placing it into the filter tray.
5. Reassemble the fountain and plug it back in.
6. Reset the filter life counter in the PETLIBRO app.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fountain not dispensing water.	Low water level; pump clogged; power issue.	Refill water; clean pump and filter; check power connection.
Excessive noise from fountain.	Low water level; pump not properly seated; debris in pump.	Refill water; ensure pump is correctly installed; clean pump.
App not connecting to fountain.	Incorrect Wi-Fi (5GHz); weak Wi-Fi signal; incorrect setup.	Ensure 2.4GHz Wi-Fi; move fountain closer to router; re-do app setup.
RFID tags not recognized.	Tag not paired; tag damaged; pet not wearing tag.	Ensure tag is paired in app; check tag for damage; ensure pet is wearing tag.
Indicator lights flashing.	Wi-Fi Alert (orange) or Low Water Alert (red).	Check Wi-Fi connection or refill water.

SPECIFICATIONS

Feature	Detail
Model Number	WF305
Capacity	3 Liters (101 oz)
Material	Stainless Steel (Tray), Plastic (Body)
Power Source	Corded Electric
Wi-Fi Support	2.4GHz only
Item Weight	2.13 Kilograms (4.7 Pounds)
Included Components	Fountain, 2 RFID Collar Tags, Power Adapter, Cleaning Brush

WARRANTY AND SUPPORT

PETLIBRO products come with a standard manufacturer's warranty. For detailed warranty information, product support, or to purchase replacement parts (filters, RFID tags), please visit the official PETLIBRO website or contact customer service.

Website: www.petlibro.com

Customer Service: Refer to the contact information provided on the PETLIBRO website or your product packaging.

© 2026 PETLIBRO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question