



[Manuals.plus](#) /

> [ANPCOWER](#) /

> ANPCOWER B16 15.6-inch FHD Laptop User Manual

ANPCOWER B16

ANPCOWER B16 15.6-inch FHD Laptop User Manual

Model: B16

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your ANPCOWER B16 15.6-inch FHD Laptop. Please read this guide thoroughly before using your device to ensure proper function and longevity. Keep this manual for future reference.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- ANPCOWER B16 Laptop
- DC Power Adapter
- User Manual (this document)
- USB Flash Drive for OS reinstallation

3. PRODUCT OVERVIEW

The ANPCOWER B16 is a 15.6-inch laptop designed for daily computing tasks, featuring an Intel Pentium 6500Y processor, 8GB RAM, and a 256GB SSD. It comes pre-installed with Windows 11 Pro and offers various connectivity options.

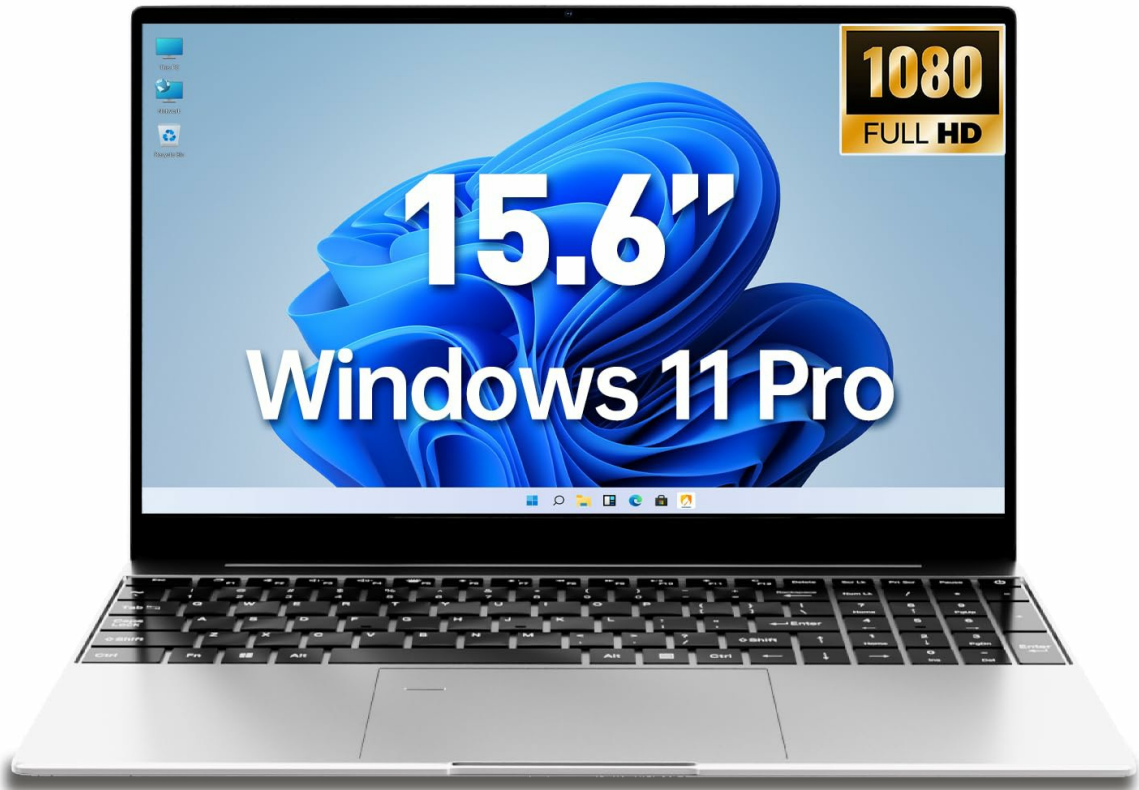


Image: Front view of the ANPCOWER B16 Laptop.

4. SETUP

4.1 Initial Charging

1. Connect the DC power adapter to the charging port on the laptop.
2. Plug the power adapter into a wall outlet.
3. Allow the laptop to charge for at least 30 minutes before first use, or until the battery indicator shows sufficient charge.

4.2 Powering On

Press the power button located on the keyboard to turn on the laptop. The power indicator light will illuminate.

4.3 Windows 11 Pro Setup

Upon first boot, you will be guided through the Windows 11 Pro setup process. Follow the on-screen instructions to:

- Select your region and keyboard layout.

- Connect to a Wi-Fi network.
- Accept the license agreement.
- Create or sign in with a Microsoft account.
- Set up a PIN or password.
- Configure privacy settings.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

- **Power On:** Press the power button.
- **Sleep Mode:** Press the power button briefly or close the lid.
- **Shut Down:** Click the Start button, then Power > Shut down.
- **Restart:** Click the Start button, then Power > Restart.

5.2 Keyboard and Touchpad

The laptop features a full-size backlit keyboard and a precision touchpad.

- **Backlit Keyboard:** Adjust the keyboard backlight brightness by pressing **Fn + F9**.
- **Fingerprint Reader:** The integrated fingerprint reader allows for secure login via Windows Hello. Set this up in Windows Settings > Accounts > Sign-in options.

Dimmable Full-Size Backlight Keyboard

Fn+F9 to switch the brightness



Off



Dark



Light



Image: Illustration of the backlit keyboard with brightness settings (Off, Dark, Light).

5.3 Connectivity

The ANPCOWER B16 offers various ports and wireless connectivity options:

- **Wi-Fi 5:** Connect to wireless networks for internet access. Manage connections via the Windows network settings.
- **Bluetooth 4:** Pair with Bluetooth-enabled devices such as headphones, mice, or keyboards.
- **USB 3.2 Gen 1:** Two ports for connecting USB devices and high-speed data transfer.
- **Mini-HDMI:** Connect to external displays or projectors.
- **TF Card Slot:** Insert a TF (microSD) card for expanded storage or data transfer.
- **Headphone Jack:** Connect 3.5mm audio devices.

Easy to Connect All You Want



WiFi 5



Bluetooth 4

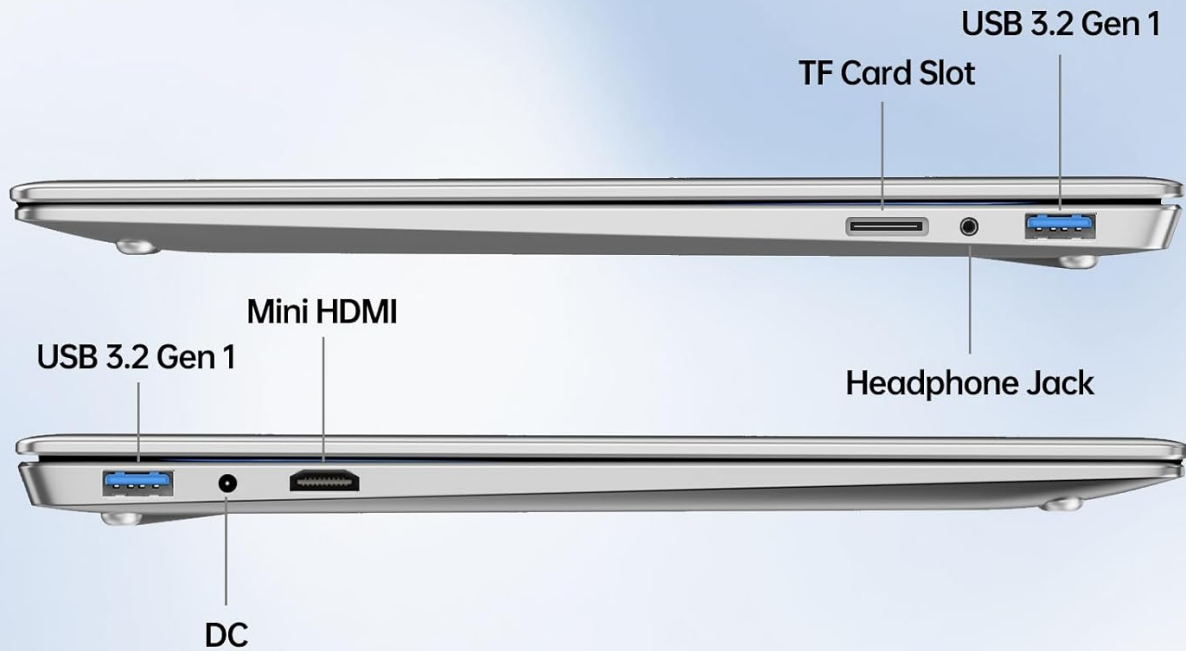


Image: Side view of the laptop highlighting USB 3.2 Gen 1, Mini-HDMI, DC port, TF Card Slot, and Headphone Jack.

5.4 Display

The 15.6-inch Full HD IPS display provides clear visuals and wide viewing angles. Adjust display settings (resolution, brightness, night light) through Windows Display settings.

See More, Do More. Your Productivity Canvas

Maximize Your Workspace with a 15.6" Full HD Screen.



Full HD 1920x1080



Bright View



IPS



Eye Protection

Image: The laptop display showcasing a vibrant image, emphasizing its Full HD IPS capabilities.

6. MAINTENANCE

6.1 Cleaning

- Always power off the laptop and disconnect the power adapter before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner for the display.
- For the keyboard and chassis, use a soft, dry cloth. Avoid harsh chemicals or abrasive materials.

6.2 Battery Care

The laptop is equipped with a 5000mAh battery. To maximize battery life:

- Avoid extreme temperatures.
- Do not fully discharge the battery frequently.
- If storing the laptop for an extended period, ensure the battery is charged to approximately 50-70%.

5000mAh Battery | Up to 4 Hours Unplugged Freedom



Battery Life 4Hrs



Capacity 5000mAh
38.5Wh



Battery life varies by usage.
Tested with continuous web
browsing at standard brightness.

Image: The laptop in use, illustrating its battery capacity and typical usage duration.

6.3 Software Updates

Regularly check for and install Windows updates to ensure system stability, security, and performance. Go to Settings > Windows Update.

7. TROUBLESHOOTING

7.1 Laptop Does Not Power On

- Ensure the power adapter is securely connected to both the laptop and a working power outlet.
- Check if the power outlet is functional by plugging in another device.
- If the battery is completely drained, allow it to charge for at least 30 minutes before attempting to power on.

7.2 Display Issues

- If the screen is blank, try pressing **Fn + F7** (or the key with a display icon) to toggle display output.
- Adjust screen brightness using the function keys (e.g., **Fn + F5/F6**).

- If connected to an external monitor, ensure the cable is secure and the correct input is selected on the monitor.

7.3 Wi-Fi or Bluetooth Connectivity Problems

- Ensure Wi-Fi or Bluetooth is enabled in Windows Settings.
- Restart your router/modem for Wi-Fi issues.
- For Bluetooth, ensure the device you are trying to connect to is in pairing mode and within range.
- Run the Windows Network Troubleshooter (Settings > Network & internet > Advanced network settings > Network troubleshooter).

7.4 Slow Performance

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Ensure your storage (SSD) is not nearly full.
- Perform a virus scan.

8. SPECIFICATIONS

Feature	Specification
Brand	ANPCOWER
Model Name	B16
Operating System	Windows 11 Pro
Screen Size	15.6 Inches
Screen Resolution	1920 x 1200 pixels (FHD)
Processor	Intel Pentium 6500Y (Max 3.40GHz)
RAM	8 GB DDR4
Hard Drive	256 GB Solid State Drive (SSD)
Graphics Coprocessor	Intel UHD Graphics
Wireless Type	Wi-Fi 5 (802.11a/b/g/n/ac), Bluetooth 4
USB Ports	2 x USB 3.0 Ports
Other Ports	Mini-HDMI, TF Card Slot, Headphone Jack
Special Features	Backlit Keyboard, Fingerprint Reader, HD Audio, Numeric Keypad
Battery	5000mAh (Up to 4 hours)
Item Weight	4.97 pounds
Product Dimensions	13.4 x 0.9 x 9 inches

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact ANPCOWER customer service. Details regarding specific warranty periods and support channels are typically available on the manufacturer's official website or through your retailer.
Please retain your proof of purchase for warranty claims.