

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [TMY](#) /

> [TMY Mini Movie Projector \(Model: B0G3F3DDRN\) User Manual](#)

## TMY B0G3F3DDRN

# TMY Mini Movie Projector (Model: B0G3F3DDRN) User Manual

Your Guide to Setup, Operation, and Maintenance

## 1. INTRODUCTION

---

Thank you for choosing the TMY Mini Movie Projector. This manual provides essential information for setting up, operating, and maintaining your projector. Please read it thoroughly before use to ensure optimal performance and safety.

### Package Contents

Verify that all items are present in the package:

- TMY Mini Movie Projector
- Remote Control
- Power Cord
- HDMI Cable
- User Manual
- Warranty Card
- Cleaning Kit

## 2. IMPORTANT SAFETY INFORMATION

---

Always follow these basic safety precautions to reduce the risk of fire, electric shock, or injury:

- Do not block ventilation openings. Ensure adequate airflow around the projector.
- Do not expose the projector to rain or moisture.
- Use only the power adapter supplied with the projector.
- Avoid looking directly into the projector lens when the lamp is on.
- Place the projector on a stable, level surface.
- Unplug the projector during lightning storms or when unused for long periods.

- Do not attempt to repair the projector yourself. Refer all servicing to qualified personnel.

### 3. PRODUCT OVERVIEW

---

#### Projector Components

Familiarize yourself with the main parts of your TMY Mini Movie Projector.

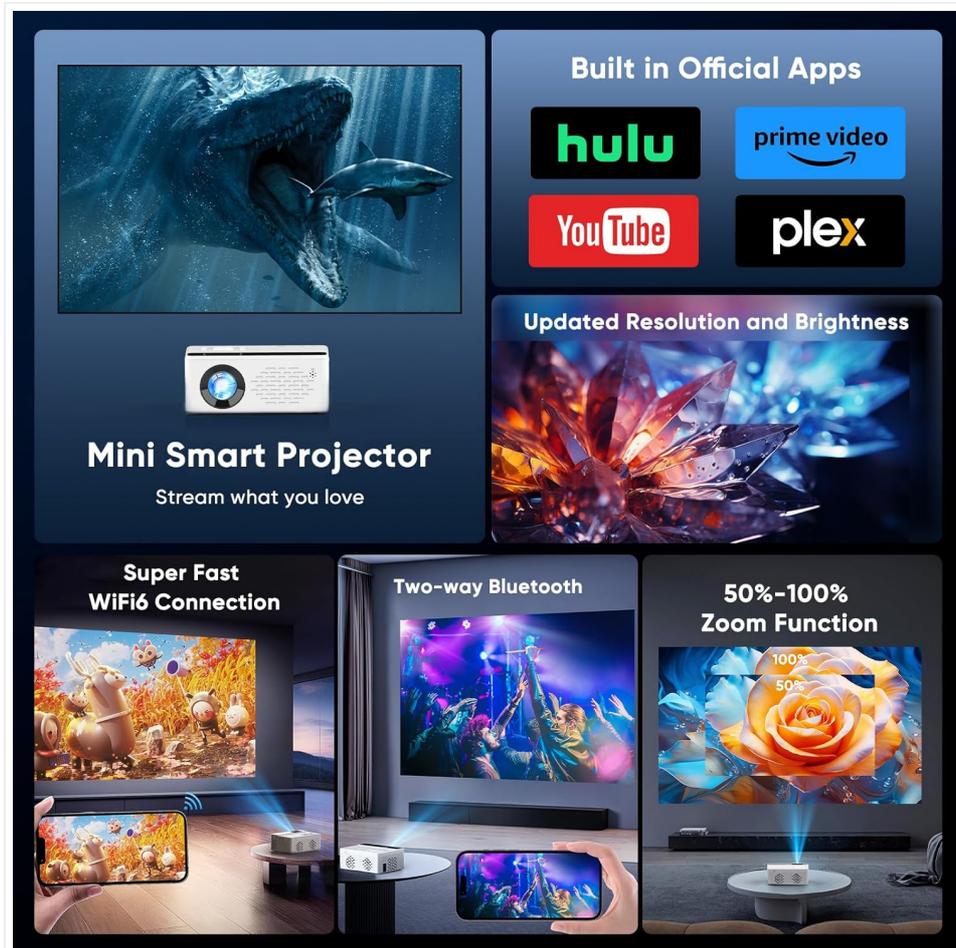


Image: Front view of the TMY Mini Movie Projector, showing the lens and ventilation. This compact device is designed for easy portability and setup.

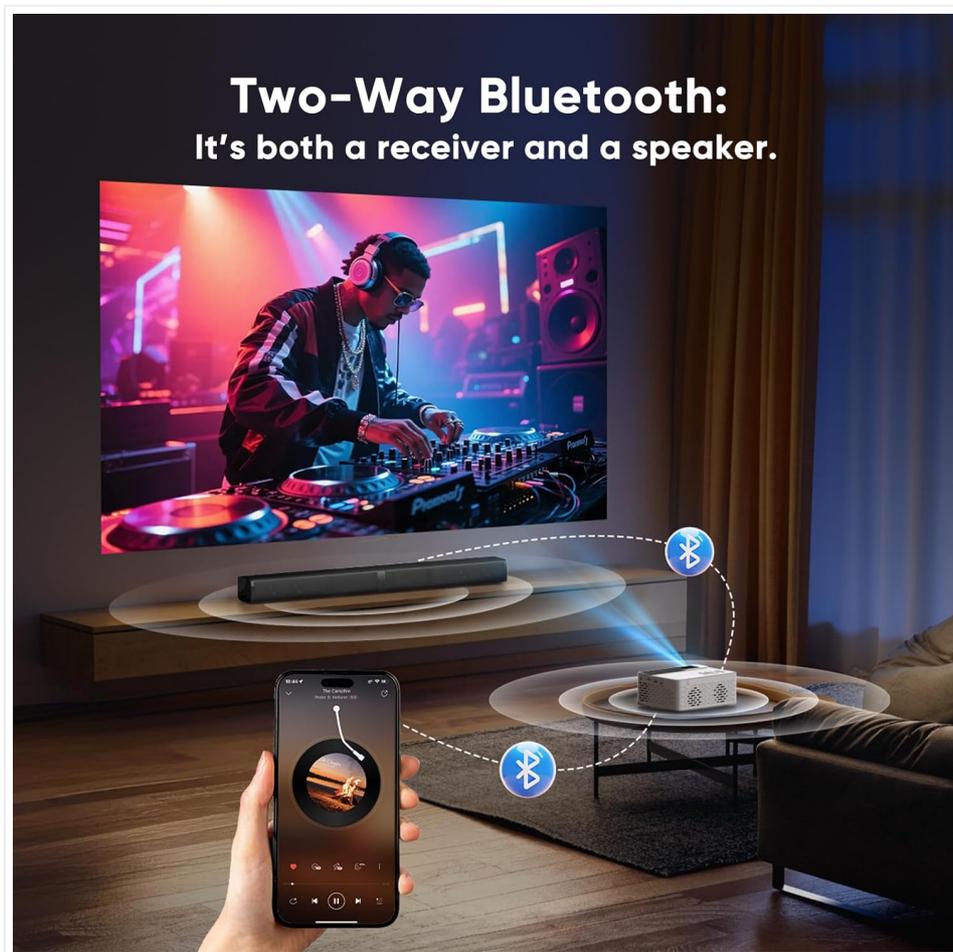


Image: Side view of the TMY Mini Movie Projector, highlighting the various input/output ports including HDMI, USB, AUX, and TF card slot.

## Remote Control

The included remote control allows for convenient operation of your projector.

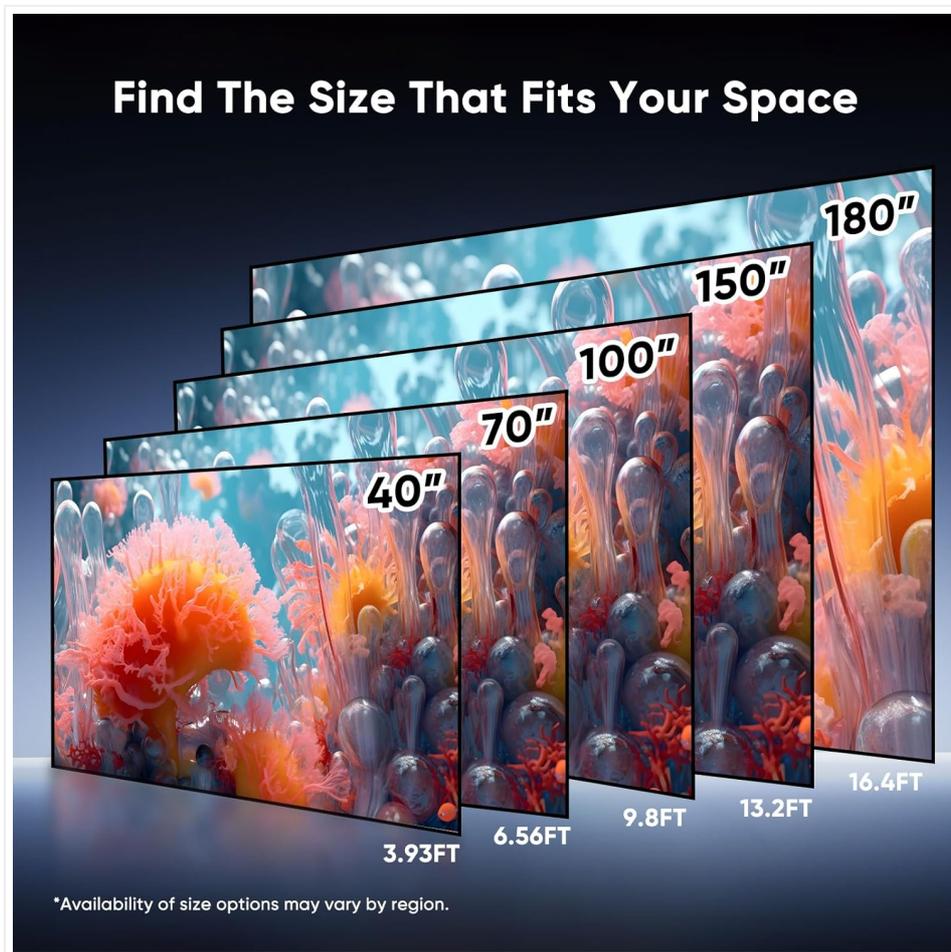


Image: The remote control for the TMY Mini Movie Projector, featuring navigation buttons, volume controls, input selection, and dedicated buttons for Netflix, Prime Video, and YouTube.

## 4. SETUP

---

### Initial Setup Steps

1. **Unpack the Projector:** Carefully remove all components from the packaging.
2. **Position the Projector:** Place the projector on a stable, flat surface. Ensure there is enough space for ventilation. For optimal viewing, position the projector directly in front of your projection surface (wall or screen).
3. **Connect Power:** Connect the power cord to the projector and then plug it into a power outlet.
4. **Power On:** Press the power button on the projector or the remote control to turn it on.

### Adjusting Projection Size and Focus

The projector supports various projection sizes depending on the distance from the screen.

## Multi Ports

Effortlessly Connect All Your Devices.



Image: Visual representation of different projection sizes (40", 70", 100", 150", 180") and their corresponding projection distances (3.93ft, 6.56ft, 9.8ft, 13.2ft, 16.4ft).

- **Adjust Focus:** Rotate the focus ring near the lens until the image is clear and sharp.
- **Adjust Keystone Correction:** If the image appears trapezoidal, use the keystone correction feature (usually found in the projector's settings menu) to adjust the image shape.

## 5. OPERATING INSTRUCTIONS

---

### Power On/Off

- **To Power On:** Press the power button on the projector or the remote control.
- **To Power Off:** Press the power button again. Confirm shutdown if prompted.

### Initial Setup and Network Connection

Upon first use, you may need to complete an initial setup wizard. Connect to your Wi-Fi network to access online features and applications.

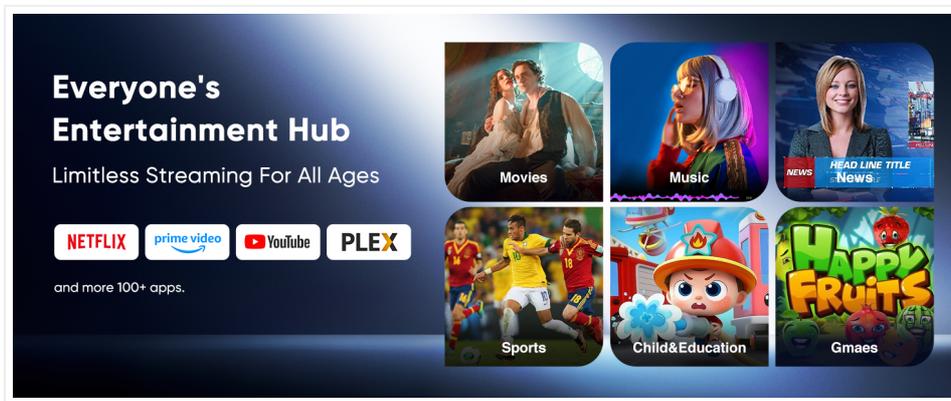


Image: The projector's user interface displaying various pre-installed applications like Prime Video, Hulu, YouTube, and Plex, ready for streaming.

- Navigate to the **Settings** menu using the remote control.
- Select **Network** or **Wi-Fi Settings**.
- Choose your Wi-Fi network from the list and enter the password.
- The projector supports **WiFi 6** for faster and more stable connections.

## Connecting External Devices (HDMI/USB)

Use the available ports to connect various devices.

- **HDMI:** Connect gaming consoles, laptops, TV sticks, or other HDMI-enabled devices using the HDMI cable. Select the corresponding HDMI input from the projector's source menu.
- **USB:** Plug in USB drives to play media files directly. Select the USB input from the source menu.
- **AUX:** Connect external audio devices using a 3.5mm audio cable.

## Bluetooth Connectivity

The projector features two-way Bluetooth 5.2, allowing it to connect to external speakers or function as a Bluetooth speaker itself.



Image: Illustration of the projector's two-way Bluetooth feature, showing it connecting to a soundbar for enhanced audio and also receiving audio from a smartphone to act as a speaker.

- **Connecting to External Speakers:** Go to **Settings > Bluetooth**, enable Bluetooth, and pair with your desired speaker.
- **Using as a Bluetooth Speaker:** Switch the projector to Bluetooth speaker mode (refer to the on-screen instructions or specific remote button if available). Pair your smartphone or other device with the projector.

## Screen Mirroring (WiFi 6)

Wirelessly mirror content from your iOS or Android devices using the projector's WiFi 6 connection.

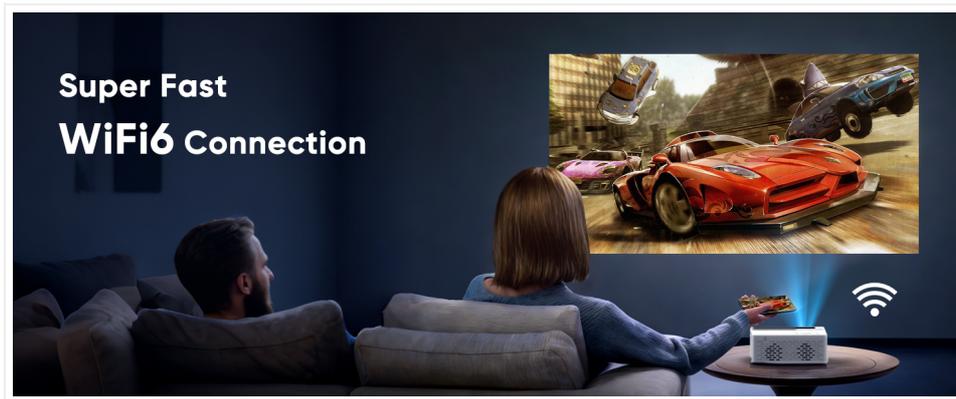


Image: A person using a smartphone to wirelessly mirror content to the projector, demonstrating the fast WiFi 6 connection for smooth streaming.

- Ensure both your device and the projector are connected to the same Wi-Fi network.
- Select the Screen Mirroring option on the projector's main menu.
- Follow the on-screen instructions to connect your iOS (AirPlay) or Android (Miracast/Screen Cast) device.

## Using Pre-installed Applications

The projector comes with popular streaming applications like Prime Video and YouTube pre-installed for immediate use.

- From the home screen, navigate to the desired application icon.
- Select the application and log in with your account credentials if required.

## Zoom Function

Adjust the projection size digitally from 50% to 100% without moving the projector.

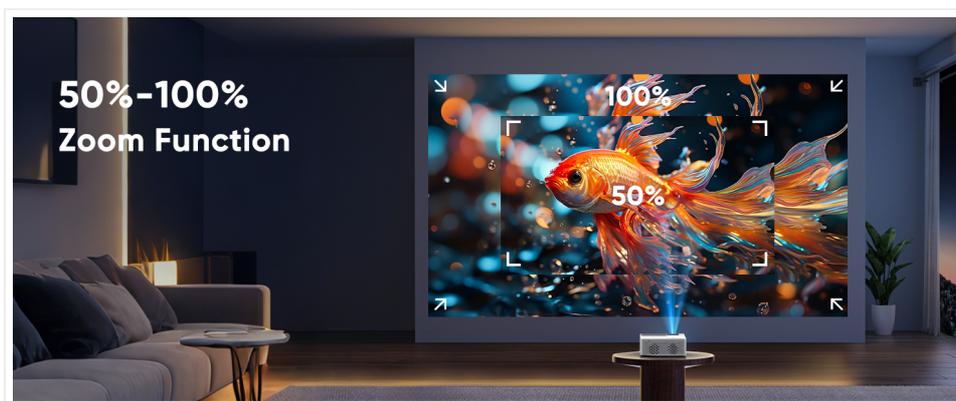


Image: A visual representation of the 50%-100% zoom function, showing how the projected image size can be adjusted digitally.

- Access the zoom function through the projector's display settings menu.
- Adjust the zoom level using the remote control.

## Automatic Sleep Function

The projector can be set to automatically turn off after a specified period of inactivity.

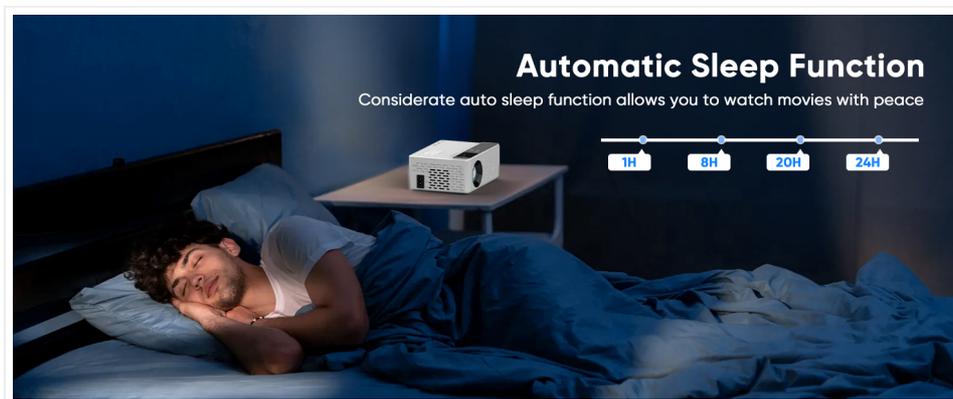


Image: A person sleeping peacefully while the projector is set to automatically turn off after a set duration (1H, 8H, 20H, 24H), illustrating the automatic sleep function.

- Navigate to **Settings > Timer or Power Options**.
- Set the desired sleep timer duration.

## 6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your projector.

- **Lens Cleaning:** Use the provided cleaning kit or a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners.
- **Dust Removal:** Regularly clean the projector's exterior and ventilation openings with a soft brush or compressed air to prevent dust buildup.
- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Power Off Properly:** Always power off the projector correctly to allow the lamp to cool down, which extends its lifespan.

## 7. TROUBLESHOOTING

If you encounter issues with your projector, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No image displayed	Power cable loose; incorrect input source; device not connected.	Check power connection; select correct input source (HDMI, USB); ensure external device is properly connected and powered on.
Image is blurry	Focus not adjusted; projector too close/far from screen.	Adjust the focus ring; reposition the projector for optimal distance.
No sound	Volume too low; external speakers not connected; incorrect audio output.	Increase volume; check external speaker connection; ensure correct audio output is selected in settings.
Remote control not working	Batteries dead; obstruction between remote and projector.	Replace batteries; ensure clear line of sight to the projector's IR receiver.

Problem	Possible Cause	Solution
Wi-Fi connection issues	Incorrect password; weak signal; network interference.	Re-enter Wi-Fi password; move projector closer to router; restart router and projector.

## 8. SPECIFICATIONS

---

Key technical specifications for the TMY Mini Movie Projector:

Feature	Detail
Brand	TMY
Model	B0G3F3DDRN
Display Resolution	1280 x 720 (1080P Full HD Supported)
Connectivity Technology	3.5mm Jack, HDMI, USB, Wi-Fi (WiFi 6), Bluetooth (Two-way 5.2)
Special Features	Built-In Cooling System, Built-In Speaker, Lightweight, Built-in Apps (Prime Video, YouTube, Hulu, Plex)
Item Weight	2.53 pounds
Package Dimensions	8.98 x 8.58 x 4.13 inches
Color	White + Black

## 9. WARRANTY AND SUPPORT

---

TMY is committed to providing excellent customer service and support for your product.

# TMY



Image: Overview of TMY's customer support, including lifetime after-sales service, 24-hour response time, 30-day return policy, and a 3-year warranty.

- **Warranty:** Your TMY Mini Movie Projector comes with a **3-year warranty** from the date of purchase.
- **Return Policy:** Enjoy a **30-day return policy** for any reason.
- **Technical Support:** TMY offers **lifetime after-sales service and technical support**
- **Response Time:** Expect a quick reply to your inquiries within **24 hours**.

For further assistance, please refer to the contact information provided on your warranty card or visit the official TMY support website.