

Beetel X70N

Beetel X70N 2.4GHz Digital Cordless Phone User Manual

Model: X70N

1. PRODUCT OVERVIEW

The Beetel X70N is a 2.4GHz digital cordless phone designed for clear and reliable communication in home and office environments. It features advanced digital technology for stable connectivity and minimal interference. Key features include a backlit LCD display, an illuminated keypad for low-light conditions, Caller ID support, and a 100-contact phonebook.

1.1. Key Features

- **2.4GHz Digital Technology:** Ensures crystal-clear voice quality and stable, interference-free communication.
- **Backlit LCD Display:** Provides clear visibility of caller information, call details, battery status, and menu options.
- **Illuminated Keypad:** Facilitates easy dialing and navigation in low-light conditions.
- **Caller ID:** Displays incoming caller numbers for identification before answering.
- **100-Contact Phonebook:** Stores frequently used numbers for quick access.
- **Hands-Free Speakerphone:** Allows for convenient conversations during multitasking.
- **Rechargeable Battery:** Provides reliable talk and standby time with a charging level indicator.
- **Additional Functions:** Last number redial, handset locator (paging), adjustable ringtone volume, alarm function, and mute.

1.2. Box Contents

Verify that all items are present in the package:

- Base Unit
- Handset
- Power Adaptor
- Line Cord
- Rechargeable AAA Battery



Image 1.1: Beetel X70N Cordless Phone, base unit, handset, and packaging. The phone is black with an orange backlit display and keypad. The packaging shows the model number X70N and the Beetel logo.

2. SETUP

2.1. Battery Installation

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover downwards to open it.
3. Insert the supplied rechargeable AAA battery, ensuring correct polarity (+ and -).
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.

2.2. Connecting the Base Unit

1. Connect one end of the supplied line cord to the LINE jack on the base unit.
2. Connect the other end of the line cord to your telephone wall jack.
3. Connect the small plug of the power adaptor to the DC IN jack on the base unit.
4. Plug the large end of the power adaptor into a standard electrical outlet.

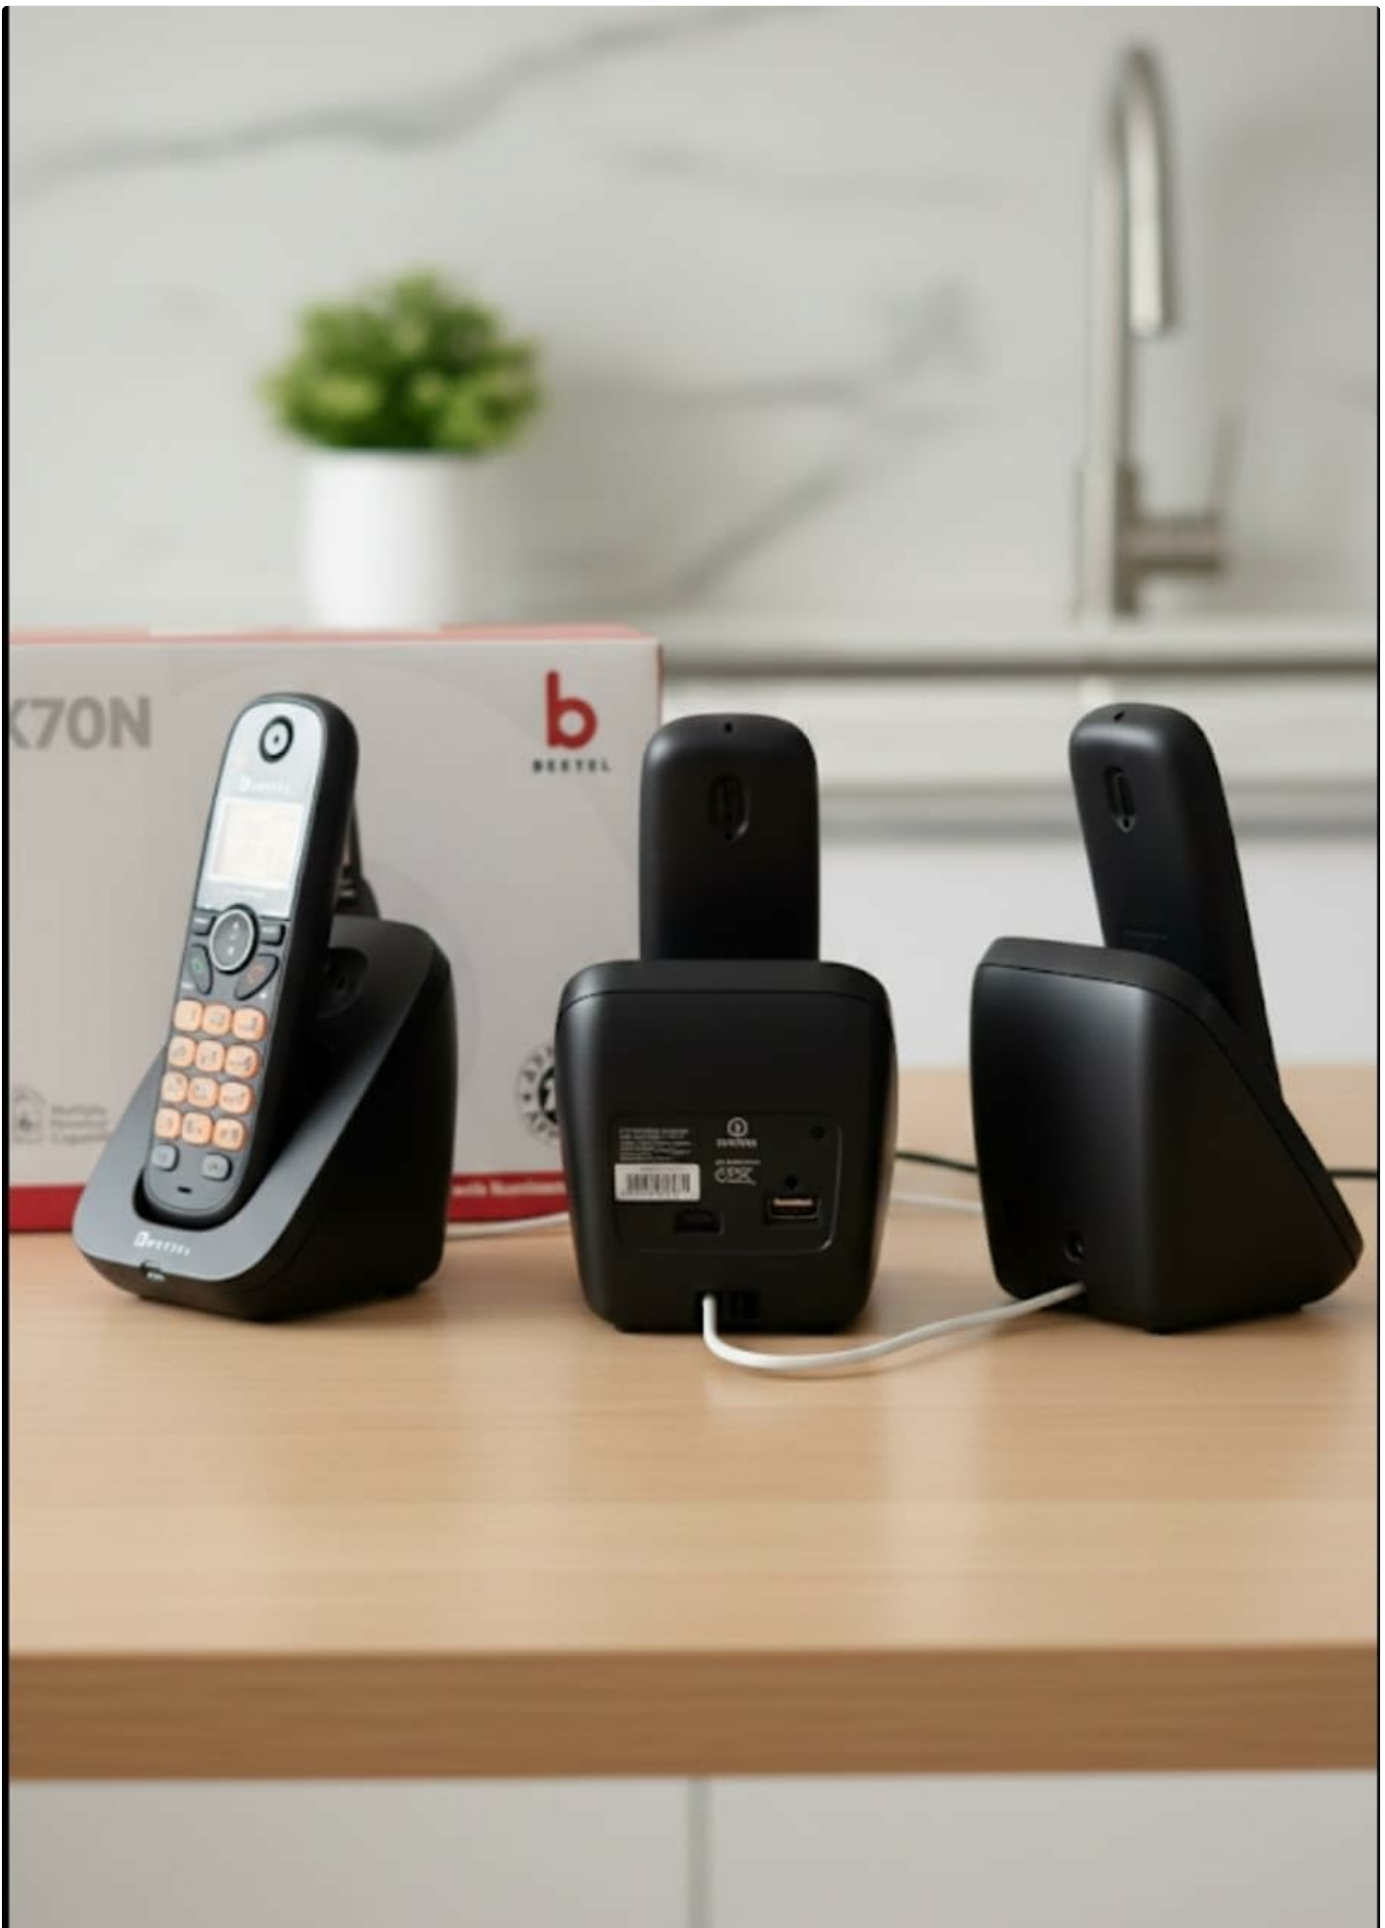


Image 2.1: Rear view of multiple Beitel X70N base units, illustrating the connection points for the power adaptor and telephone line cord.

2.3. Initial Charging

Place the handset on the base unit. The handset will begin charging. For optimal battery performance, charge the handset for at least 12-14 hours before its first use, even if the display indicates a full charge.

3. OPERATING THE PHONE

3.1. Making and Receiving Calls

- **To Make a Call:** Lift the handset from the base or press the **TALK** button. Dial the desired phone number.
- **To Receive a Call:** When the phone rings, lift the handset or press the **TALK** button.
- **To End a Call:** Place the handset back on the base unit or press the **END** button.

3.2. Using the Speakerphone

During a call, press the **SPEAKER** button to activate the hands-free speakerphone. Press it again to switch back to handset mode.

3.3. Caller ID

When an incoming call is received, the caller's number (and name, if available and stored in your phonebook) will be displayed on the LCD screen. The phone stores up to 30 recent incoming call records.



Image 3.1: Beitel X70N handset resting on its base unit, with the LCD display showing call information, including date and time.

3.4. Phonebook Functions

- **Storing Contacts:** Navigate to the phonebook menu, select "Add New," enter the name and number, then save. The phonebook can store up to 100 contacts.
- **Recalling Contacts:** Press the **PHONEBOOK** button, scroll through the entries using the navigation keys, and press **TALK** to dial.

3.5. Last Number Redial

Press the **REDIAL** button to view the last dialed numbers. Select the desired number and press **TALK** to redial.

3.6. Handset Locator (Paging)

If you misplace your handset, press the **PAGE** button on the base unit. The handset will ring, allowing you to locate it.



Image 3.2: Beetel X70N handset on its base unit, with the orange illuminated keypad clearly visible, aiding use in low-light conditions.

4. MAINTENANCE

4.1. Cleaning

- Wipe the phone's surfaces with a soft, damp cloth.
- Do not use harsh cleaning agents, abrasive cloths, or chemical solvents, as these can damage the phone's finish.
- Ensure the phone is unplugged from the power outlet before cleaning.

4.2. Battery Care

- Use only the supplied rechargeable AAA battery or an approved replacement.
- Avoid exposing the battery to extreme temperatures.
- If the phone will not be used for an extended period, remove the battery to prevent leakage.
- Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Line cord not connected properly; power adaptor not connected.	Ensure the line cord is securely plugged into the base unit and wall jack. Verify the power adaptor is connected to the base unit and a working electrical outlet.
Handset not charging	Handset not properly seated on the base; dirty charging contacts; faulty battery.	Ensure the handset is correctly placed on the base unit. Clean the charging contacts on both the handset and base with a dry cloth. Replace the battery if it is old or damaged.
Poor sound quality / Interference	Handset too far from base; interference from other electronic devices.	Move the handset closer to the base unit. Relocate the base unit away from other electronic devices (e.g., Wi-Fi routers, microwaves).
Caller ID not displaying	Caller ID service not subscribed; feature not enabled.	Contact your telephone service provider to ensure Caller ID service is active. Check phone settings to ensure Caller ID display is enabled.
Handset out of range warning	Handset is too far from the base unit.	Move the handset closer to the base unit. The effective range is typically up to 50 meters indoors and 300 meters outdoors, but can vary based on environment.

6. SPECIFICATIONS

Feature	Detail
Model Number	X70N
Telephone Type	Cordless
Technology	2.4GHz Digital
Color	Black
Display	Backlit LCD
Keypad	Illuminated

Feature	Detail
Caller ID	Yes
Phonebook Capacity	100 Contacts
Incoming Call Memory	30 Records
Speakerphone	2-way Speakerphone
Battery Type	Rechargeable AAA Battery
Phone Standby Time	Up to 72 Hours
Material	Electronic Components, Plastic
Item Dimensions (L x W x H)	20 x 12.5 x 18 Centimeters
Item Weight	450 Grams

7. WARRANTY AND SUPPORT

7.1. Warranty Information

The Beetel X70N Digital Cordless Phone comes with a **1-Year Warranty** from the date of purchase. Please retain your purchase receipt as proof of warranty.

7.2. Customer Support

For any queries, technical assistance, or warranty claims, please contact customer care:

- **Customer Care Number:** 1800-10-23456
- **Email:** Customer.care@beetel.in
- **Manufacturer:** Dixon Electro Appliances Pvt. Ltd.
- **Address:** Plot No. 1-4, Rural Ind. Complex, Village Hambran, Distt. Ludhiana - 141110 (Punjab)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question