

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› **SUNCROWN** /

› **SUNCROWN 7-Piece Outdoor Patio Furniture Sofa Set Instruction Manual**

SUNCROWN B0G3P7WNRS

SUNCROWN 7-Piece Outdoor Patio Furniture Sofa Set

Model: B0G3P7WNRS

Instruction Manual

1. INTRODUCTION

Thank you for choosing the SUNCROWN 7-Piece Outdoor Patio Furniture Sofa Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before assembly and retain them for future reference.



Image 1.1: The SUNCROWN 7-Piece Outdoor Patio Furniture Sofa Set, showcasing its modular design and dark grey cushions.

2. SAFETY INFORMATION

Adhering to these safety guidelines is crucial for preventing injury and damage to the furniture.

- Always assemble the furniture according to the provided instructions.
- Do not exceed the weight limit of **250 lbs (113 kg) per seat**
- Keep cushions dry and store them indoors when not in use to prevent damage or mold growth.
- Always supervise children around the furniture to prevent injuries from sharp edges or tip-overs.
- Ensure all connections are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- Avoid placing hot items directly on the tempered glass table surface without protective coasters.

3. PACKAGE CONTENTS

Your SUNCROWN 7-Piece Outdoor Patio Furniture Sofa Set includes the following components:

- 2 x Corner Sofas
- 4 x Middle Sofas
- 1 x Glass Coffee Table
- Associated cushions for all seating units
- Assembly hardware and tools

The set ships in multiple boxes. Please ensure all boxes are received before beginning assembly.

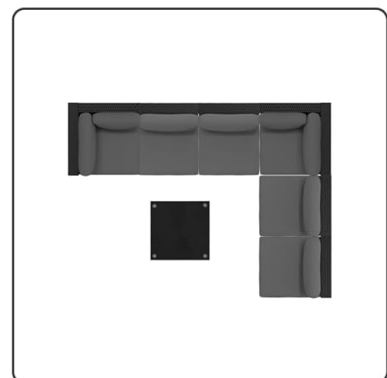 
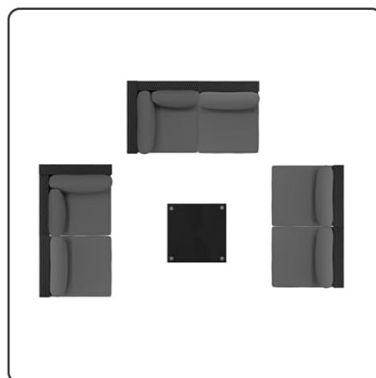 
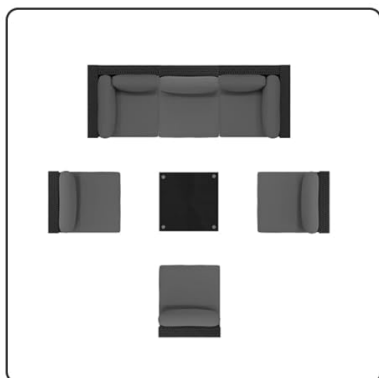 


Image 3.1: Diagram showing the individual components (corner sofa, middle sofa, coffee table) and their approximate dimensions.

4. ASSEMBLY INSTRUCTIONS

Estimated assembly time: 60-90 minutes. Two people are recommended for assembly.

4.1 Before You Begin

- Unpack all components and lay them out on a soft, clean surface to prevent scratches.


- Verify that all parts and hardware are present according to the packing list.
- Do not fully tighten screws until all components are loosely assembled.

4.2 Assembly Steps

1. **Assemble Sofa Frames:** Attach the backrests and armrests to the seat bases using the provided screws and tools. Ensure the hand-woven rattan surfaces are facing outwards.
2. **Attach Adjustable Feet:** Screw the adjustable foot pads onto the bottom of each sofa unit and the coffee table. These can be adjusted to ensure stability on uneven ground.
3. **Assemble Coffee Table:** Secure the legs to the coffee table frame. Carefully place the tempered glass top onto the table frame, ensuring it is centered and secured by any anti-slip suckers if provided.
4. **Arrange Units:** Position the corner sofas and middle sofas in your desired configuration. Use the provided clips to secure the sofa units together, preventing them from shifting.
5. **Place Cushions:** Place the soft sponge cushions onto the sofa units. The cushion covers are removable and zippered for easy maintenance.



DETAIL QUALIT

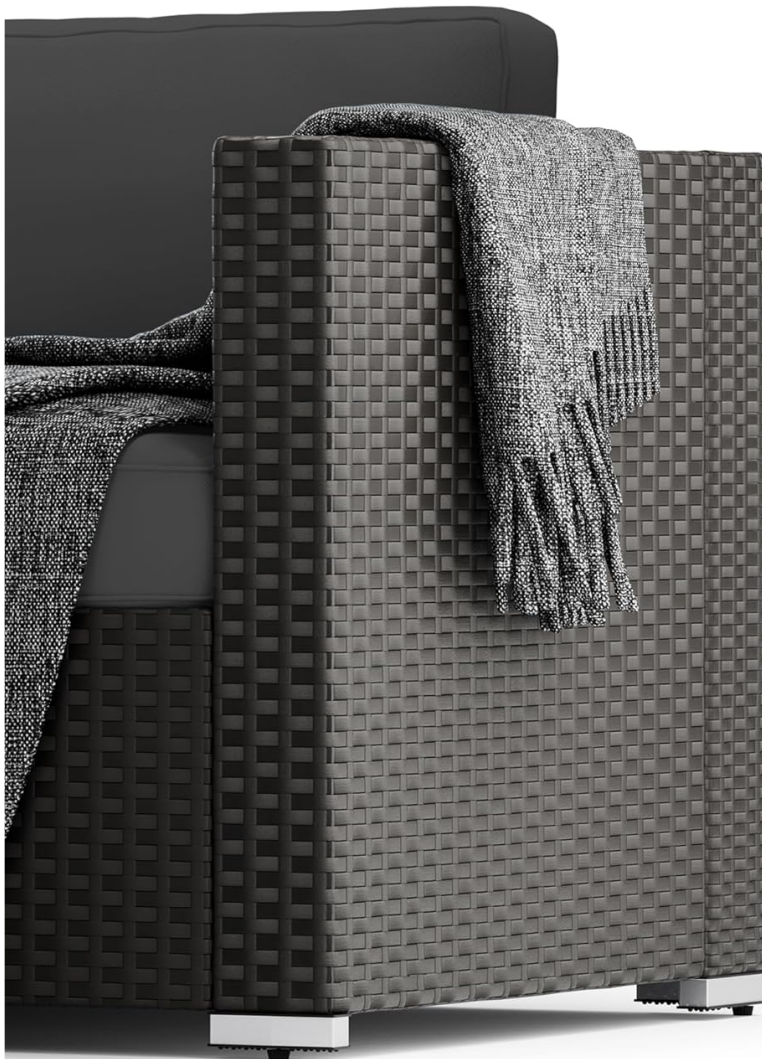


Hand-woven Rattan



Soft Sponge Cushion



 Removable Sofa Covers

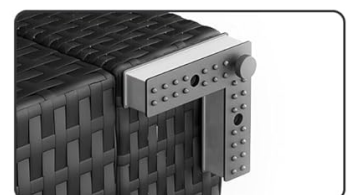

Adjustable Sofa Foot

Image 4.1: Detail showing the hand-woven rattan, soft sponge cushion, removable sofa covers, and adjustable sofa foot.



Image 4.2: Detail highlighting the sturdy frame, tempered glass, and anti-slip suckers of the coffee table.

5. OPERATING INSTRUCTIONS

5.1 Configuration

The modular design allows for versatile arrangements to suit various outdoor spaces. You can reconfigure the corner and middle sofas as needed.



Image 5.1: Example of the furniture set arranged in an L-shape, suitable for a patio.



Image 5.2: Example of the furniture set arranged linearly, ideal for a lakeside view.

5.2 Cushion Use

The 3.5-inch thick padded cushions provide comfort. While the cushion covers are UV-protected and waterproof (not rain-proof), it is recommended to bring them indoors during heavy rain or prolonged periods of non-use to extend their lifespan.

6. MAINTENANCE

6.1 Cleaning the Wicker and Frame

- Wipe down the black resin wicker and powder-coated steel frame with a soft cloth dampened with mild soap and water.
- Rinse thoroughly with clean water and dry completely to prevent water spots or residue buildup.
- Avoid using harsh chemicals, abrasive cleaners, or stiff brushes, as these can damage the finish.

6.2 Cleaning Cushions

- The cushion covers are machine washable. Remove the covers using the zippers and wash them in cold

water on a gentle cycle with mild detergent.

- Air dry the covers completely before reattaching them to the cushions. Do not tumble dry.
- For spot cleaning, use a soft cloth with mild soap and water, then rinse and air dry.

6.3 Glass Table Top Care

- Clean the tempered glass top with a glass cleaner and a soft, lint-free cloth.
- Avoid dragging rough or heavy objects across the glass surface to prevent scratches.

6.4 Storage

During off-seasons or extended periods of non-use, it is recommended to store the furniture in a dry, covered area. If outdoor storage is necessary, use a waterproof furniture cover to protect it from the elements.

7. TROUBLESHOOTING

7.1 Furniture Wobbles

If the furniture feels unstable or wobbles, adjust the foot pads located at the bottom of each unit. Turn them clockwise or counter-clockwise until the unit is stable on the ground.

7.2 Difficulty Assembling

Ensure all parts are correctly oriented as shown in the assembly diagrams. Do not overtighten screws until all components are in place. If a part seems difficult to fit, double-check the instructions and part numbers. Contact customer support if you believe a part is defective or missing.

7.3 Cushions Appear Flat

The cushions are filled with high-density cotton. Over time, they may compress. Fluffing them regularly can help maintain their shape and comfort. Ensure they are completely dry after cleaning to prevent mildew, which can affect their structure.

8. SPECIFICATIONS

Feature	Detail
Set Name	7-Piece Outdoor Patio Furniture Sofa Set
Model Number	B0G3P7WNRS
Brand	SUNCROWN
Material	Resin Wicker, Steel, Fabric
Color	Dark Grey & Black Wicker
Sofa Dimensions (Overall)	107"D x 53.5"W x 25.1"H (approximate, configurable)
Weight Capacity (per seat)	250 Lbs (113 kg)
Item Weight	163.4 pounds (total)
Assembly Required	Yes (Estimated 60-90 minutes)

9. PRODUCT VIDEOS

9.1 SUNCROWN Sectional Conversation Set Overview

Your browser does not support the video tag.

Video 9.1: A short video showcasing the SUNCROWN Sectional Conversation Set in an outdoor setting, highlighting its aesthetic appeal and modularity. This video is 6 seconds long.

9.2 SUNCROWN 7-Piece Outdoor Sofa Set with Fire Pit Table (Example Configuration)

Your browser does not support the video tag.

Video 9.2: A brief video demonstrating a possible arrangement of the SUNCROWN 7-Piece Outdoor Sofa Set, including a fire pit table (note: fire pit table is not included in this specific 7-piece model but shown for configuration ideas). This video is 6 seconds long.

10. WARRANTY AND SUPPORT

For warranty information or assistance with your SUNCROWN product, please refer to the documentation included in your package or contact SUNCROWN customer support directly. Keep your purchase receipt for warranty claims.

For further inquiries or support, please visit the official SUNCROWN website or contact their customer service department.