

[Manuals.plus](#) /

› [LEDIARY](#) /

› LEDIARY 23 Inch Caged Ceiling Fan with Light and Remote Instruction Manual

LEDIARY B0G3PNH18S

LEDIARY 23 Inch Caged Ceiling Fan with Light and Remote Instruction Manual

Model: B0G3PNH18S

PRODUCT OVERVIEW

The LEDIARY 23 Inch Caged Ceiling Fan with Light and Remote is designed for flush mount installation, offering both illumination and air circulation. This model features a bladeless, enclosed design for safety and a rustic farmhouse aesthetic.

- **Brand:** LEDIARY
- **Model:** B0G3PNH18S
- **Dimensions:** 23"L x 23"W x 10"H
- **Weight:** 8.8 Pounds
- **Material:** Metal
- **Control Method:** Remote Control
- **Bulb Base:** E26 x 4 (Bulbs not included)
- **Max Bulb Wattage:** 60W Incandescent, 10W LED
- **Power Source:** AC
- **Mounting Type:** Flush Mount



Image: The LEDIARY 23 Inch Caged Ceiling Fan with Light and Remote, showcasing its black finish and enclosed design.

SAFETY INFORMATION

Before installation or operation, please read and understand all safety instructions. Failure to do so may result in electric shock, fire, or personal injury.

- Always turn off power at the circuit breaker before beginning installation or performing any maintenance.
- Ensure all electrical connections comply with local codes and ordinances. If you are unsure, consult a qualified electrician.
- Do not install this fan in a location where the blades could come into contact with people or objects.
- Use only compatible bulbs as specified to prevent overheating.
- This product is not fully waterproof; avoid direct exposure to water.

SETUP AND INSTALLATION

This ceiling fan is designed for DIY installation. While tools are not included, all necessary screws are pre-sorted for

clarity. It is recommended to have all parts checked before starting.

Required Tools (Not Included):

- Screwdriver
- Wire strippers
- Electrical tape
- Ladder

Installation Steps:

1. **Prepare for Installation:** Turn off the electricity at the main circuit breaker.
2. **Assemble the Cage:** The fan cage requires manual screw assembly. Align the screw holes on the brackets carefully. Assistance from another person may be helpful for easier alignment.
3. **Mount the Bracket:** Remove any existing light fixture. Secure the new mounting bracket to the ceiling junction box.
4. **Hang the Fan:** Utilize the included security strap (wire with a carabiner hook). Hook the carabiner over the ceiling bracket to suspend the fan, allowing for hands-free electrical connections.
5. **Make Electrical Connections:** Connect the fan's wires to the household wiring (typically black to black, white to white, and ground to ground). Ensure all connections are secure.
6. **Secure the Fan:** Once wiring is complete, carefully secure the fan to the mounting bracket.
7. **Install Bulbs:** Insert compatible E26 base bulbs (T14, A19, ST19, B11, G14) with a maximum of 10W LED to avoid protrusion and overheating due to the low-profile design.
8. **Restore Power:** Turn the electricity back on at the circuit breaker.



Image: Detailed view of the fan's dimensions (23" diameter, 6.5" height) and close-ups of the cage, E26 bulb base, and fan blades, illustrating key components for assembly.



Dimension

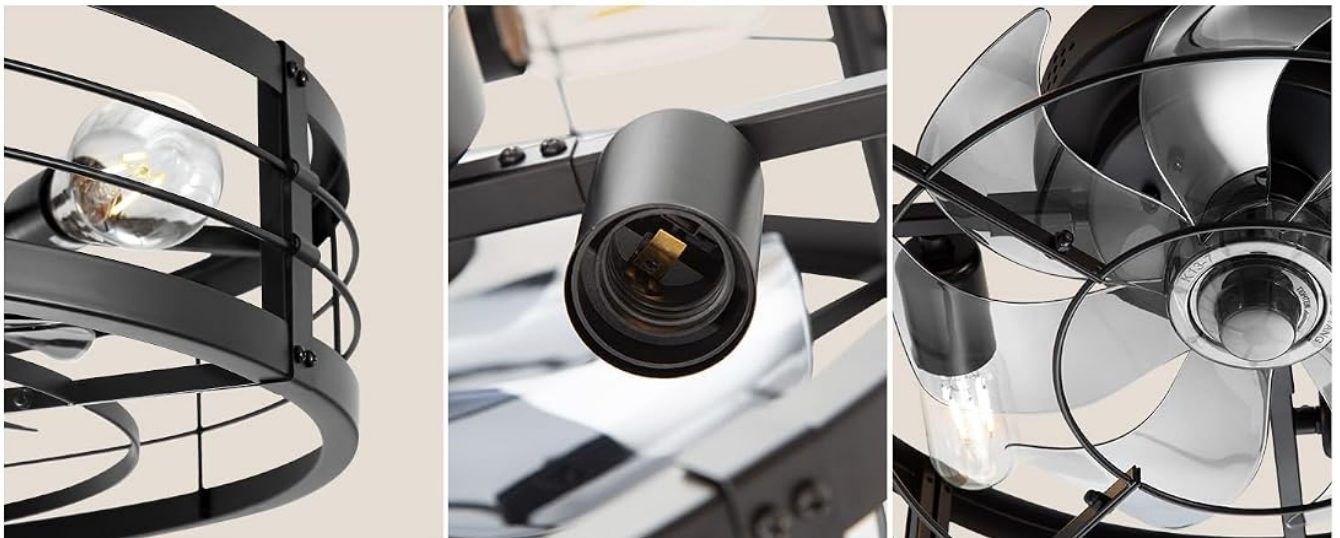


Image: Information on the E26*4 bulb base, specifying maximum wattage for incandescent (60W) and LED (10W) bulbs, and highlighting the 730-day warranty.

OPERATING INSTRUCTIONS

The fan and light functions are controlled via the included remote control. Ensure the fan is connected to a standard

single-pole wall switch.

Remote Control Functions:

- **Power On/Off:** Turns the fan and light on or off.
- **Fan Speed:** Adjusts fan speed (6 levels available).
- **Light On/Off:** Controls the light independently.
- **Timer:** Sets the fan to turn off automatically after 1, 4, or 8 hours.
- **Summer/Winter Mode:** Reverses the fan direction for optimal air circulation in different seasons. In summer, the fan rotates counter-clockwise to create a downdraft. In winter, it rotates clockwise to create an updraft, circulating warm air.
- **Mute Beep:** Silences the audible beep that may occur when operating the fan or light.



23" Caged Ceiling Fan

Light up your daily life



E26*4 Bulb Base

Incandescent Bulb:
Max 60W
LED Bulb:Max 10W
(**Bulb not included**)



730
DAYS

WARRANTY

Image: Overview of the fan's multifunctional capabilities, including remote control (with mute function), 1/4/8 hour timing, 6 wind speeds, and a quality motor.



Multifunctional Ceiling Fan

Meeting your needs



Remote Control
(No Beep)



1/4/8h.Timing



6 Wind Speed



Quality Motor

Image: Illustration of the fan's reversible motor function, showing forward wind for cooling in summer and reverse wind for heat circulation in winter.

Quiet Operation:

The fan is engineered for quiet operation, producing approximately 30dB of noise, comparable to a quiet library environment.

Powerful and Quality Motor

Suitable for all seasons



Image: Graphic illustrating the fan's quiet operation at approximately 30dB, allowing for undisturbed sleep.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Dust the fan and light fixture periodically with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** To replace bulbs, ensure power is off at the circuit breaker. Due to the enclosed design, accessing the bulb sockets may be tight. Use small-profile E26 bulbs (T14, A19, ST19, B11, G14) with a maximum of 10W LED.
- **Tighten Fasteners:** Periodically check and tighten all screws and fasteners to ensure the fan remains securely mounted.

TROUBLESHOOTING

If you encounter issues with your LEDIARY ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power; Loose wiring; Remote not paired or faulty	Check circuit breaker; Verify all wire connections; Re-pair remote control (refer to remote instructions) or replace remote batteries.
Light does not turn on	Bulb faulty or loose; No power; Loose wiring	Replace bulbs; Check circuit breaker; Verify light fixture wiring.
Fan makes excessive noise	Loose screws; Unbalanced fan blades	Ensure all mounting screws are tight; Check for any obstructions; Contact customer support if noise persists.
Remote control not working	Dead batteries; Not paired correctly; Obstruction	Replace remote batteries; Re-pair remote control; Ensure no objects are blocking the signal path.

If troubleshooting steps do not resolve the issue, please contact LEDIARY customer support.

SPECIFICATIONS

Feature	Detail
Brand	LEDIARY
Model Number	B0G3PNH18S
Color	Black
Material	Metal
Style	Farmhouse
Room Type	Bedroom, Kitchen, Dining Room, Covered Outdoor Areas
Indoor/Outdoor Usage	Indoor, Covered Outdoor
Power Source	AC
Control Method	Remote
Light Source	LED (Bulbs not included)
Bulb Base	E26 (4 sockets)

Feature	Detail
Max Wattage	60W (Incandescent), 10W (LED)
Mounting Type	Flush Mount
Item Dimensions (L x W x H)	23" x 23" x 10"
Item Weight	8.8 Pounds
Included Components	Remote Control
Required Assembly	Yes
Noise Level	Approx. 30dB

WARRANTY AND SUPPORT

LEDIARY provides a **2-year manufacturer's warranty** for this product, covering defects in materials and workmanship from the date of purchase.

For any questions regarding installation, operation, remote pairing, or other product-related inquiries, please contact LEDIARY customer service. Our US-based support team is available 24/7 and aims to respond within 24 hours.

Please retain your proof of purchase for warranty claims.

© 2026 LEDIARY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G3PNH18S>

More documents and user manuals: <https://manuals.plus/>