

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LETSUNG](#) /

› [LETSUNG Golite11 Mini PC Celeron N4000 User Manual](#)

## LETSUNG Golite11

# LETSUNG Golite11 Mini PC User Manual

Model: Golite11

## 1. INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your LETSUNG Golite11 Mini PC. The Golite11 is a compact desktop computer designed for various tasks, from web browsing and office applications to light gaming and multimedia playback. It features an Intel Celeron N4000 processor, 6GB LPDDR4 RAM, and a 128GB M.2 SSD, offering efficient performance in a small form factor.

# Intel Celeron N4000



**2.6GHz**

Max Turbo Frequency

**GPU**

Intel UHD Graphics 600

**4MB**

Smart Cache

Image 1.1: LETSUNG Golite11 Mini PC, front view.

## 2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- 1 x Golite 11 Mini PC
- 1 x HDMI Cable
- 1 x VESA Mount
- 1 x Power Adapter
- 1 x User Guide

## 3. PRODUCT OVERVIEW

### 3.1. Processor and Memory

The Golite11 Mini PC is equipped with an Intel Celeron N4000 processor, providing efficient performance for daily


computing tasks. It includes 6GB of LPDDR4 RAM for smooth multitasking.



## LETSUNG GoLite 11 Mini Pc

- Intel Celeron N4000
- Intel UHD Graphics 600
- Dual screen display
- Smart cooling fan

Image 3.1: Intel Celeron N4000 Processor.

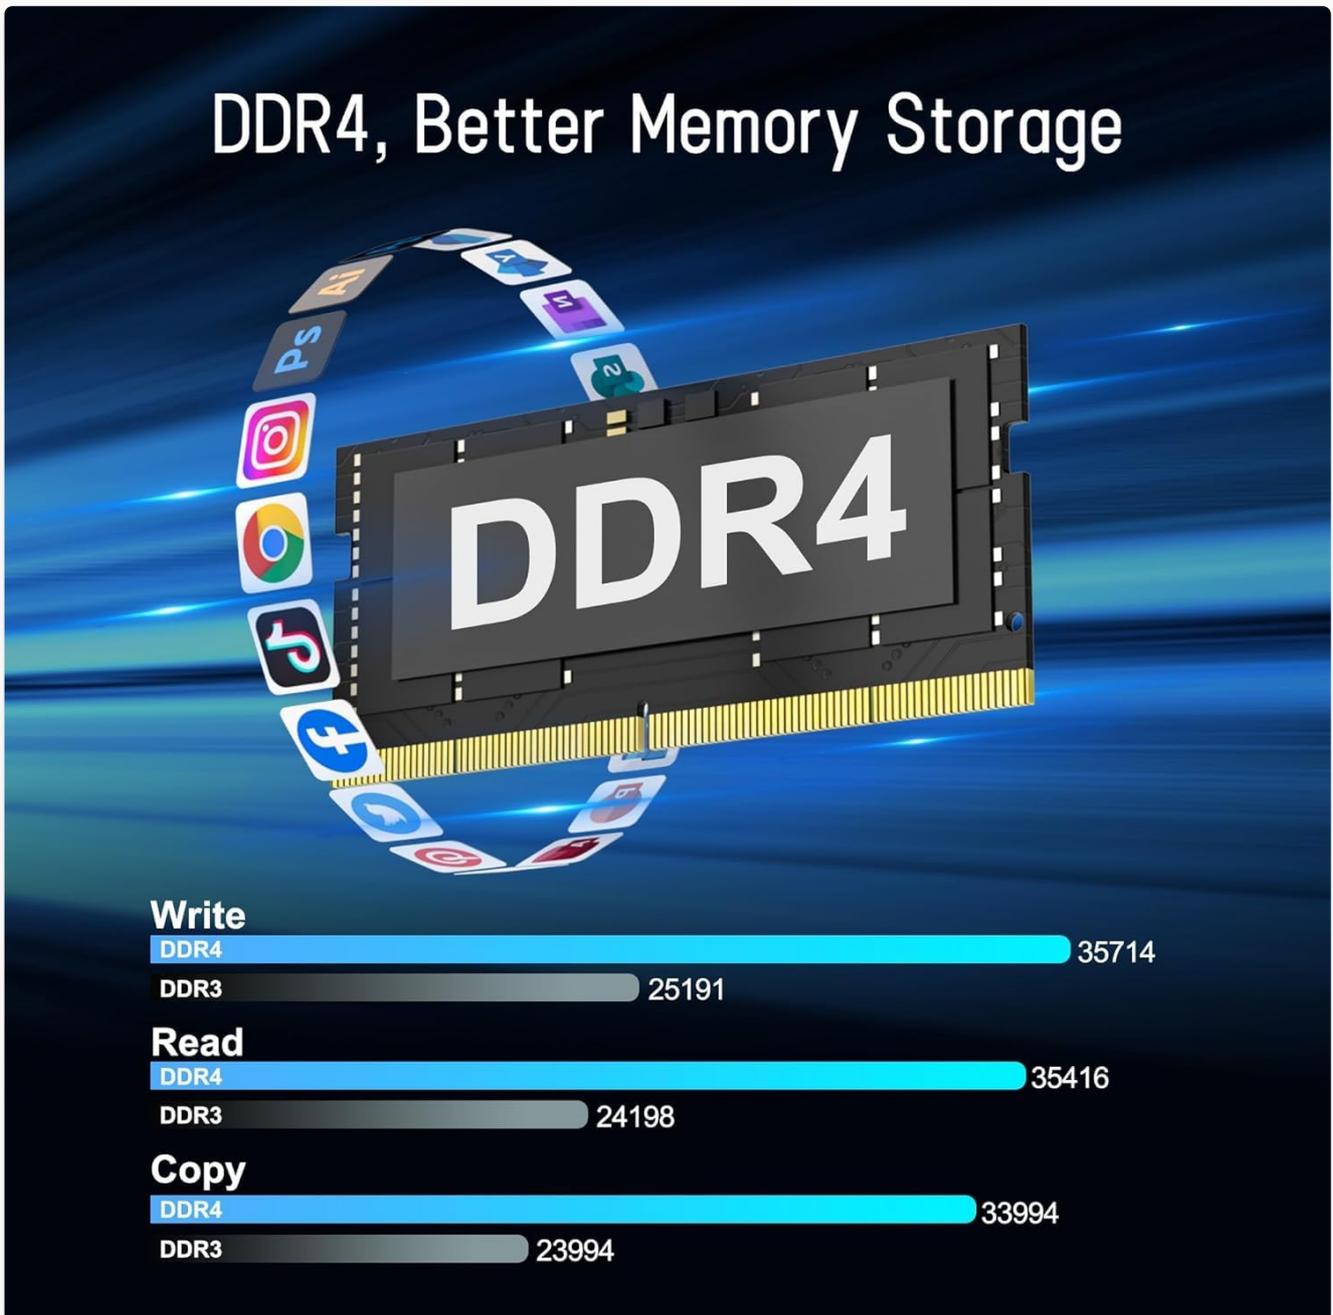

## DDR4, Better Memory Storage

Operation	Memory Type	Value
Write	DDR4	35714
	DDR3	25191
Read	DDR4	35416
	DDR3	24198
Copy	DDR4	33994
	DDR3	23994

Image 3.2: DDR4 Memory Module.

### 3.2. Storage

The device comes with a 128GB M.2 SATA SSD, offering fast boot times and data access. Storage can be expanded up to 512GB.

# 128GB M.2 2280 SATA SSD up to 512GB



M.2 2280  
**SATA SSD**

128GB

-  System Startup Speed
-  Response Speed
-  Program Loading Speed
-  File Transfer Speed
-  Multitasking

#### Read Speed

PCIe SSD	3300MB/s
Standard SATA HDD	500MB/s

#### Write Speed

PCIe SSD	2700MB/s
Standard SATA HDD	440MB/s

#### Open a 1.5 GB file in Photoshop

PCIe SSD	5s
Standard SATA HDD	20s

Image 3.3: M.2 SATA SSD.

### 3.3. Ports and Connectors

The Golite11 Mini PC features a variety of ports for connectivity:

- **Power Button:** To turn the device on or off.
- **3.5mm Headphone Jack:** For audio output.
- **USB 3.2 Gen 1 Ports:** Multiple ports for connecting peripherals.
- **RJ45 LAN Port:** For wired network connection.
- **HDMI 1.4 Ports:** Two ports for connecting displays.
- **DC Jack:** For power input.

# Multiple Ports

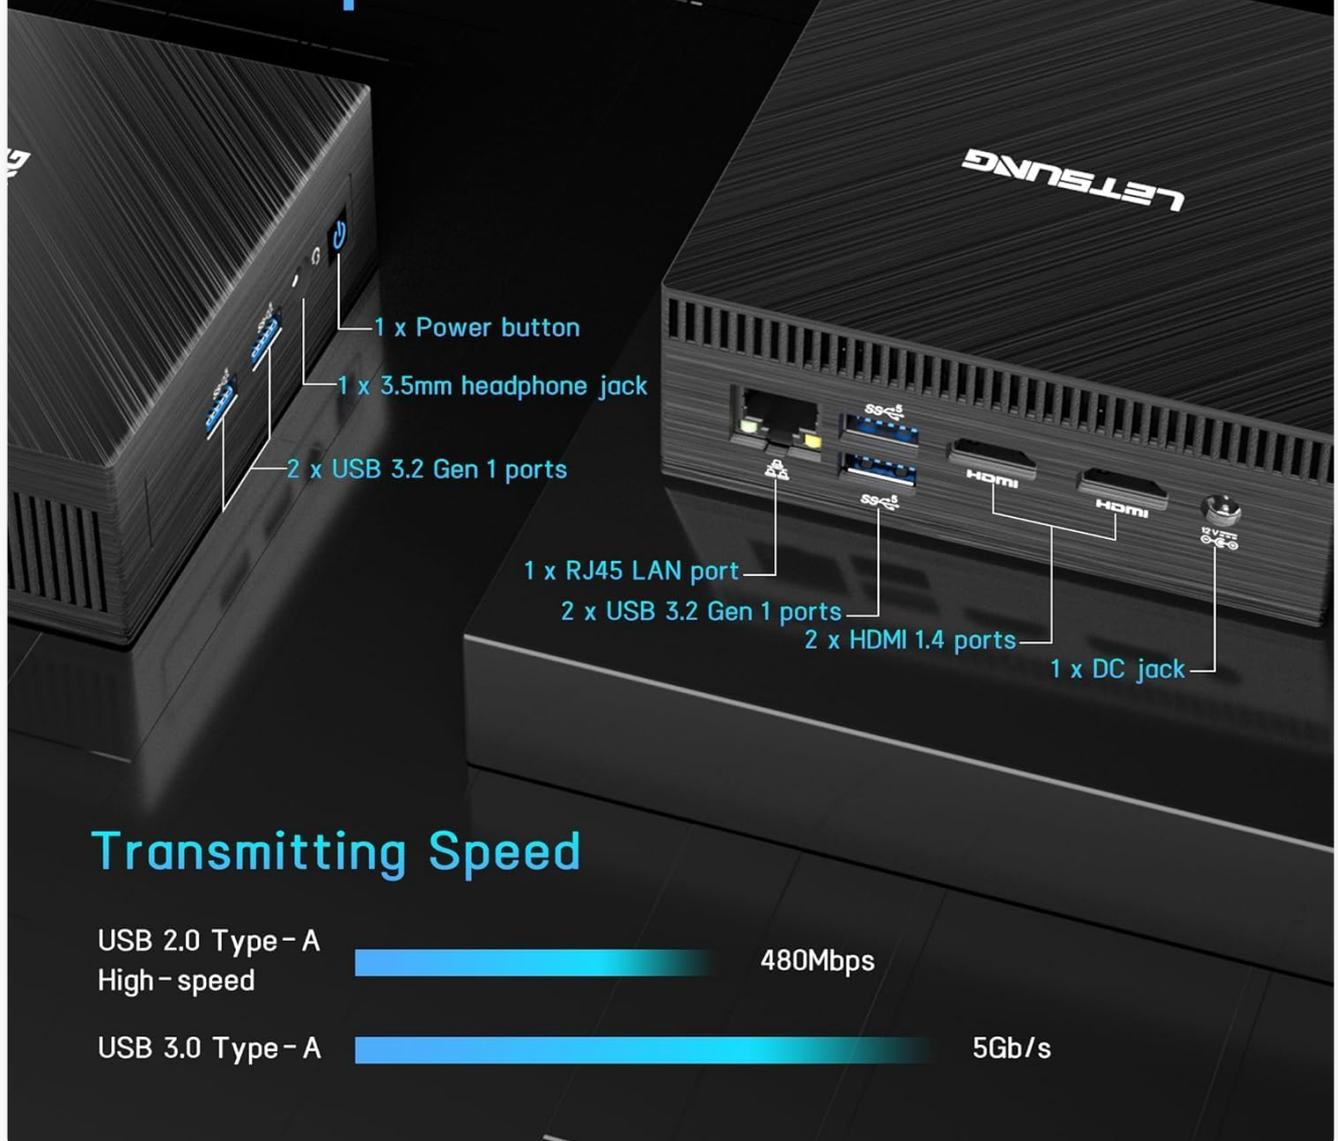


Image 3.4: Detailed view of ports and connectors.

## 4. SETUP

Follow these steps to set up your LETSUNG Golite11 Mini PC:

1. **Connect to a Display:** Use the provided HDMI cable to connect the Mini PC to a monitor or TV. The device supports dual displays.
2. **Connect Peripherals:** Plug in your USB keyboard and mouse into the available USB ports.
3. **Connect Power:** Connect the power adapter to the DC jack on the Mini PC, then plug the adapter into a power outlet.
4. **Power On:** Press the power button located on the device. The system will boot up.
5. **Initial Windows Setup:** Follow the on-screen instructions to complete the initial Windows operating system setup, including language, region, and network configuration.

## 5. OPERATING INSTRUCTIONS

## 5.1. Basic Operation

Once the initial setup is complete, your Mini PC is ready for use. Navigate the operating system using your connected keyboard and mouse. You can install applications, browse the internet, and perform other computing tasks.

## 5.2. Dual Display Setup

The Golite11 supports connecting two displays simultaneously for an extended desktop experience. Connect a second monitor using the additional HDMI port. The operating system should automatically detect the second display. You can configure display settings (e.g., extend, duplicate) through the display settings in your operating system.



Image 5.1: Dual display setup with the Mini PC.

## 5.3. Network Connectivity

- **Wi-Fi:** The Mini PC supports WiFi 5.0. To connect to a wireless network, go to your operating system's network settings, select your desired Wi-Fi network, and enter the password.

- **Ethernet:** For a wired connection, connect an Ethernet cable from your router or modem to the RJ45 LAN port on the Mini PC.

## 5.4. Bluetooth Devices

The Mini PC supports Bluetooth 4.2. To pair Bluetooth devices (e.g., headphones, speakers), enable Bluetooth in your operating system's settings, search for devices, and follow the pairing instructions.

## 6. MAINTENANCE

### 6.1. Cleaning

To maintain optimal performance, keep the Mini PC clean. Use a soft, dry cloth to wipe the exterior. For dust accumulation in vents, use compressed air. Ensure the device is powered off and unplugged before cleaning.



Image 6.1: Internal cooling system for efficient heat dissipation.

### 6.2. Software Updates

Regularly update your operating system and drivers to ensure security, stability, and optimal performance. Check for updates through your operating system's settings.

### 6.3. Storage Expansion

The internal M.2 SATA SSD can be upgraded up to 512GB. Refer to the detailed instructions for internal component access if you plan to upgrade the storage. It is recommended to seek professional assistance for hardware upgrades.

## 7. TROUBLESHOOTING

If you encounter issues with your Mini PC, refer to the following common problems and solutions:

- **No Power:**
  - Ensure the power adapter is securely connected to both the Mini PC and a working power outlet.
  - Verify the power outlet is functional by plugging in another device.
- **No Display:**
  - Check that the HDMI cable is firmly connected to both the Mini PC and the monitor.
  - Ensure the monitor is powered on and set to the correct input source (HDMI).
  - Try a different HDMI cable or monitor if possible.
- **Slow Performance:**
  - Close unnecessary applications running in the background.
  - Check for and install any available operating system updates.
  - Ensure there is sufficient free space on the SSD.
- **Network Connectivity Issues:**
  - For Wi-Fi, ensure the correct password is entered and the signal strength is adequate.
  - For Ethernet, check the cable connection and ensure your router/modem is working correctly.
  - Restart your router/modem and the Mini PC.

## 8. SPECIFICATIONS

Feature	Specification
Model	Golite11
Processor	Intel Celeron N4000 (2 Cores, 2 Threads, up to 2.8 GHz)
Graphics	Intel UHD Graphics 600
RAM	6GB LPDDR4
Internal Storage	128GB M.2 SATA SSD (Expandable up to 512GB)
Operating System	Pre-installed (e.g., Windows 11, specific version may vary)
Video Output	2 x HDMI 1.4 (Supports 1920x1080 @60Hz, Dual Display)

Feature	Specification
USB Ports	4 x USB 3.2 Gen 1
Network	WiFi 5.0, Bluetooth 4.2, 1 x RJ45 LAN Port
Audio	1 x 3.5mm Headphone Jack
Dimensions	Approx. 4.52in x 4.42in x 1.61in
Weight	Approx. 0.6lb
Cooling System	Built-in ultra-low power cooling fan

## 9. WARRANTY AND SUPPORT

LETSUNG products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official LETSUNG website. For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact LETSUNG customer support through the contact information provided on the official website or your purchase platform.

Please retain your proof of purchase for warranty claims.